


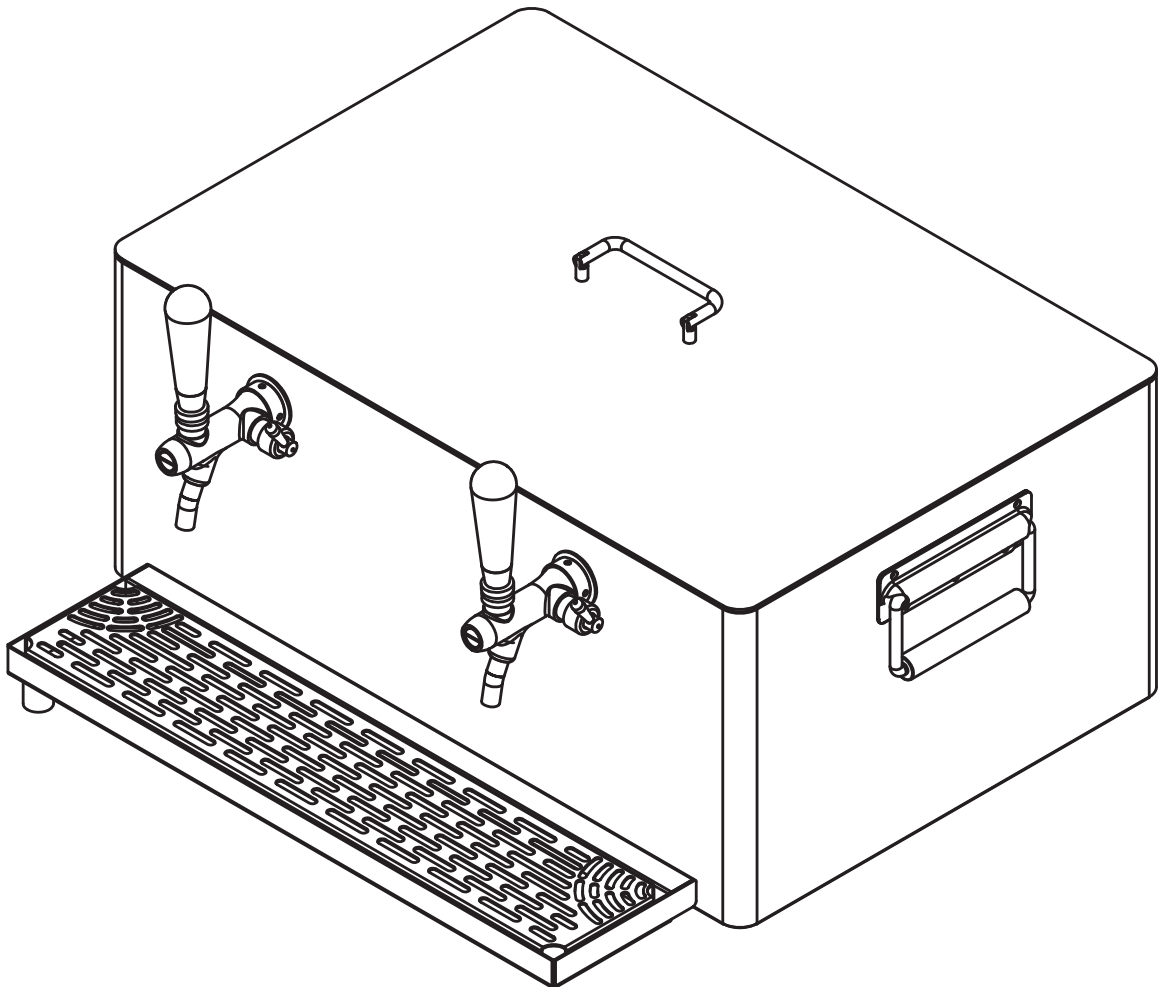

## JOCKEY BOX SETUP GUIDE




### **Table of Contents:**

- Parts List
- Set Up Guide

## BEFORE YOU BEGIN THE INSTALLATION


- **Read all the instructions before installing.**
- **Remove all packing materials before you start.**
- **This installation requires basic mechanical skills.**
- **Proper installation is the responsibility of the installer.**
- **Product failure due to improper installation is not covered under the warranty.**
- **Keep this instruction manual.**

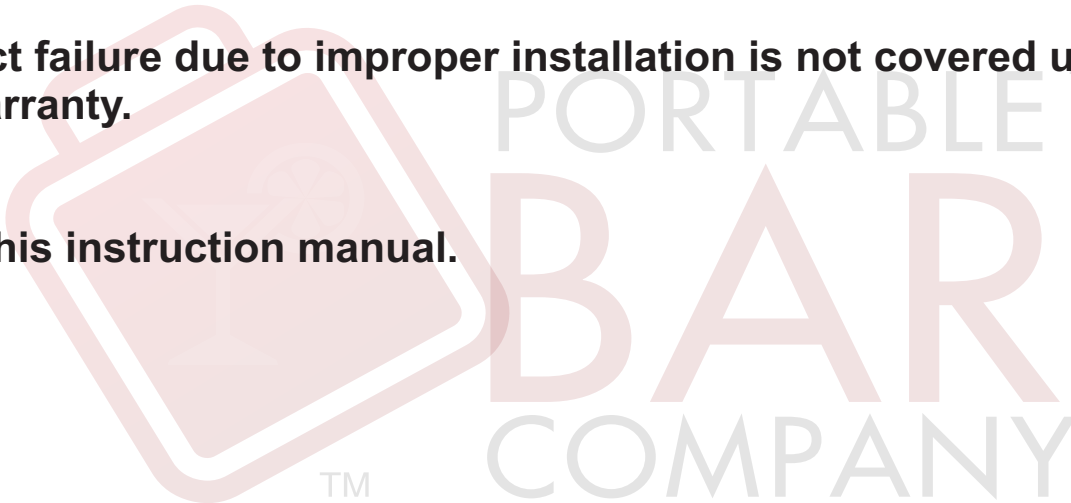


*Note: You may need the assistance of one or more persons when setting up this product.*

# JOCKEY BOX PARTS LIST


Drip Tray  
QTY. 1

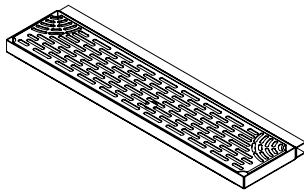


Housing  
QTY. 1

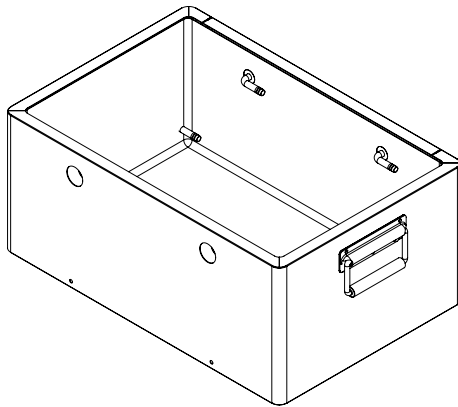


Lid  
QTY. 1

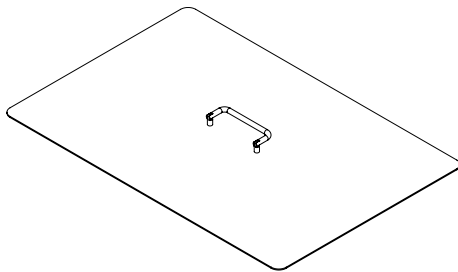

Faucet / Tap Assembly  
QTY. 2

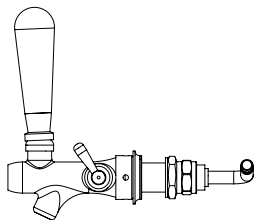

120' Stainless Steel Coil  
QTY. 2

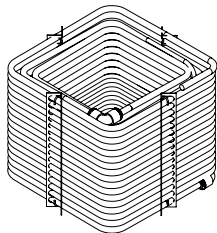

Stainless Steel Hex Nut  
QTY. 2



5/16" Drainhose  
QTY. 1



22" x 5/16" Vinyl Beer Line  
QTY. 1



12" x 5/16" Vinyl Beer Line  
QTY. 1



12" x 1/4" Vinyl Beer Line  
QTY. 1



22" x 1/4" Vinyl Beer Line  
QTY. 1



5 ft. Jumper Lines- 5/16" line  
with hardware  
QTY. 2



Stainless Steel Hose Clamp  
QTY. 13



Neoprene Washer  
QTY. 2



Stainless Steel 5/16" Tailpiece  
QTY. 2



# JOCKEY BOX PARTS LIST

## (ADDITIONAL ITEMS)

CO2 Tank  
QTY. 1



Regulator  
QTY. 1



Coupler  
QTY. 2



Air-line with Plastic  
Hose Clamps  
QTY. 2



Faucet Wrench  
QTY. 1



## (CLEANING KIT ITEMS: Optional)

CO2 Tank  
QTY. 1



0.5 Oz Cleaner  
QTY. 1



32 Oz Cleaner  
QTY. 1



*Note: These items are covered in an additional Cleaning Guide.*

# JOCKEY BOX PARTS LIST

(ADDITIONAL TOOLS MAY BE REQUIRED: Not Included)

Adjustable Crescent Wrench  
QTY. 1




Flathead Screwdriver  
QTY. 1



# JOCKEY BOX ASSEMBLY

**STEP 1:** On the back of the Housing, Fasten 5/16" Drain Hose to drain faucet using a flat-head screwdriver and a Stainless Steel Hose Clamp. ***Do not overtighten***

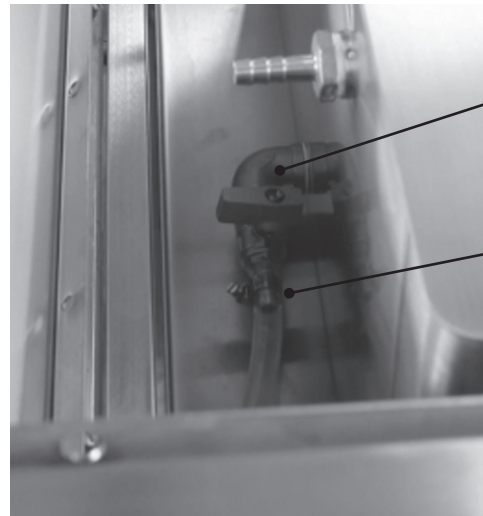

**STEP 2:** On the back of the Housing, fasten 5/16" Vinyl Beer Line to the 5/16" Stainless Steel Tailpiece. ***Do not overtighten.***

*Repeat Step 3 for opposite side.*



# JOCKEY BOX ASSEMBLY


**STEP 3:** Fasten 5/16" Jumper Line with Hardware To the threaded bottom of the Coupler. Make sure Neoprene Washer is firmly Seated within the Stainless Steel Hex Nut before attaching.

Tighten with Adjustable Crescent Wrench.



**STEP 4:** Attach gas line to the corresponding Tailpiece of the Regulator with the provided Plastic Hose Clamp. **Do not overtighten.**

*Repeat if necessary.*

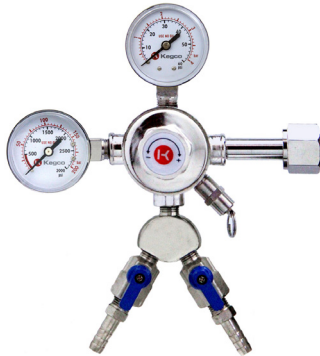



# JOCKEY BOX ASSEMBLY


**STEP 5:** Attach Regulator to CO2 Tank. Make sure Neoprene Washer is seated firmly within Stainless Steel Hex Nut before attaching.

Tighten with Adjustable Crescent Wrench.



**STEP 6:** Attach gas line to the corresponding Tailpiece on the Keg Coupler.

Fasten with Plastic Hose Clamp.

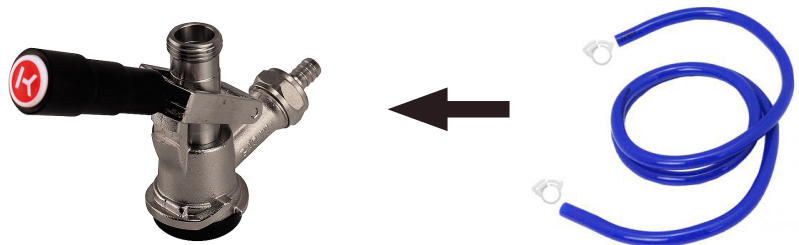



# JOCKEY BOX ASSEMBLY


**STEP 7:** Attach Coupler to Keg by placing the Coupler into the top threads and turning clockwise.

Pull Coupler Handle out and down until engaged.



**STEP 8:** Turn on CO2 tank by opening the Top Valve, and ensure the gas lines are in the open position.

Top Valve

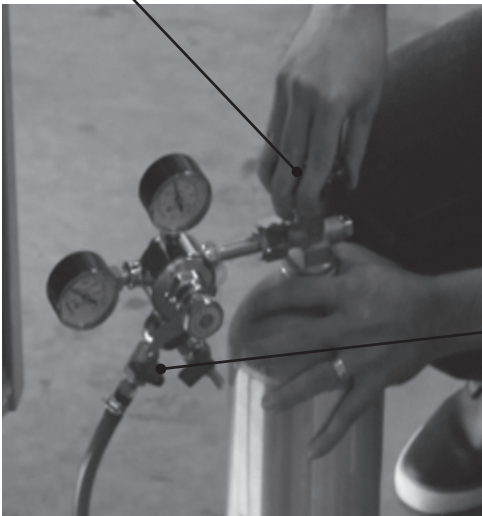


Gas Lines

# JOCKEY BOX ASSEMBLY

**STEP 9:** Adjust to approximately 30 PSI. This pressure may vary.

*Note:* **DO NOT EXCEED** 45 PSI. PSI needs will vary depending on temperature of keg.

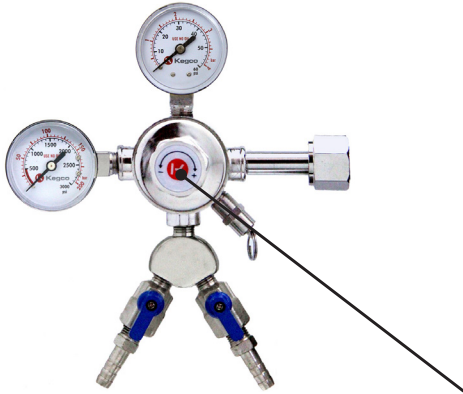

Turn Here to adjust PSI


**STEP 10:** Remove Lid and Add approximately 35 pounds of Ice.

Add Water until coils are completely covered. Replace Lid.




# JOCKEY BOX ASSEMBLY

**STEP 12:** Locate the two 'keyhole' punches on the back of the Drip Tray and match them with the shown screw heads on the bottom edge of the Jockey Box Housing.

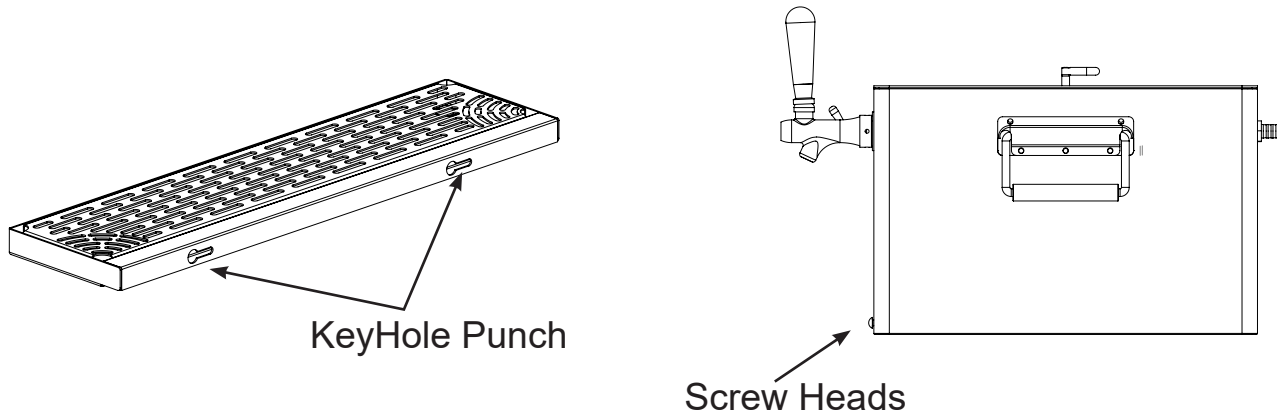

**STEP 13:** To Install the Drip Tray, insert the screw heads to the keyhole punch until fully engaged. Next, slide the Drip Tray to the right to center and lock the tray in place.

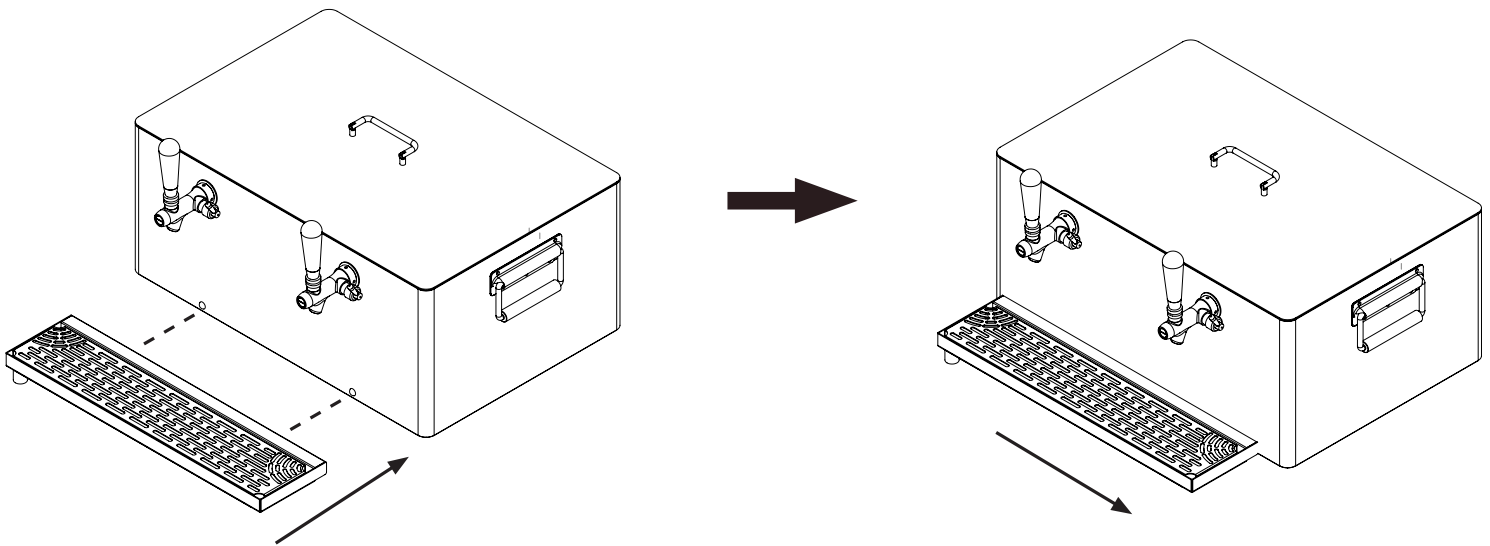

# JOCKEY BOX ASSEMBLY

**STEP 14:** Open Faucet to begin pouring. Adjust PSI as necessary.

