



JOCKEY BOX SETUP GUIDE


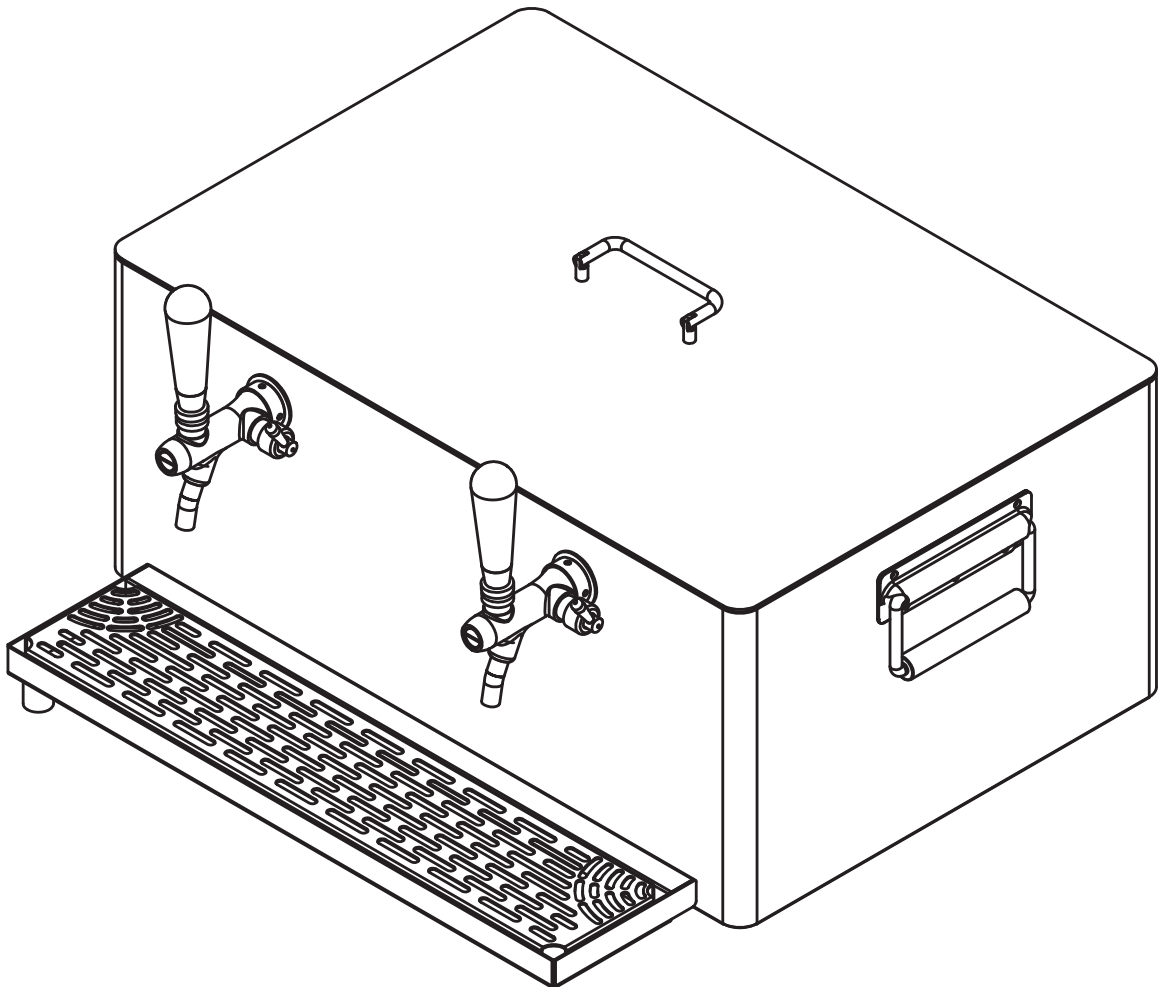


Table of Contents:

- Parts List
- Set Up Guide

BEFORE YOU BEGIN THE INSTALLATION


- **Read all the instructions before installing.**
- **Remove all packing materials before you start.**
- **This installation requires basic mechanical skills.**
- **Proper installation is the responsibility of the installer.**
- **Product failure due to improper installation is not covered under the warranty.**
- **Keep this instruction manual.**

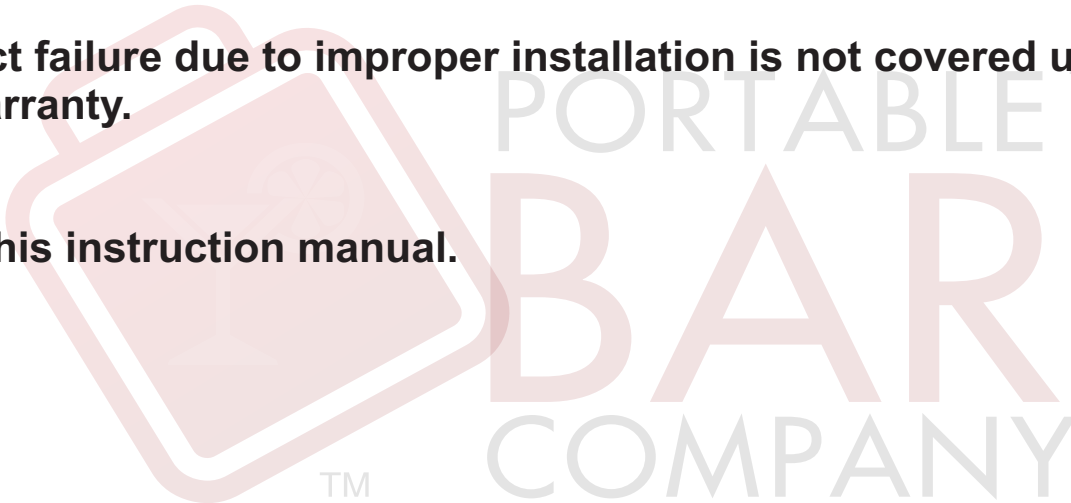


Note: You may need the assistance of one or more persons when setting up this product.

JOCKEY BOX PARTS LIST


Drip Tray
QTY. 1

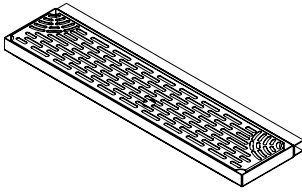


Housing
QTY. 1

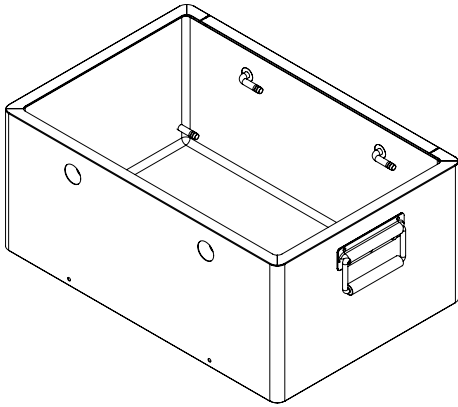


Lid
QTY. 1

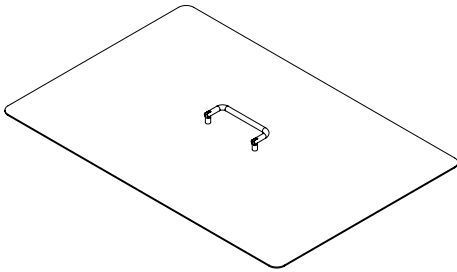

Faucet / Tap Assembly
QTY. 2

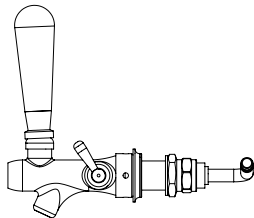

120' Stainless Steel Coil
QTY. 2

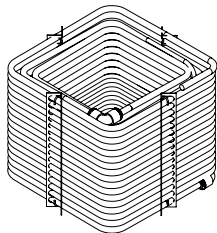

Stainless Steel Hex Nut
QTY. 2



5/16" Drainhose
QTY. 1



5 ft. Jumper Lines- 5/16" line
with wingnuts
QTY. 2



Stainless Steel Hose Clamp
QTY. 1



Neoprene Washer
QTY. 4



JOCKEY BOX PARTS LIST

(ADDITIONAL ITEMS)

CO2 Tank
QTY. 1



Regulator
QTY. 1



Coupler
QTY. 2



Air-line with Plastic
Hose Clamps
QTY. 2



Faucet Wrench
QTY. 1



(CLEANING KIT ITEMS: Optional)

CO2 Tank
QTY. 1



0.5 Oz Cleaner
QTY. 1



32 Oz Cleaner
QTY. 1



Note: These items are covered in an additional Cleaning Guide.

JOCKEY BOX PARTS LIST

(ADDITIONAL TOOLS MAY BE REQUIRED: Not Included)

Adjustable Crescent Wrench
QTY. 1




Flathead Screwdriver
QTY. 1



JOCKEY BOX ASSEMBLY

STEP 1: On the back of the Housing, Fasten 5/16" Drain Hose to drain faucet using a flat-head screwdriver and a Stainless Steel Hose Clamp. ***Do not overtighten***

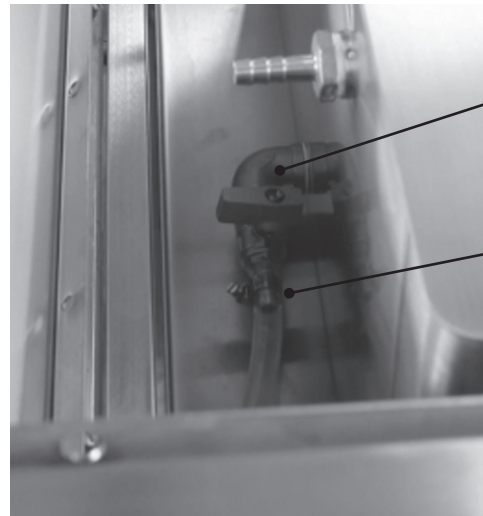


STEP 2: On the back of the housing, attach the Jumper Line by setting the neoprene washer inside the wingnut and tightening to the shank until fully seated.

Repeat this step for the other side.




JOCKEY BOX ASSEMBLY

STEP 3: Attach the other side of the jumper line to the threaded portion of the coupler by seating neoprene washer into the wingnut and tightening fully.

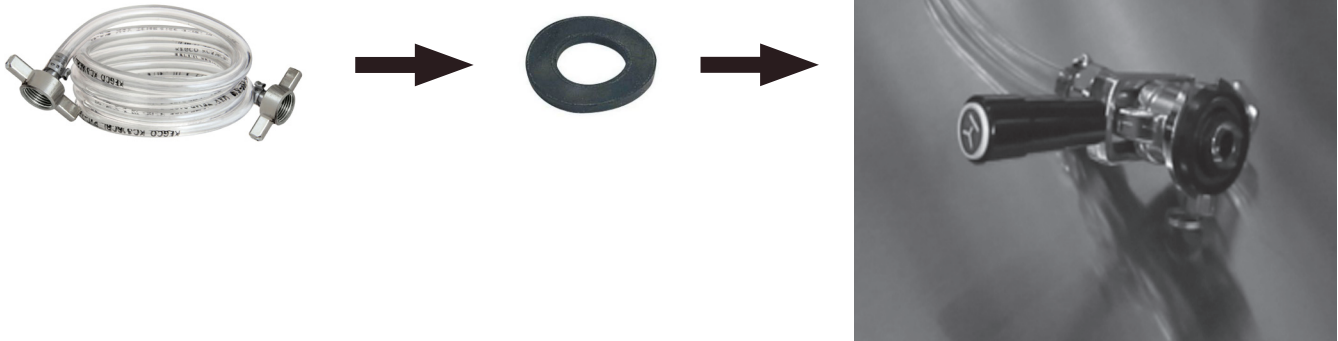

STEP 4: Attach gas line to the corresponding Tailpiece of the Regulator with the provided Plastic Hose Clamp. **Do not overtighten.**


Repeat if necessary.

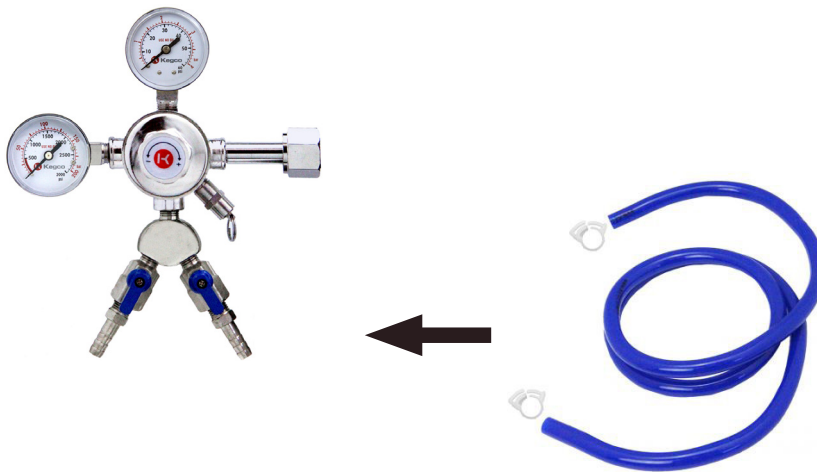

JOCKEY BOX ASSEMBLY


STEP 5: Attach Regulator to CO2 Tank. Make sure Neoprene Washer is seated firmly within Stainless Steel Hex Nut before attaching.

Tighten with Adjustable Crescent Wrench.

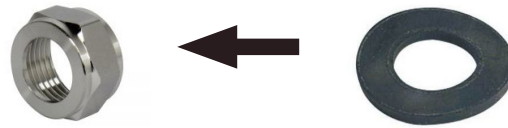

STEP 6: Attach gas line to the corresponding Tailpiece on the Keg Coupler.

Fasten with Plastic Hose Clamp.

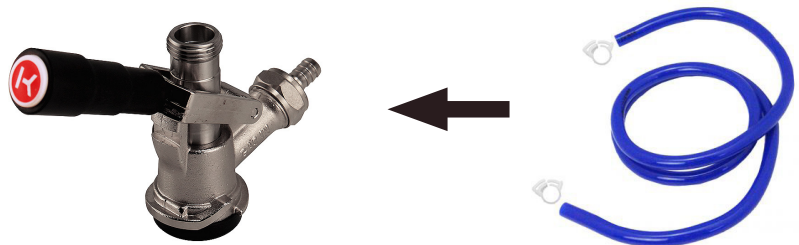

JOCKEY BOX ASSEMBLY


STEP 7: Attach Coupler to Keg by placing the Coupler into the top threads and turning clockwise.

Pull Coupler Handle out and down until engaged.



STEP 8: Turn on CO2 tank by opening the Top Valve, and ensure the gas lines are in the open position.

Top Valve

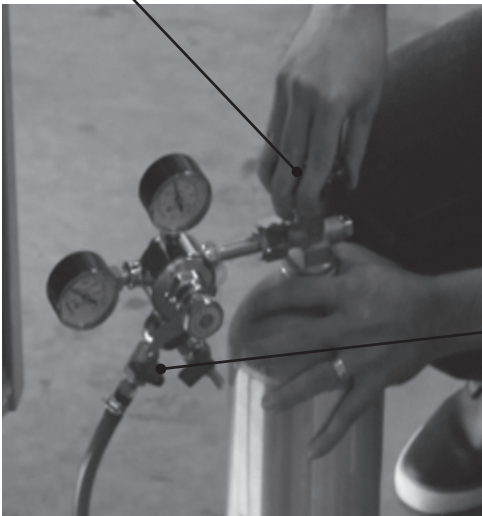


Gas Lines

JOCKEY BOX ASSEMBLY

STEP 9: Adjust to approximately 30 PSI. This pressure may vary.

Note: **DO NOT EXCEED** 45 PSI. PSI needs will vary depending on temperature of keg.

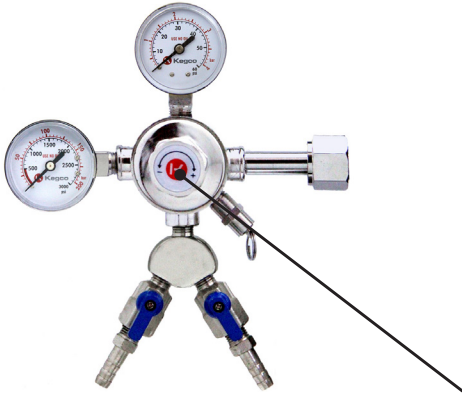

Turn Here to adjust PSI


STEP 10: Remove Lid and Add approximately 35 pounds of Ice.

Add Water until coils are completely covered. Replace Lid.




JOCKEY BOX ASSEMBLY

STEP 12: Locate the two 'keyhole' punches on the back of the Drip Tray and match them with the shown screw heads on the bottom edge of the Jockey Box Housing.

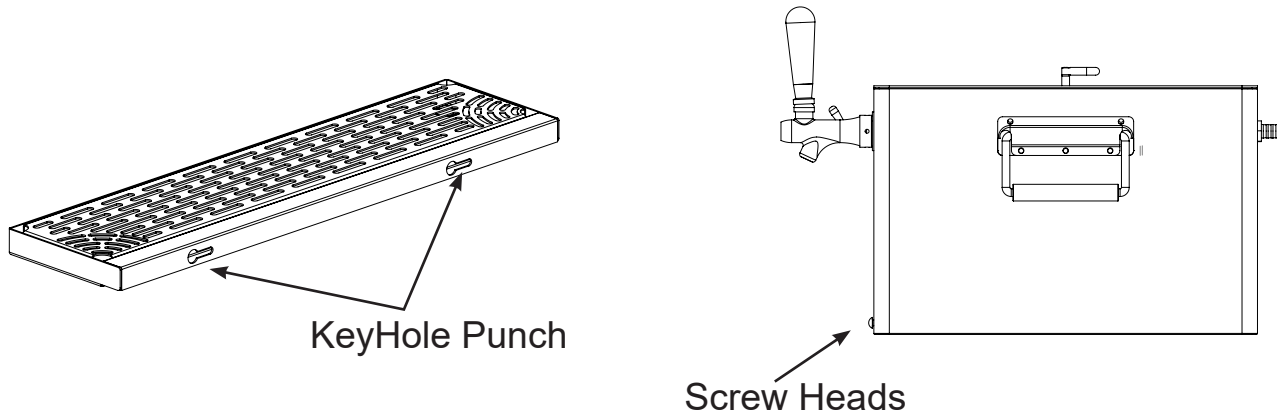

STEP 13: To Install the Drip Tray, insert the screw heads to the keyhole punch until fully engaged. Next, slide the Drip Tray to the right to center and lock the tray in place.

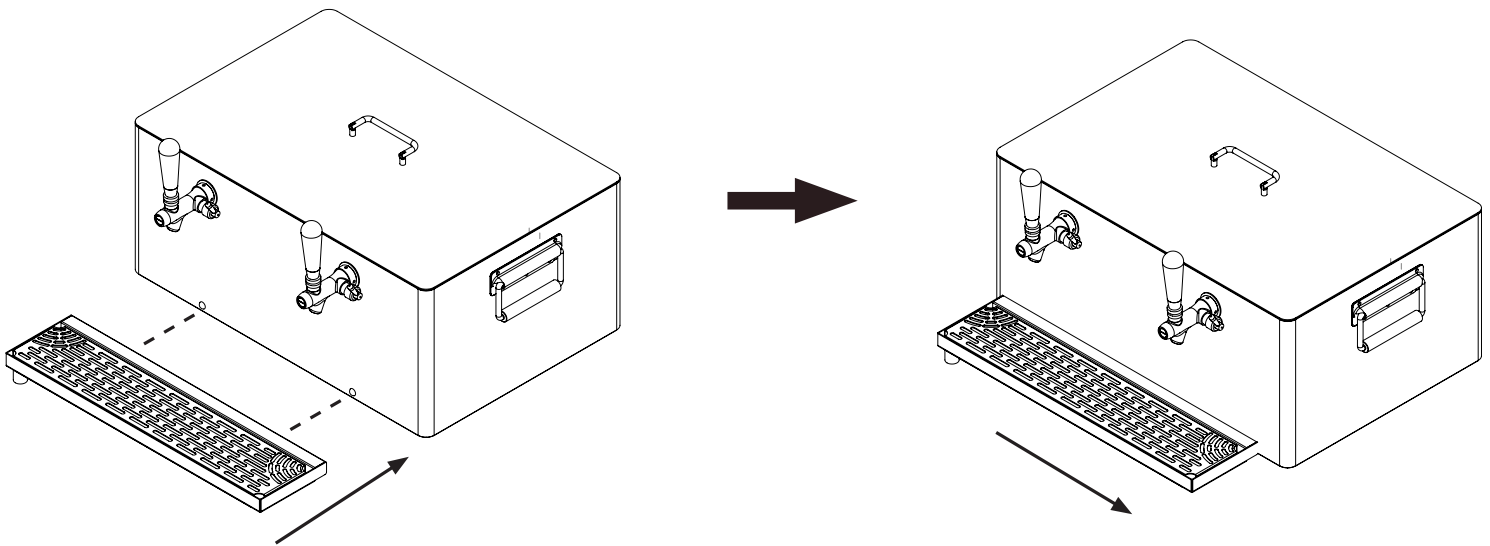

JOCKEY BOX ASSEMBLY

STEP 14: Open Faucet to begin pouring. Adjust PSI as necessary.

