


FOLD+ROLL BACK BAR SETUP GUIDE

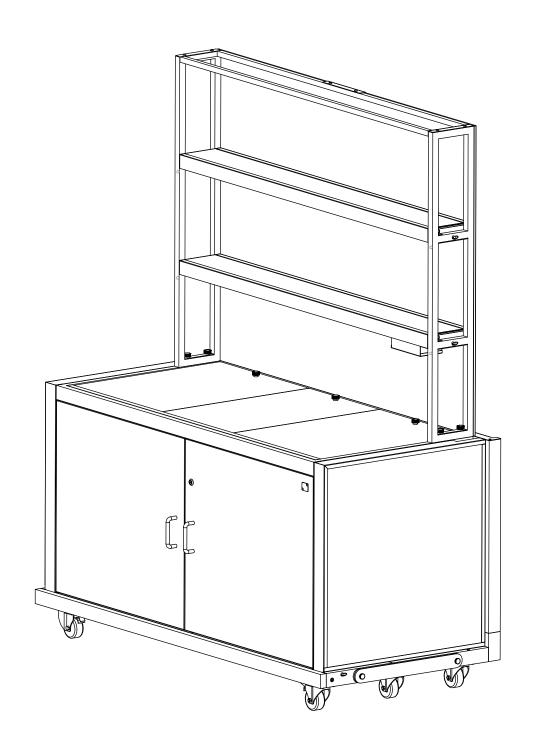


- Read all the instructions before installing.
- Remove all packing materials before you start.
- This installation requires basic mechanical skills.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the warranty.
- Keep this instruction manual.


Note: This setup requires 2 or more persons.

Main Cabinet



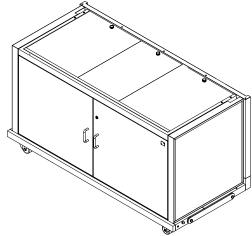


Ice bin QTY: 2

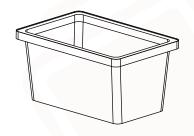


Cover QTY: 3

See page 11.

Cutting Board (Pre-Installed on Main Cabinet) QTY: 3



Upper Frame QTY: 1

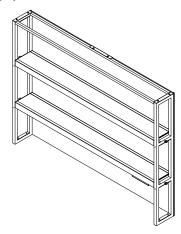

Large Thumbscrews QTY: 4




Short Thumbscrews QTY: 3



Lock Pin QTY: 8



Acrylic Panel QTY: 4

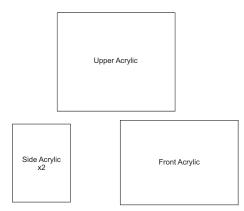

Note: Parts are not to scale.

LED Kit - Upper Shelves (if Purchased)


LED Controller (With Velcro tape) QTY: 1




LED Strips (Pre-installed on Upper Frame) QTY: 2



Power Adapter QTY: 1



Battery QTY: 1



LED Kit - Main Cabinet(if Purchased)


LED Controller (With Velcro tape)
QTY: 1




LED Strip (Pre-installed on Main Cabinet) QTY: 1



Power Adapter QTY: 1

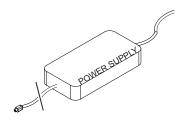


Battery QTY: 1




Note: If laminate panel was ordered, skip to Step 5.


STEP 1: Uninstall the hex screws and security tab at the top of the upper frame.

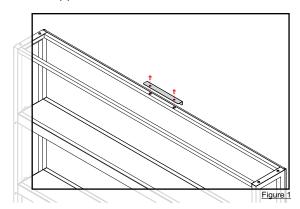

STEP 2: Pull the acrylic panel out.

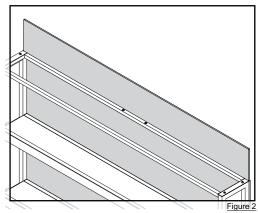


STEP 3: Remove protective film from the acrylic panel.

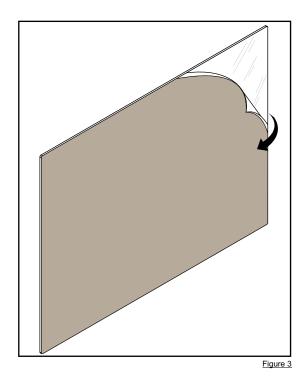


STEP 4: Follow steps 1 and 2 in reverse order to set panel.

STEP 5: Using two people, lift upper frame and place onto main cabinet.

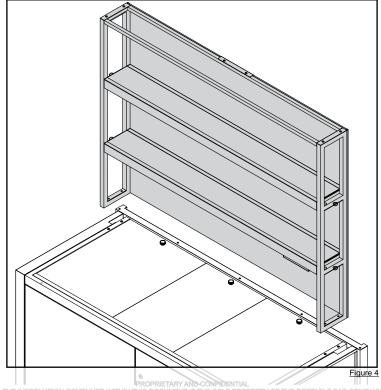


THE INFORMATION CONTAINED WITHIN THIS DOCUMENT IS THE SOLE PROPERTY OF THE PORTABLE BAR COMPANY
AND REPRODUCTION IN PART OF AS A WHOLE WITHIN IT THE WOLTEN REPAIRS SON OF THE PORTABLE BAR COMPANY IS REQUIRED.

STEP 6: Align the back part of the frame with the back edge of the working surface, as shown below:

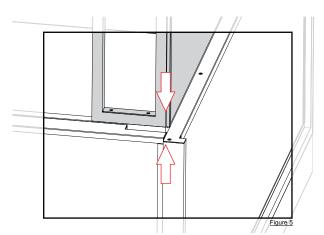

STEP 7: Install thumbscrews on both sides of the frame.

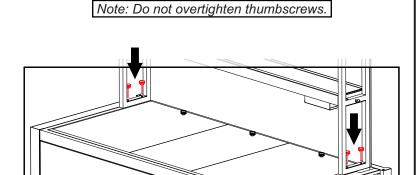




PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED WITHIN THIS DOCUMENT IS THE SOLE PROPERTY OF THE PORTABLE BAR COMPANY
ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF THE PORTABLE BAR COMPANY IS PROHIBITED


Folding the Fold+Roll Back Bar

Note: Disconnect controllers and batteries before breaking down the bar.


STEP 1: Uninstall thumbscrews on both sides of the upper frame.

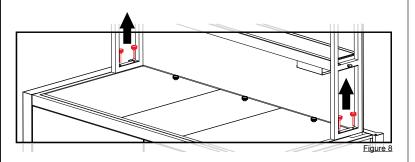


STEP 2: Take the Upper Frame assembly out and place it temporarily on a flat and secure surface using two people.

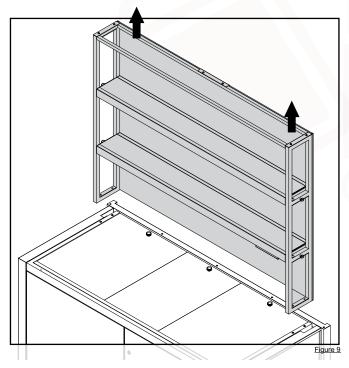

STEP 3: Fully open both doors.

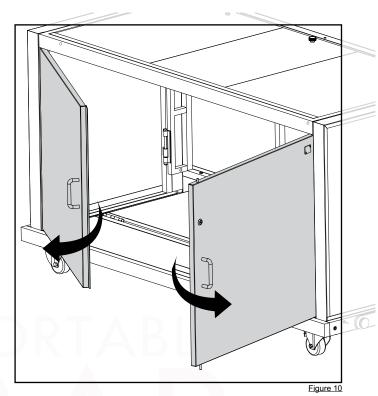


STEP 4: Pull down the spring latch to release the door. Slightly tilt and pull out the door. Do this step with both doors.

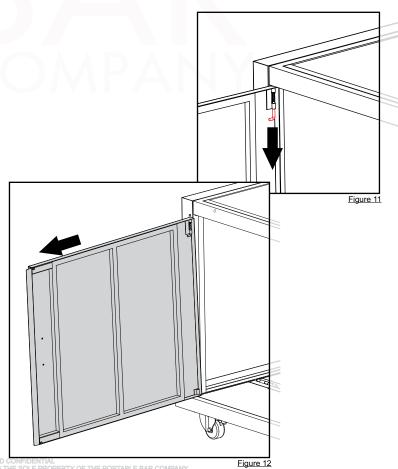


PROPRIETARY AND CONFIDENTIAL


THE INFORMATION CONTAINED WITHIN THIS DOCUMENT IS THE SOLE PROPERTY OF THE PORTABLE BAR COMPANY
ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF THE PORTABLE BAR COMPANY IS PROHIBITED.

STEP 5: Pull spring latches to release the working surface. Hold the working surface while moving it to avoid damage.

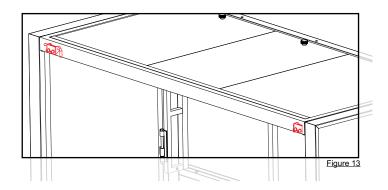


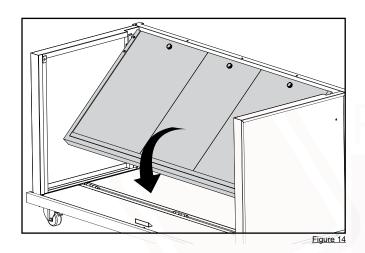

STEP 6: Remove the 4 pins located on side frames, as shown below.

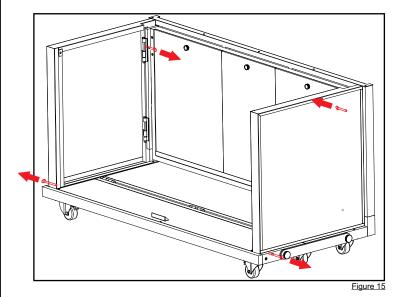


STEP 7: Swing side frames while slightly lifting them.

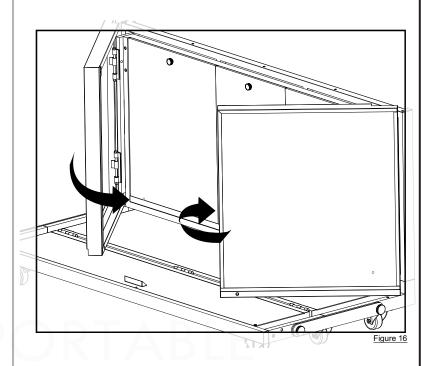



Note: Replace lock pins after swinging side frames.

STEP 8: Unscrew the far back thumbscrew. While you do so, hold the support bar, once the thumbscrew is fully out, the support bar will fall if not supported.

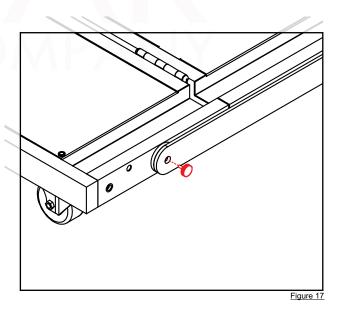


STEP 9: Move up the base of the frame, hold it in place while screwing the thumbscrews back onto the base. As shown below;

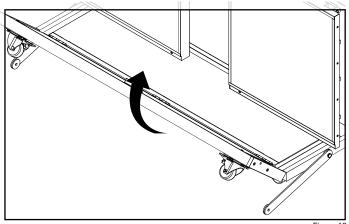

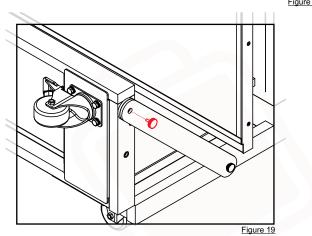

STEP 10: Place upper assembly on the bar's base, as shown;

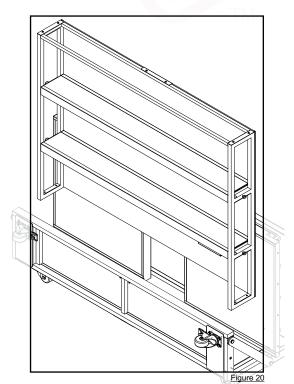

STEP 11: Place doors between upper frame and folded base, then place ice bins onto shelves of upper frame for storage.


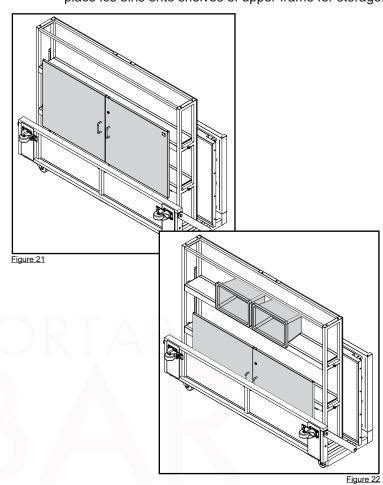



Figure 21. Full Folded Assembly

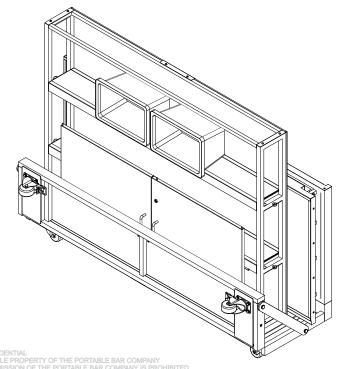


THE INFORMATION CONTAINED WITHIN THIS DOCUMENT IS THE SOLE PROPERTY OF THE PORTABLE BAR COMPANY ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF THE PORTABLE BAR COMPANY IS PROHIBITED

Ice bins installation


STEP 1: Unscrew thumbscrew of center cutting board.

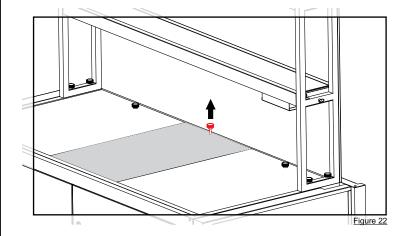

STEP 2: Take the center cutting board out.

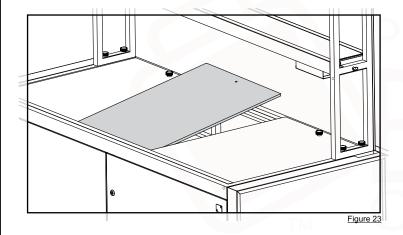


STEP 3: Place ice bins.

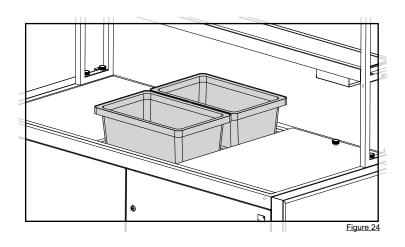


Acrylic panels swapping

STEP 1: Fold down the bar. Follow Steps 1-7 on Page 6.


STEP 2: Remove all the screws located at the sides, and uninstall the secuirty tab, as shown below.

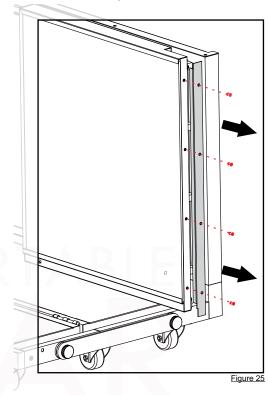


STEP 3: Pull out acrylic panel.

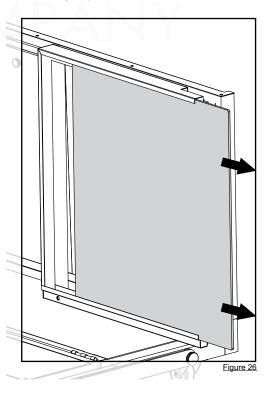


STEP 4: Remove screws and security tab, as in the last step, this time for the back acrylic panel. Once the tab is fully removed, pull out acrylic panel. Handle acrylic panel with care, it can scratch when in contact with hard surfaces.

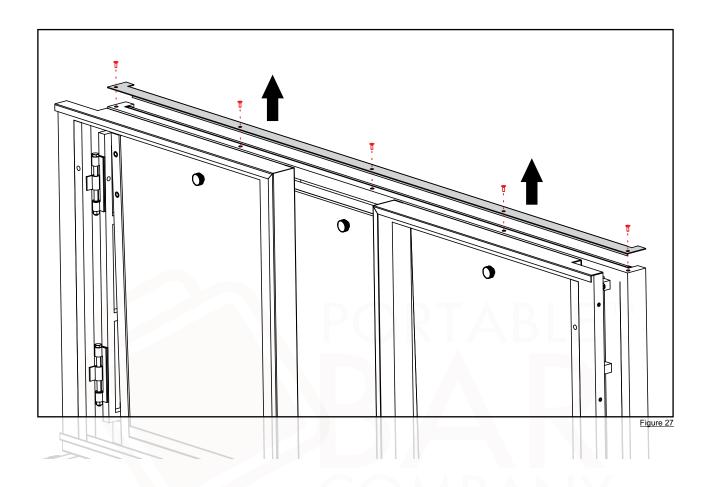

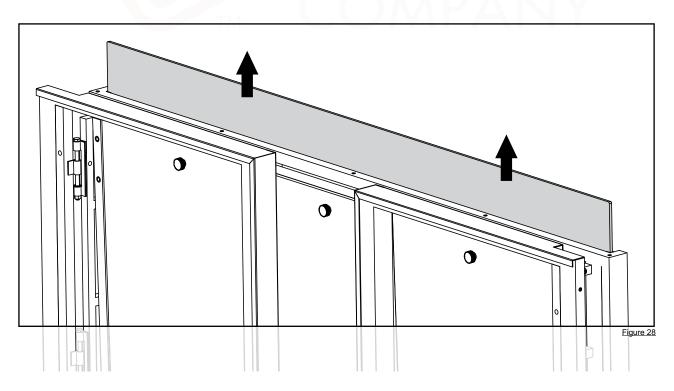


Cabinet LED Kit Installation (If purchased)

STEP 1: Place battery inside the cabinet, as shown below:

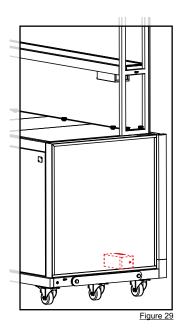


STEP 2: Using the included velcro tape, place the LED Controller as shown below:

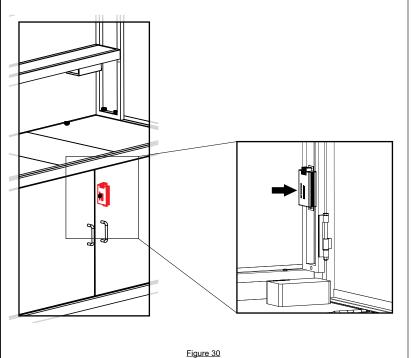

STEP 3: Connect the battery to the controller using the power out battery port to the DC IN controller.

Upper Frame LED Kit Installation (If purchased)

STEP 1: Place battery underneath the bottom shelf on the upper frame, inside casing as shown below:

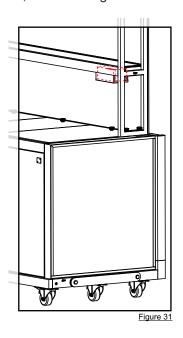

STEP 2: Using the included velcro tape, place the LED Controller as shown below:


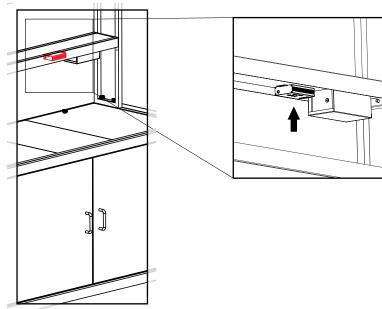


Figure 32


STEP 3: Connect the battery to the controller using the power out battery port to the DC IN controller.

Covers (3)

Upper and Lower covers for Upper Frame and Cabinet:

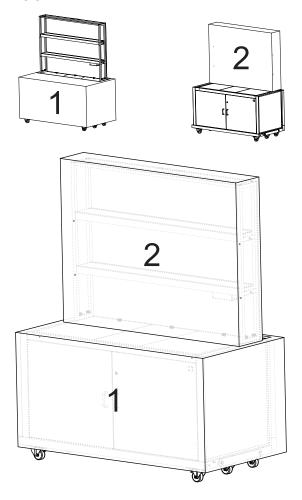

Cover for Folded position

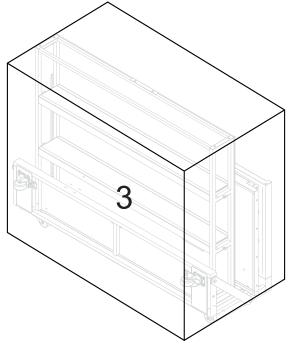

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED WITHIN THIS DOCUMENT IS THE SILE PROPERTY OF THE PORTABLE BAR COMPANY
AND DEPONDING TOOL IN DADT OR AS A WIGH BE WITHOUT THE WITH



Contact us

Tel # 877-958-7901 Fax # 866-659-3353

E-mail: info@theportablebarcompany.com

Visit us at

www.theportablebarcompany.com

