




FLASH BAR WHEEL BASE SETUP GUIDE


STRAIGHT, CORNER 90 AND CIRCULAR SEGMENTS

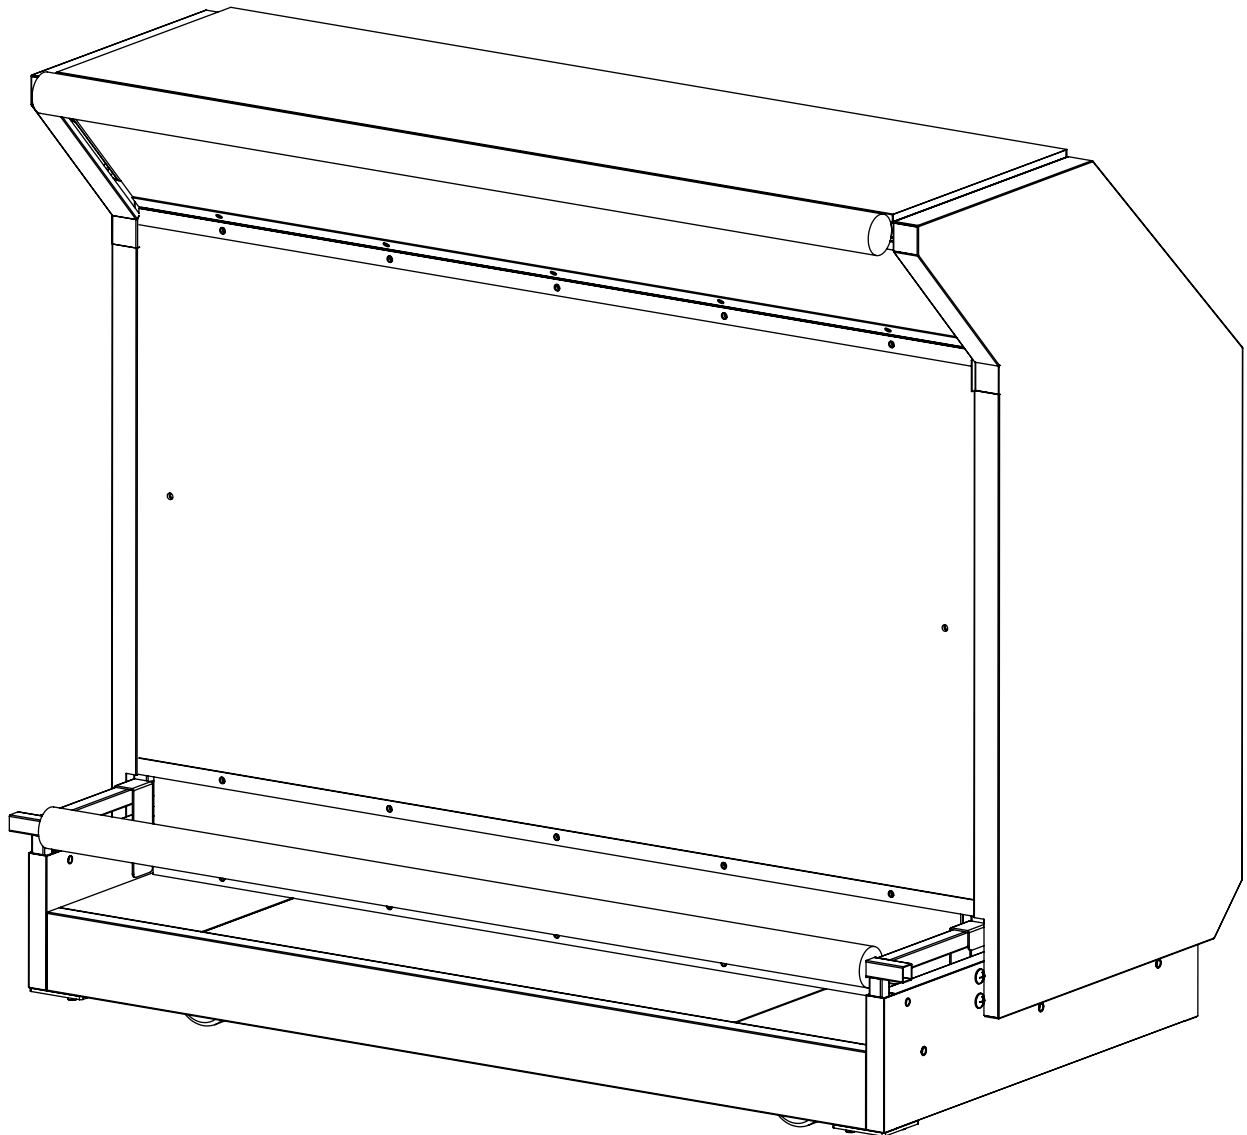

- Read all the instructions before installing.
- Remove all packing materials before you start.
- This installation requires basic mechanical skills.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the warranty.
- Keep this instruction manual.

CAUTION: DO NOT ATTACH AND MOVE MORE THAN 4 WHEELED SEGMENTS

Required tools

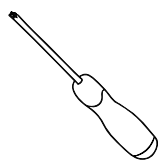


Philips Screwdriver



Crescent Wrench

Preassembled FB Straight Base


QTY: 1

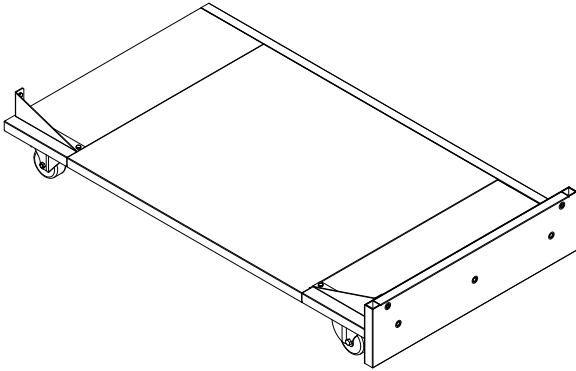

FB Leg Support


QTY: 1

*Part included with
End Cap Kit*

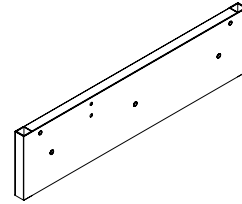

Anchor Bracket

QTY: 2

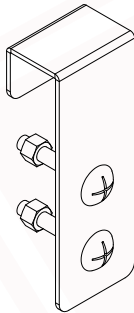

Gusset


Pre-installed



Side Frame

QTY: 2


*Part included with
Flash Bar Straight Segment*

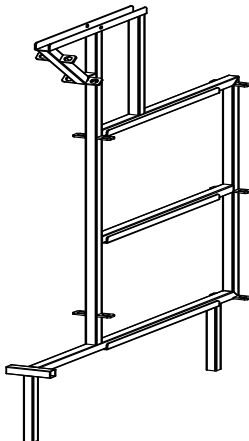

Footrail


QTY: 1

*Part included with
Flash Bar Straight Segment*

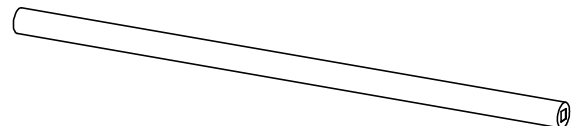


STEP 1: Place preassembled straight segment wheel base on a level surface and lock the casters to prevent movement and remove triangular gusset using a Phillips screwdriver.

Note: The triangular gussets point to the back (bartender side) of the base.

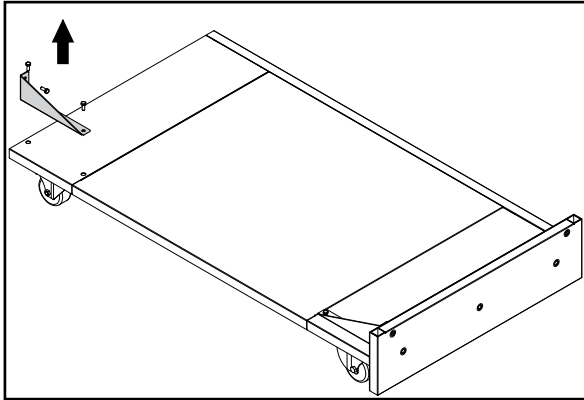


STEP 2: Lift stainless steel access panel on top of the base.

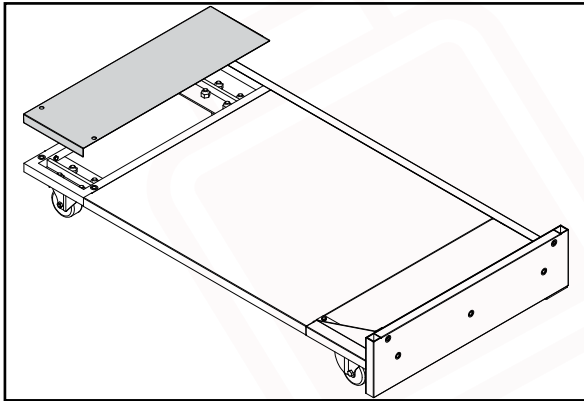


STEP 3: Attach side frame support to preassembled base using the provided hex head bolts.

Note: Finish tighten the bolts using a crescent wrench.

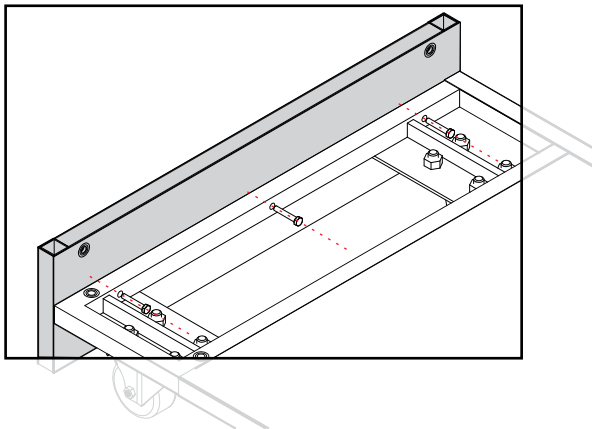


STEP 4: Place access panel back on and install triangular gusset using provided phillips head bolts.

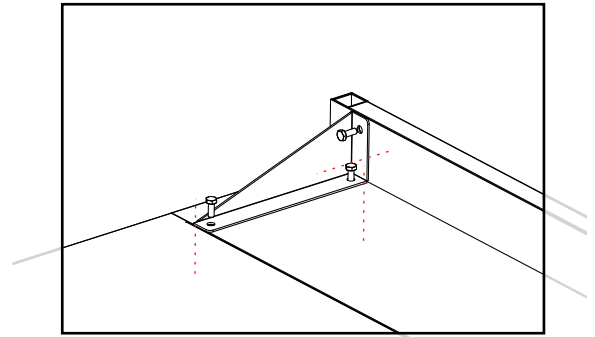


STEP 5: Remove feet from side frames and then with two people connect footrail to two FB side frames.


Note: There is no hardware so this must be done with two people for balance and tension to hold the footrail in place

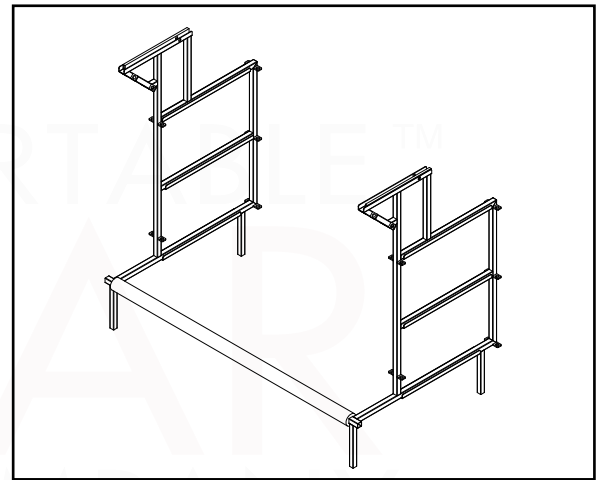


STEP 6: Lift the two frames and footrail assembly in unison and insert the side frame posts to the corresponding frame support locations on the base.

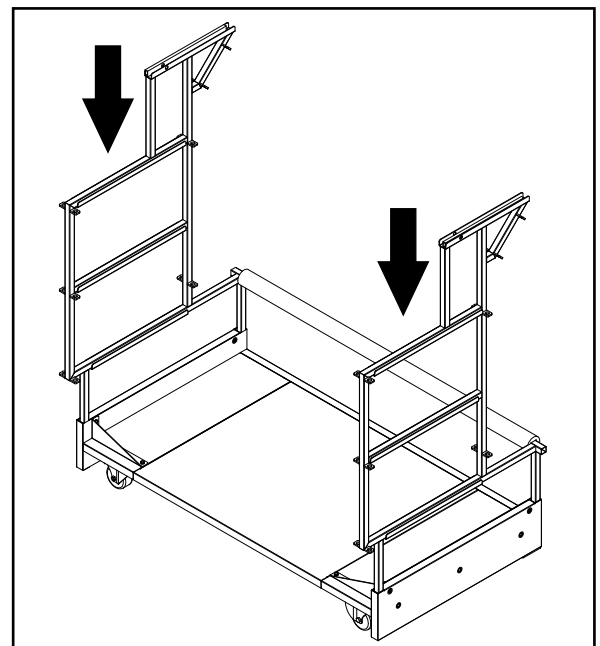


Use provided anchor bracket to secure your assembly,
as shown below.

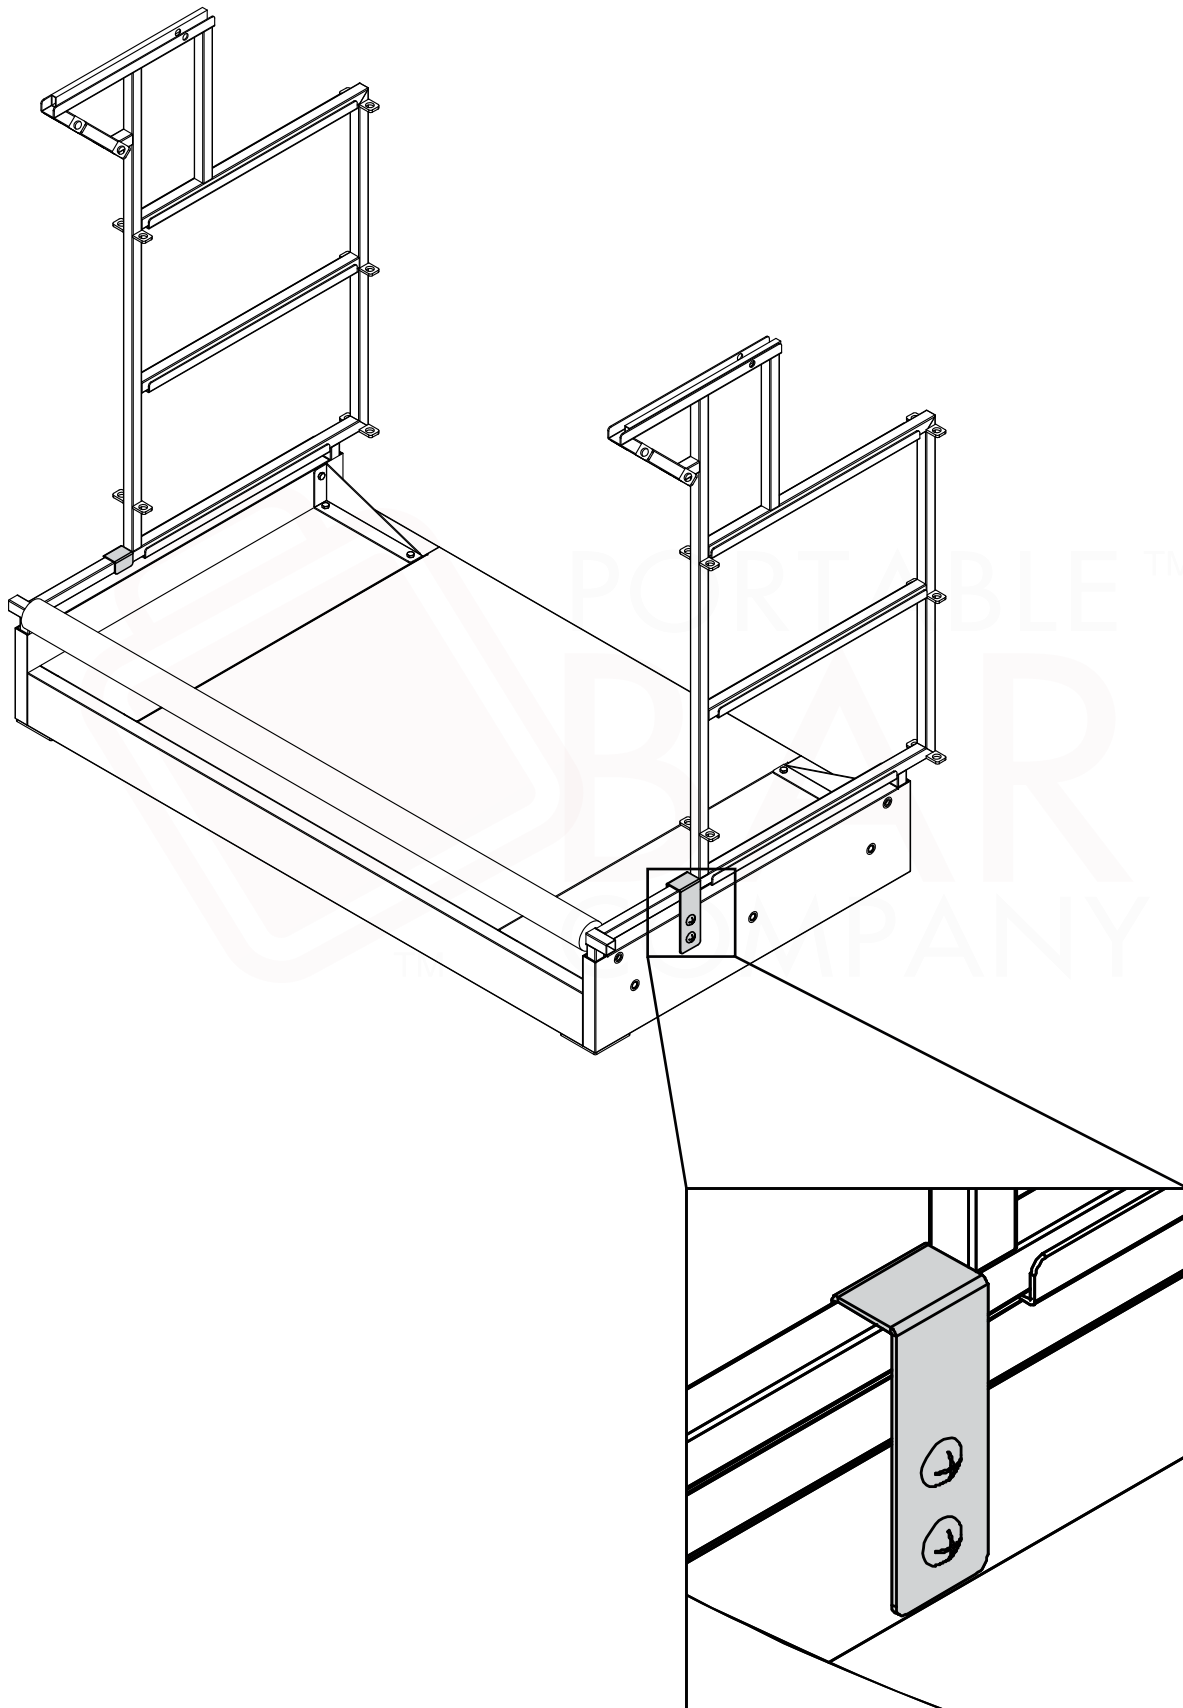


Adding a 90 Corner Segment

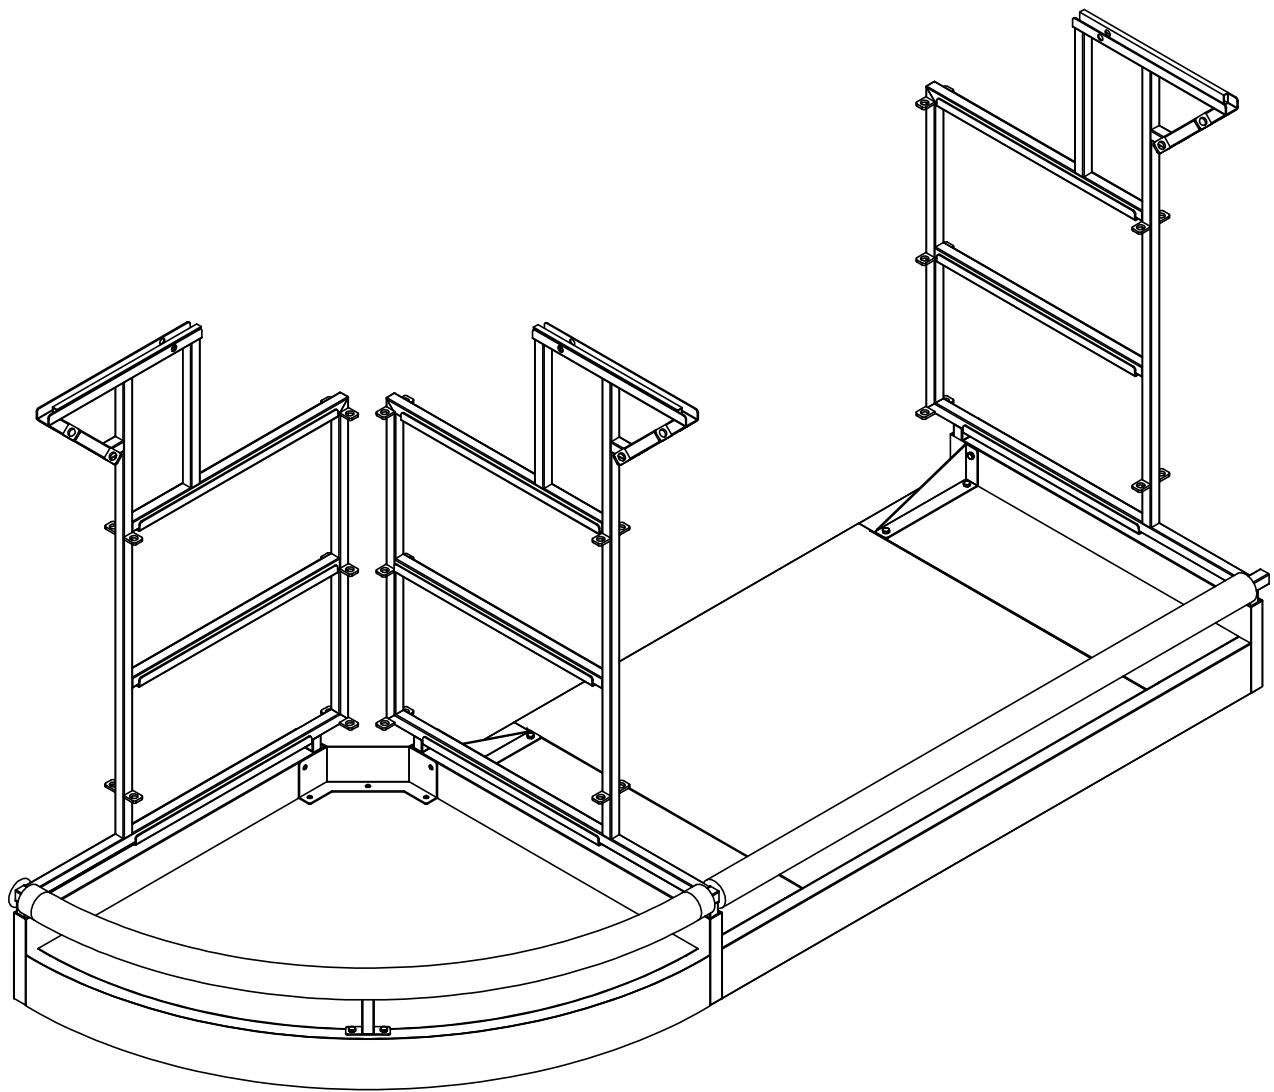


Preassembled FB 90 Corner Base
QTY: 1

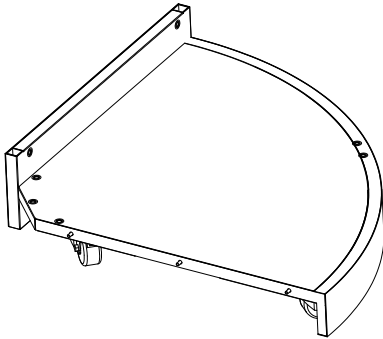


FB 90 Corner Center Bracket
QTY: 1

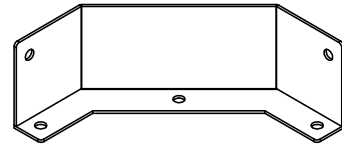

"T" bracket.
QTY: 1

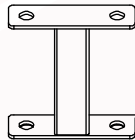


Anchor Bracket
QTY: 1

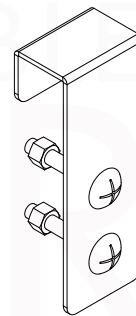


Side Frame
QTY: 1

*Part included with
Flash Bar 90 Corner Segment*

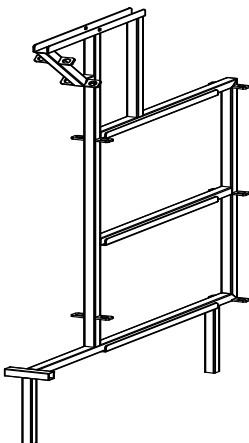


Curved footrail
QTY: 1

*Part included with
Flash Bar 90 Corner Segment*



Allen key and screw

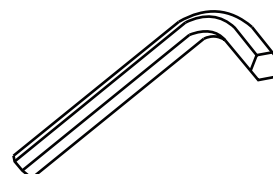


QTY: 1




QTY: 4


STEP 1: Move the preassembled corner 90 base into position next to the assembled straight segment and align it with the side support of the straight segment base.

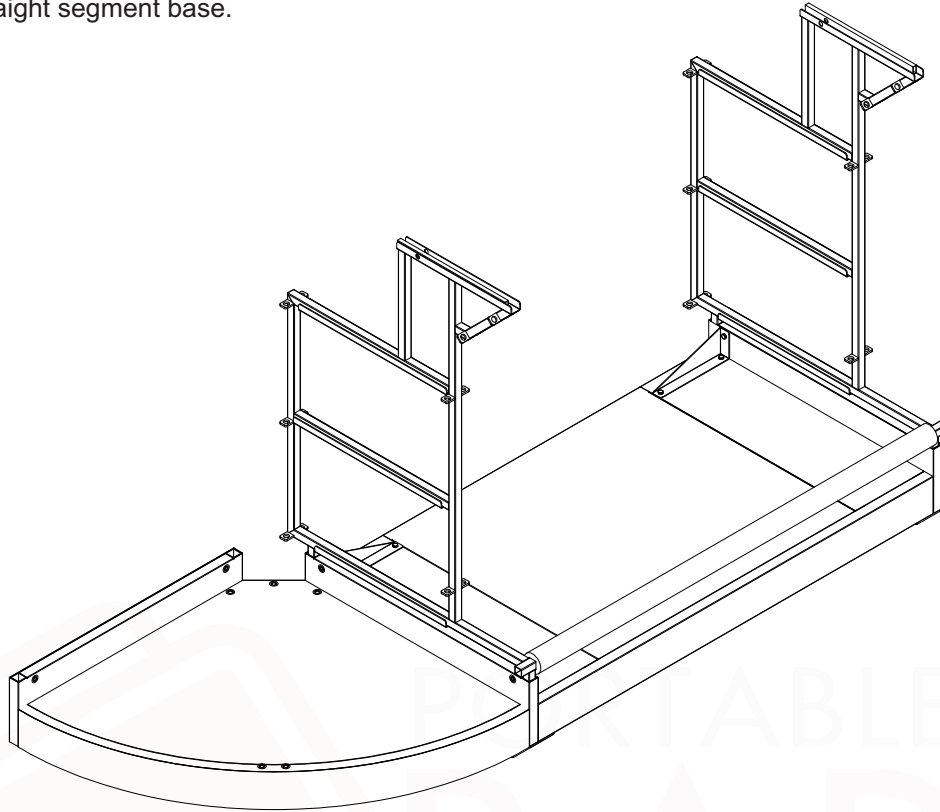


STEP 2: Remove access panel on the corner 90 to access the hardware locations and tighten provided 10mm hex head bolts.

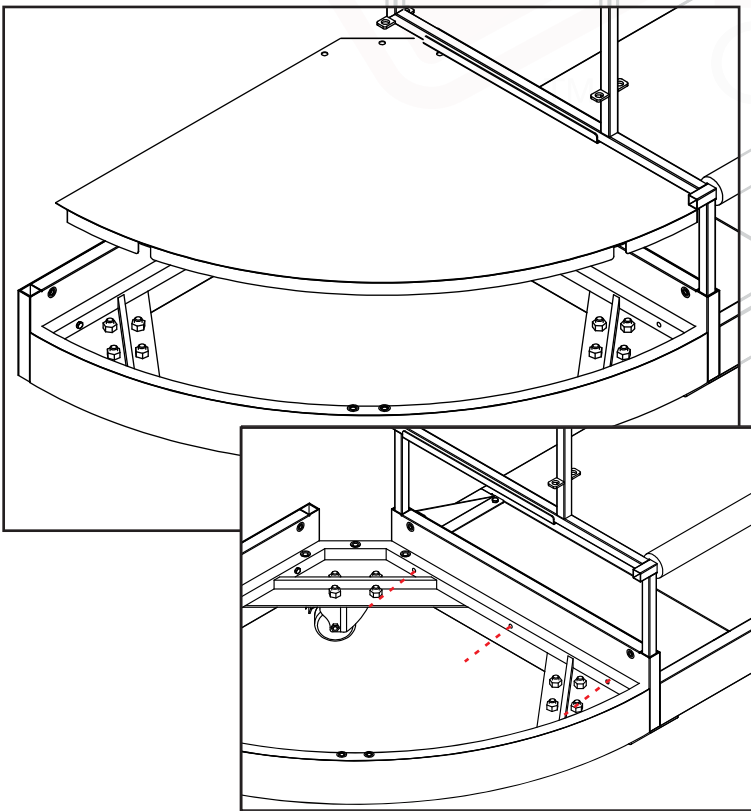


STEP 3: Place access panel back on and install the curved footrail T bracket to the corner 90 base using provided allen head screws. Make sure to not tighten the screws all the way, leave the T bracket somewhat loose.

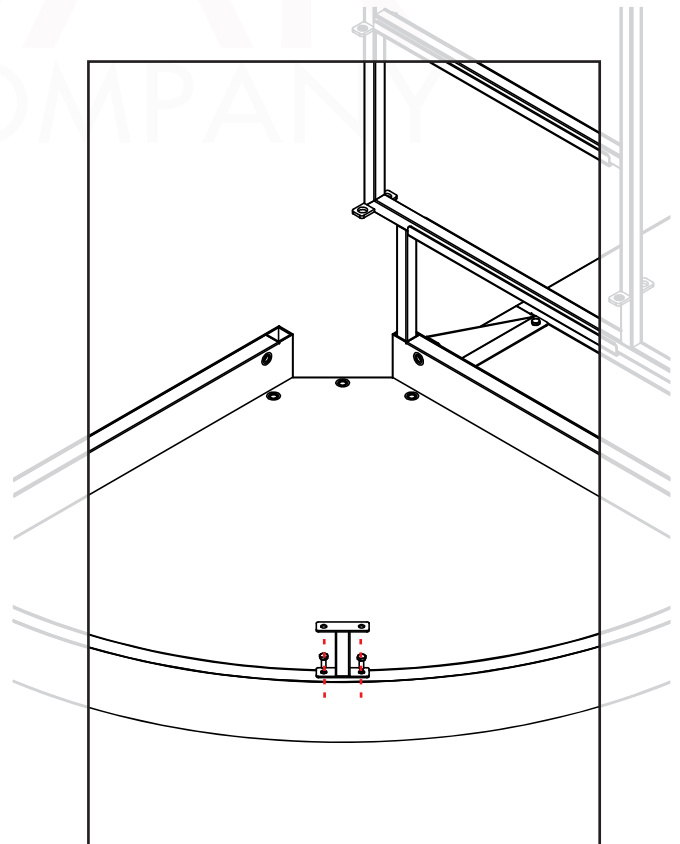


STEP 4: With two people: connect curved corner 90 footrail to one FB side frame. There is no hardware so this must be done with two people for ease of balance and tension to hold the pieces together. You might need to move the adjacent side frame up and down to allow for the curved footrail to fit in.

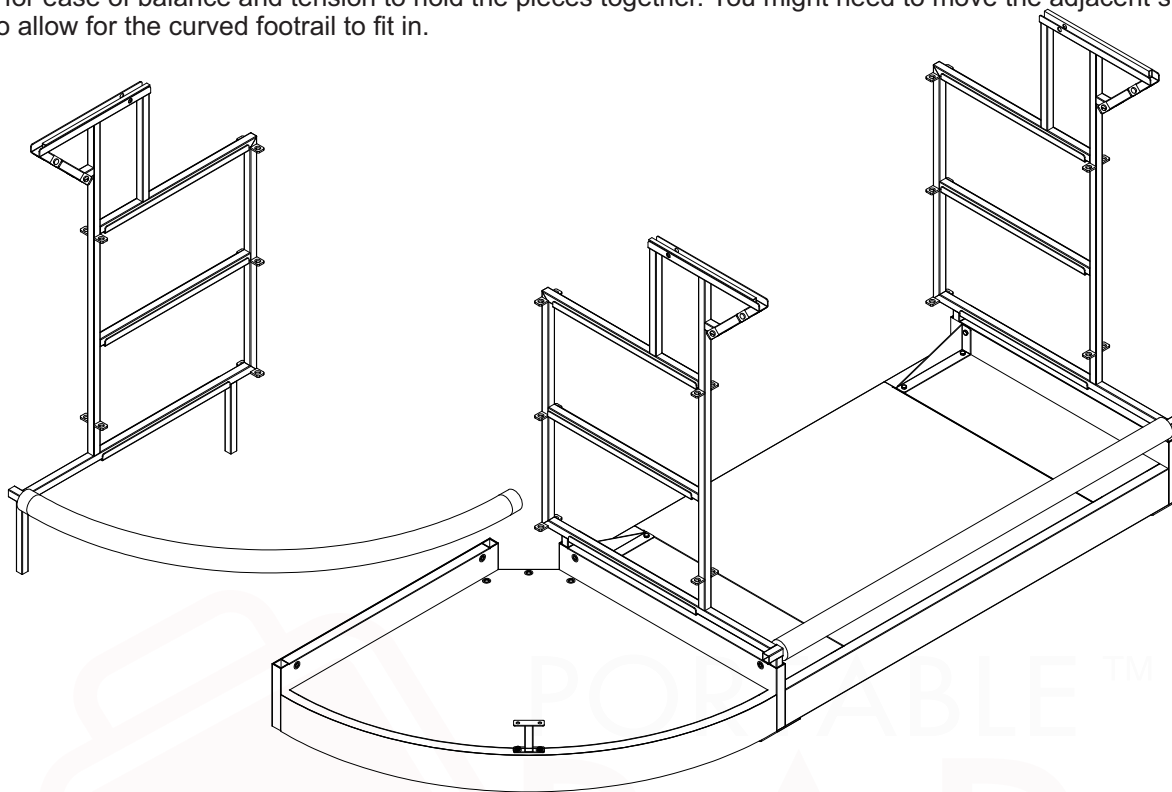


STEP 5: Align the side frame and curved footrail with the rest of the assembly. While setting the side frame in place lift up the straight segment side frame to allow the footrail to fit in.

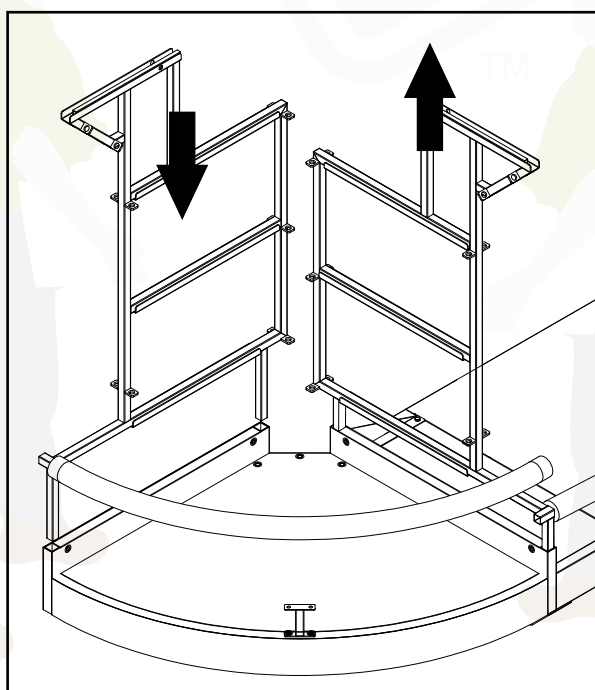

STEP 6: Tighten T bracket and install another two allen head screws to fix curved footrail in place.

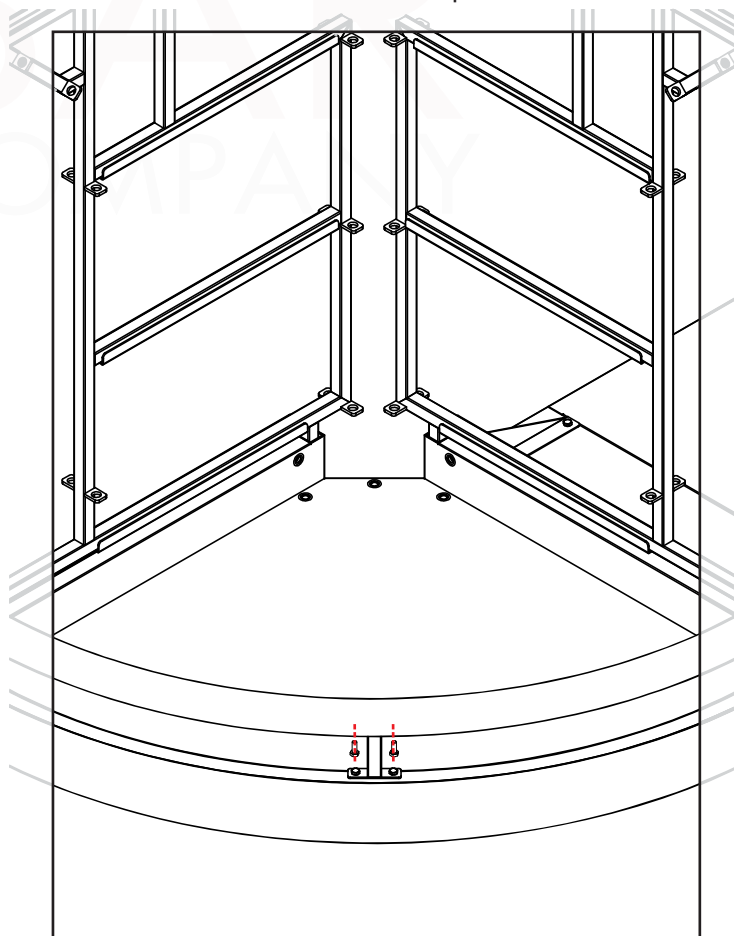


STEP 7: Install center bracket on the 90 corner using 5 provided phillips head bolts.

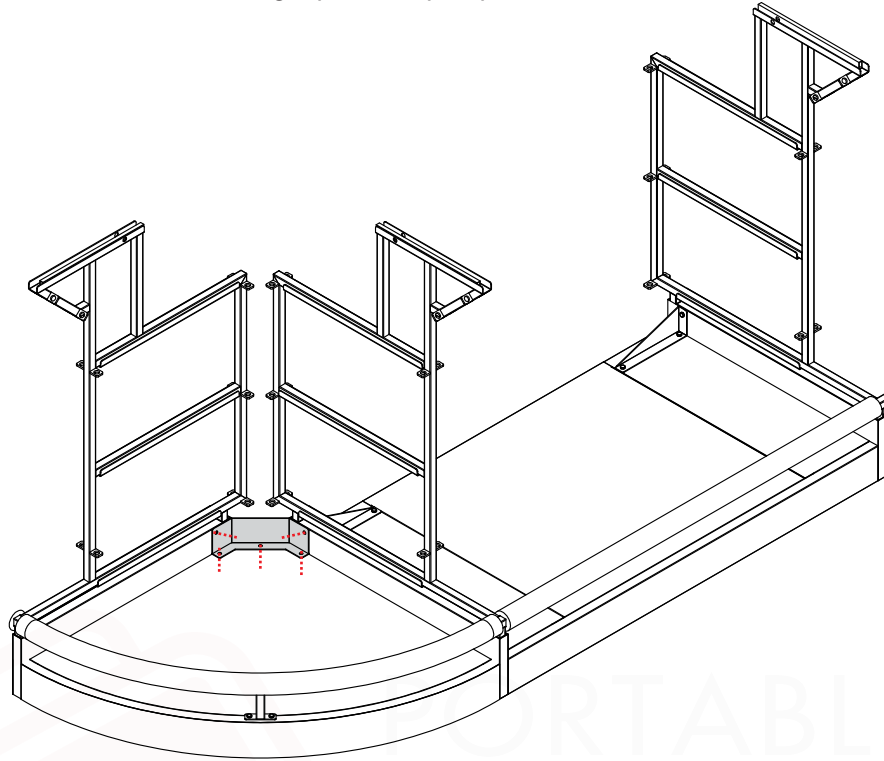


Complete installation by following the regular Flash Bar guide.

Use provided anchor bracket to secure your assembly,
as shown below.

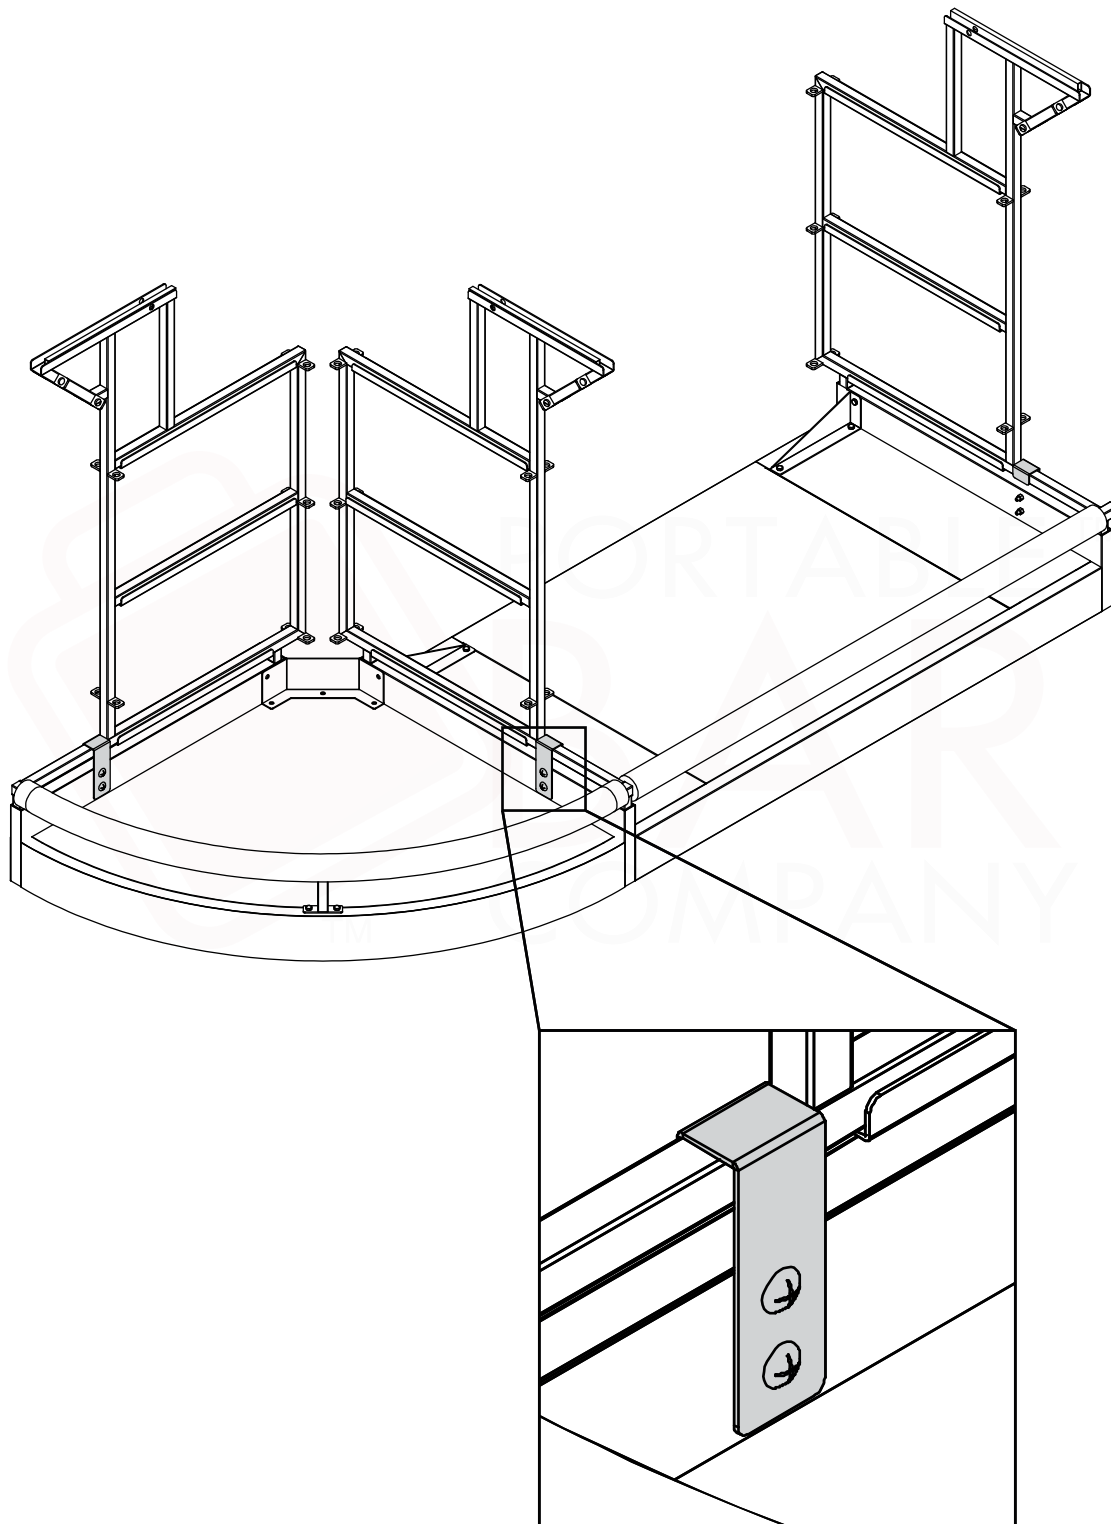


Adding a Circular Segment

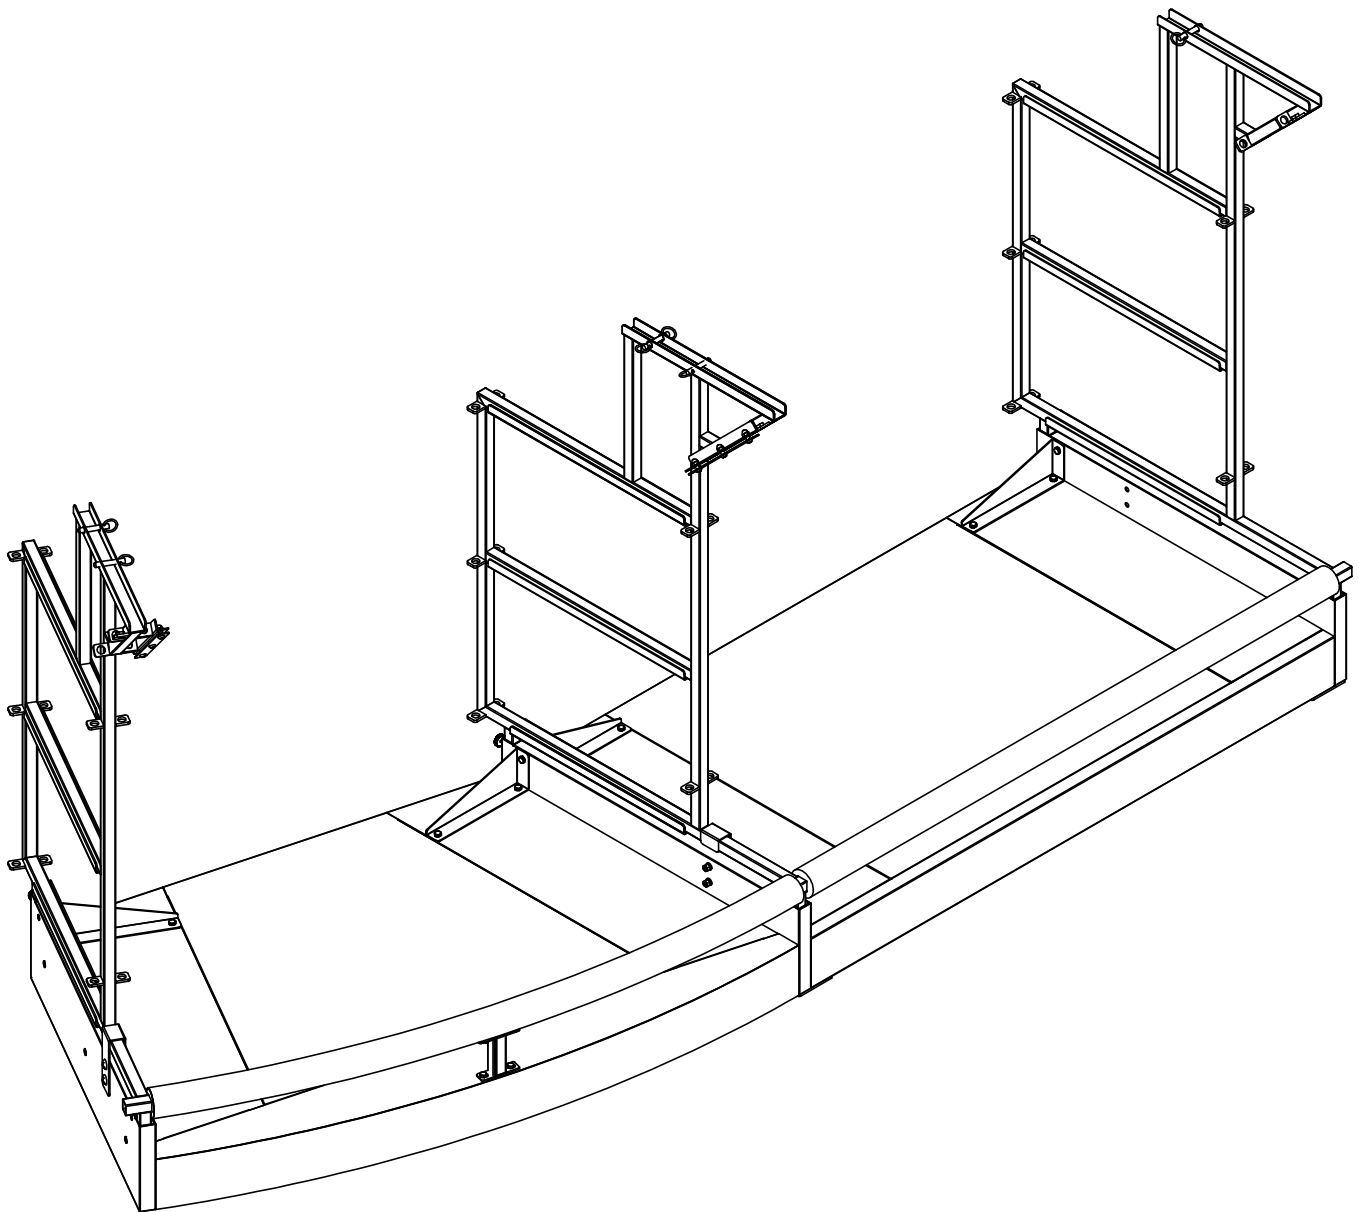


Preassembled FB Circular Base


QTY: 1

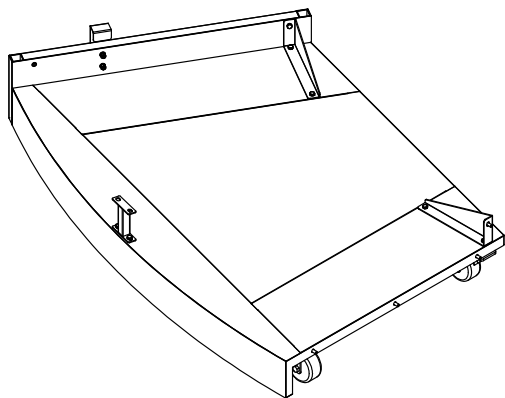**"T" bracket.**


QTY: 1

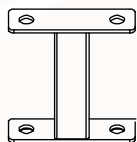**Side Frame**


QTY: 1

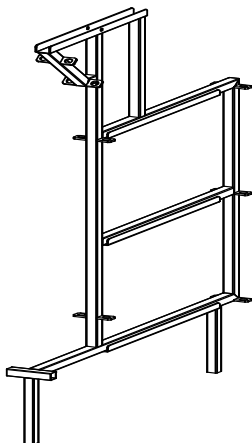*Part included with
Flash Bar 30 Corner Segment***Anchor Bracket**

QTY: 1

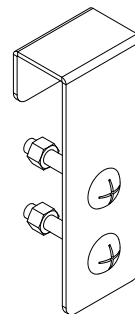**Curved footrail**

QTY: 1

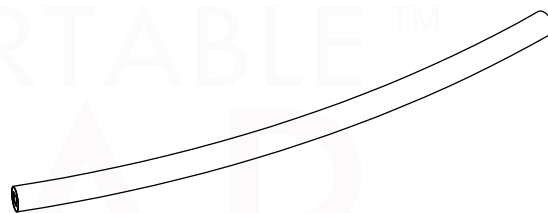
*Part included with
Flash Bar 30 Corner Segment***Allen key and screw**

QTY: 1




QTY: 4


STEP 1: Move the preassembled circular base into position next to the assembled straight segment and align it with the side support of the straight segment base.

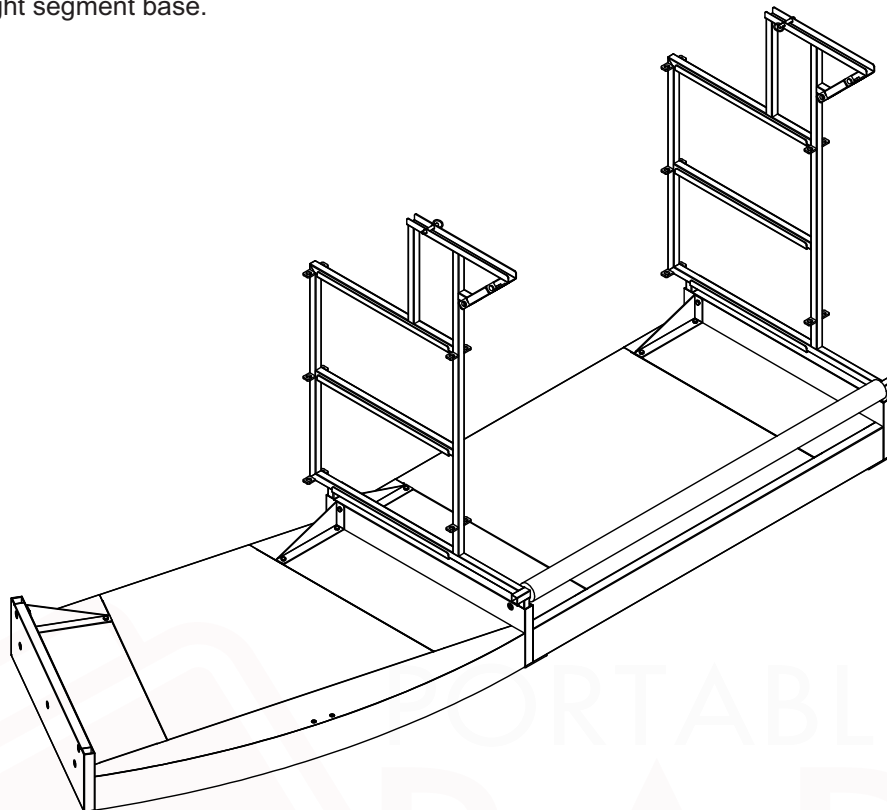


STEP 2: On the circular base remove triangular gusset and panel as shown below. Install provided 10mm hex head bolts to secure circular base.

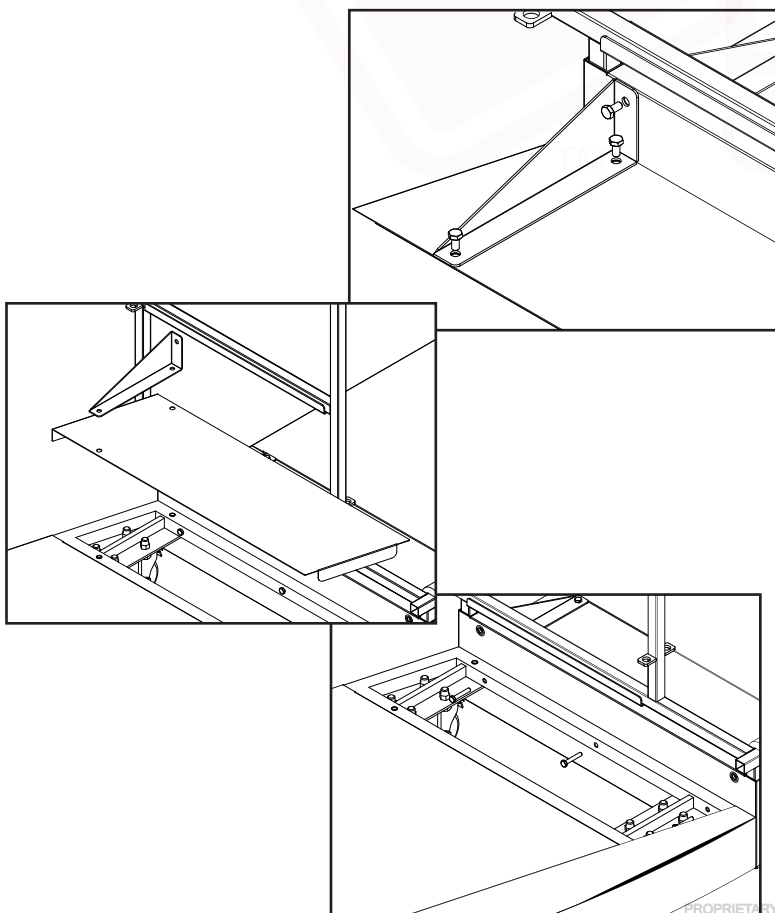


STEP 3: Set triangular gusset and access panel back in place. Install the curved footrail T bracket on circular base using provided allen head screws. Do not fully tighten T bracket.

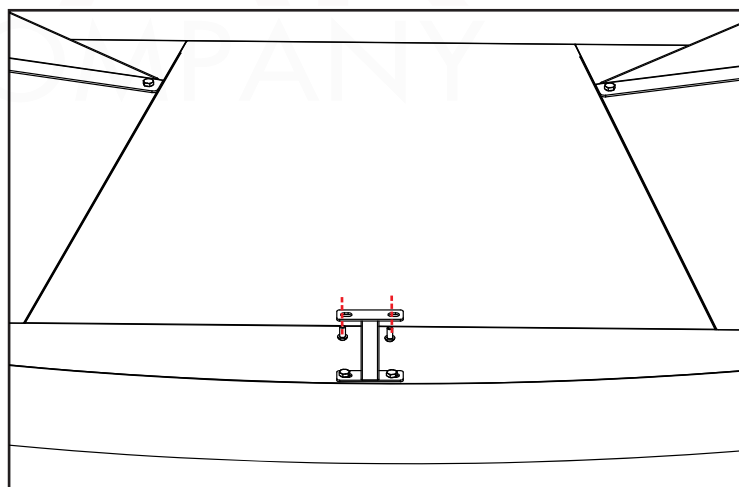


STEP 4: With two people: connect circular segment footrail to one FB side frame. There is no hardware so this must be done with two people for ease of balance and tension to hold the pieces together. You might need to move the adjacent side frame up and down to allow for the curved footrail to fit in.

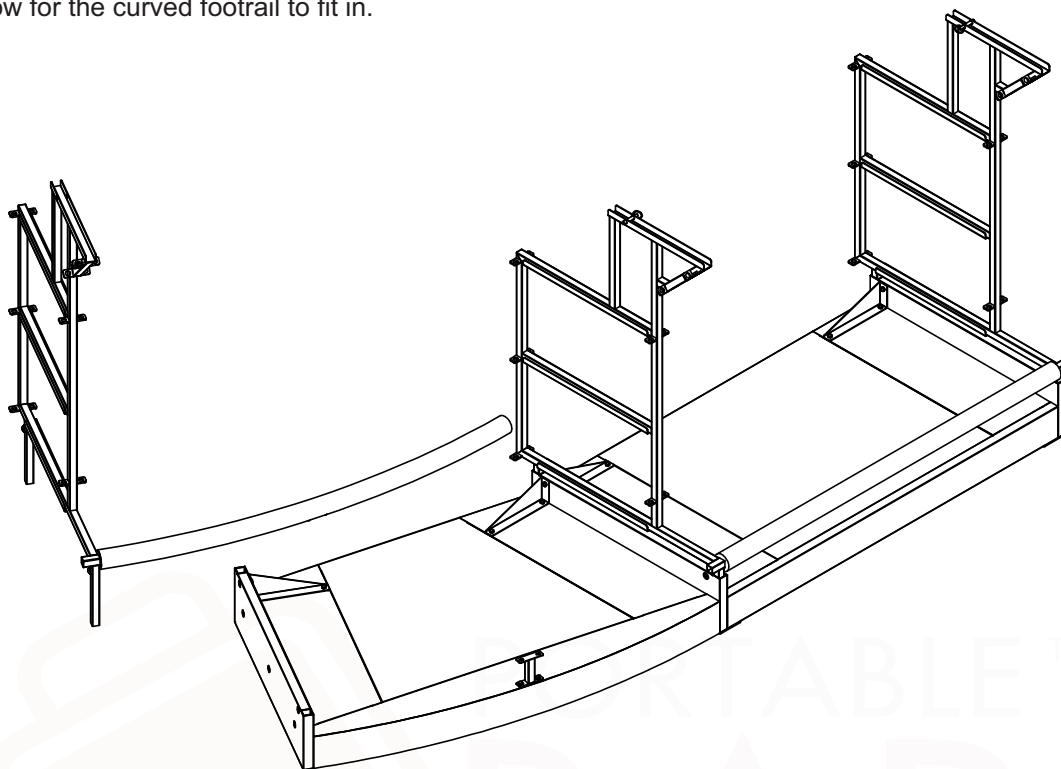

STEP 5: Align the side frame and circular footrail with the rest of the assembly. While setting the side frame in place lift up the straight segment side frame to allow the footrail to fit in.

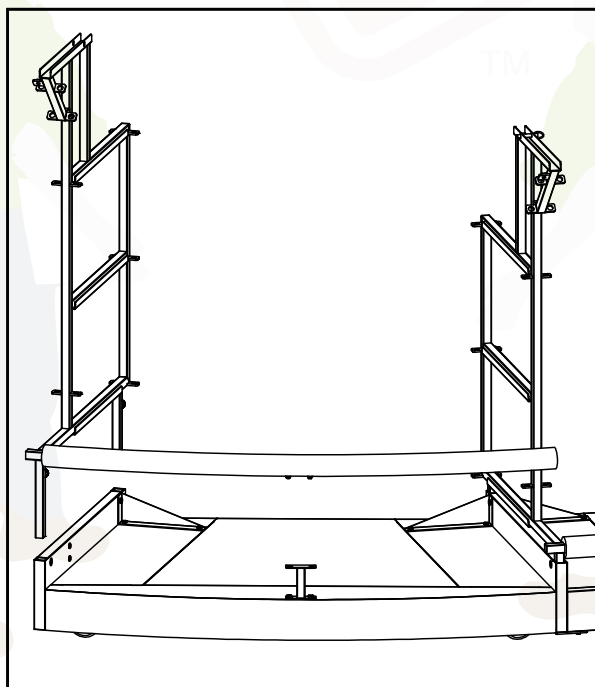


STEP 6: Tighten T bracket and install another two allen head screws to fix circular footrail in place.

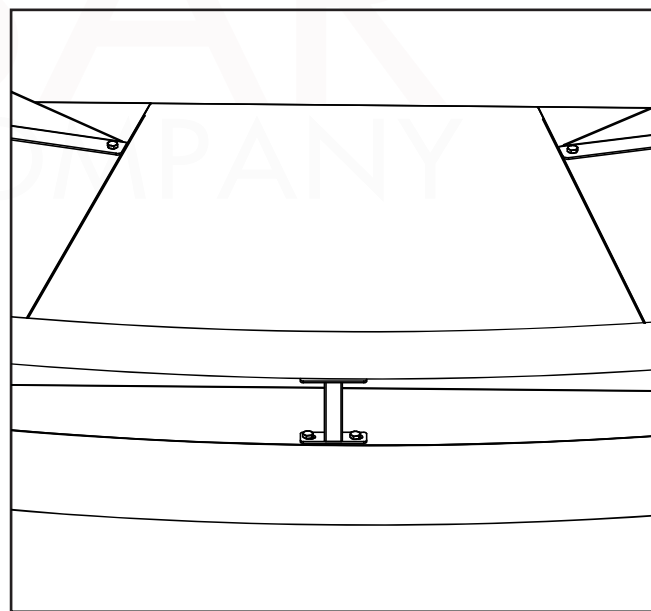




*Complete installation by following the
regular Flash Bar guide.*

Use provided anchor bracket to secure your assembly,
as shown below.

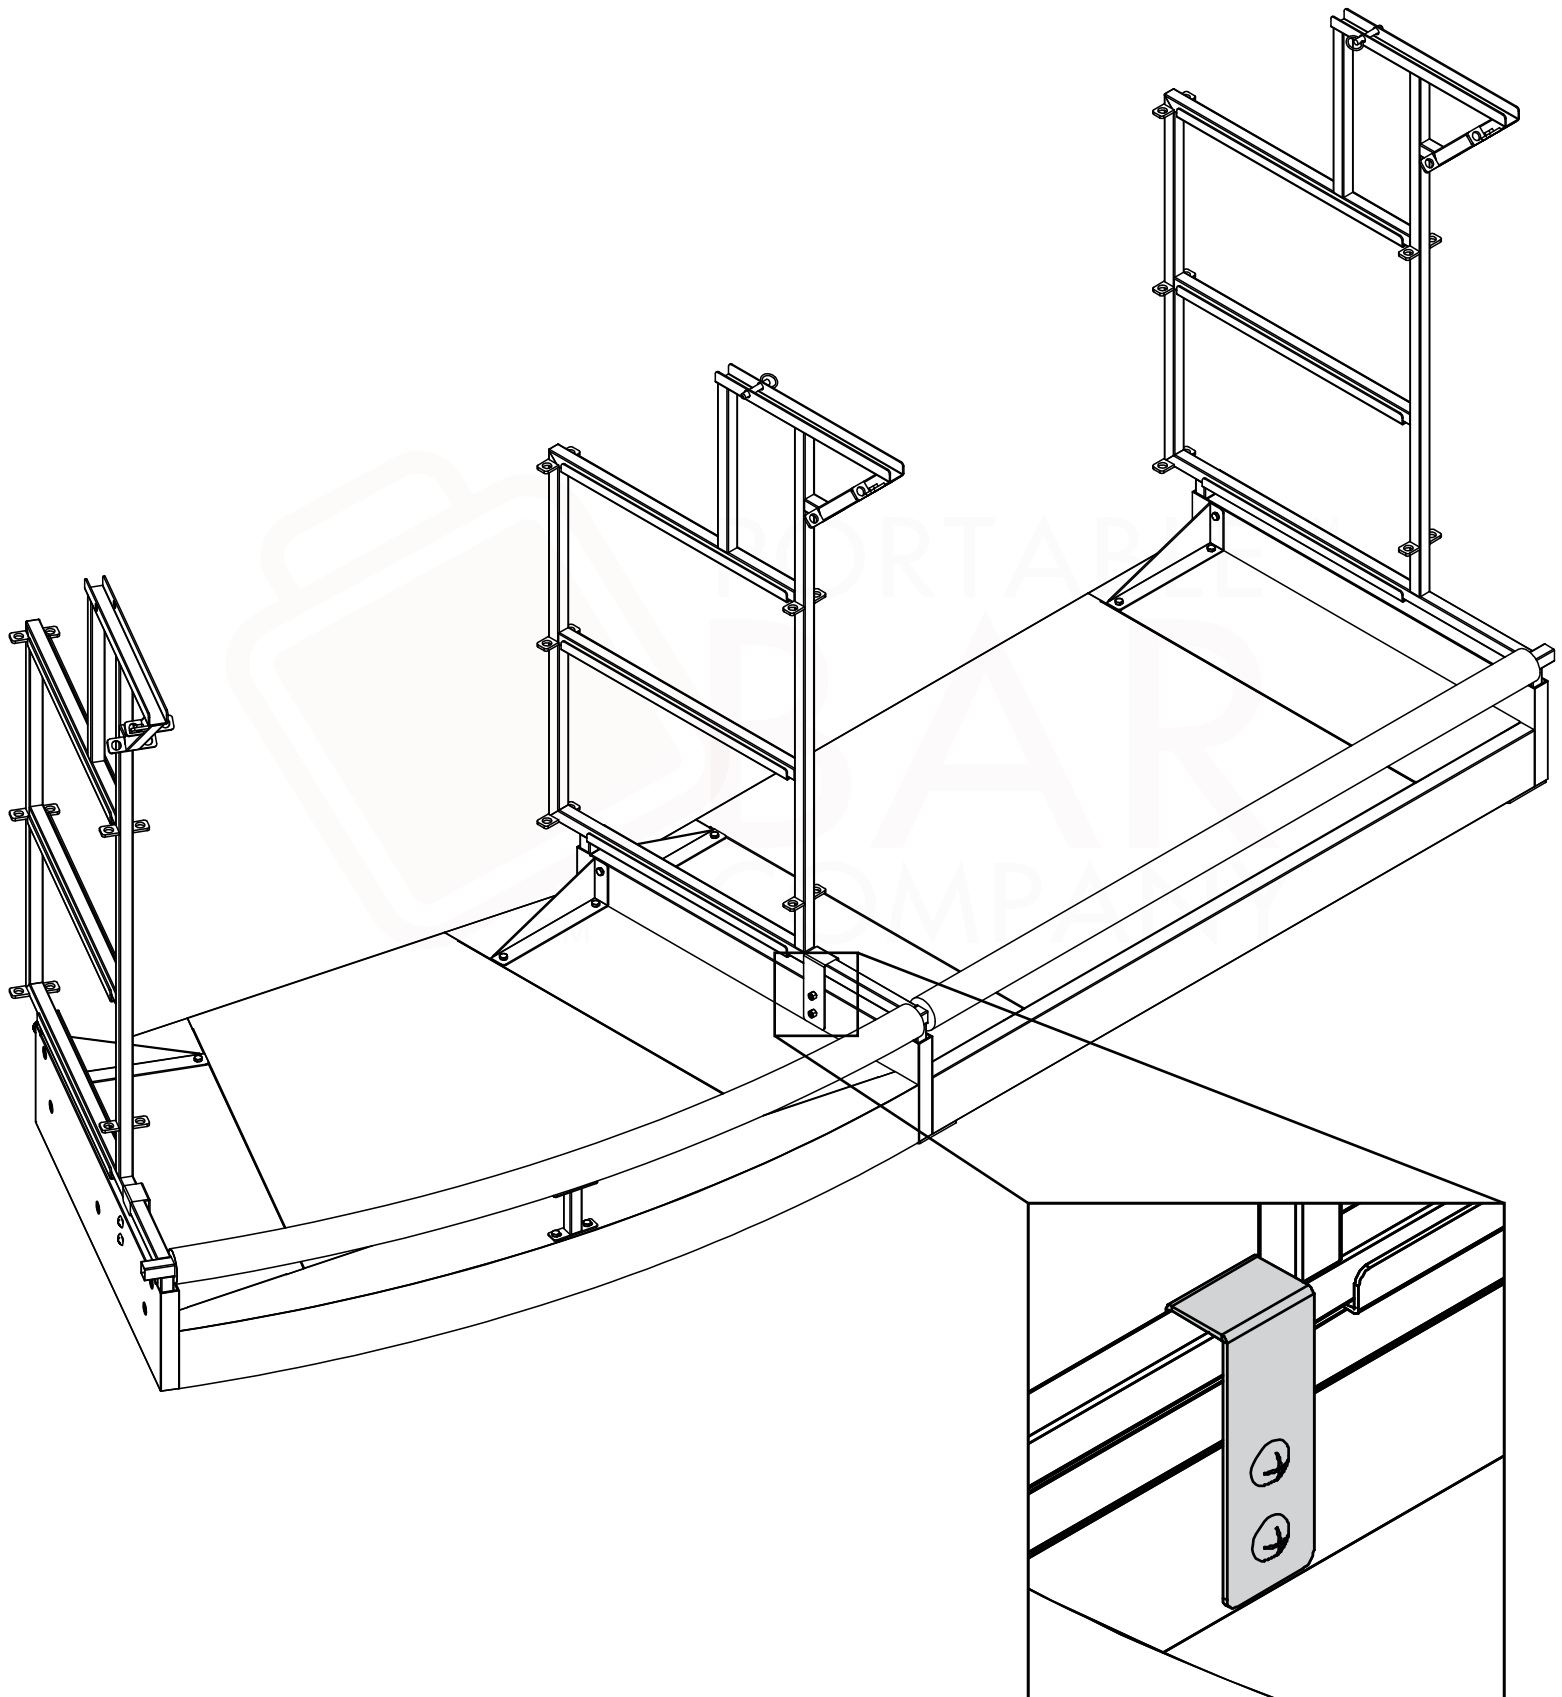


Adding a Straight Segment

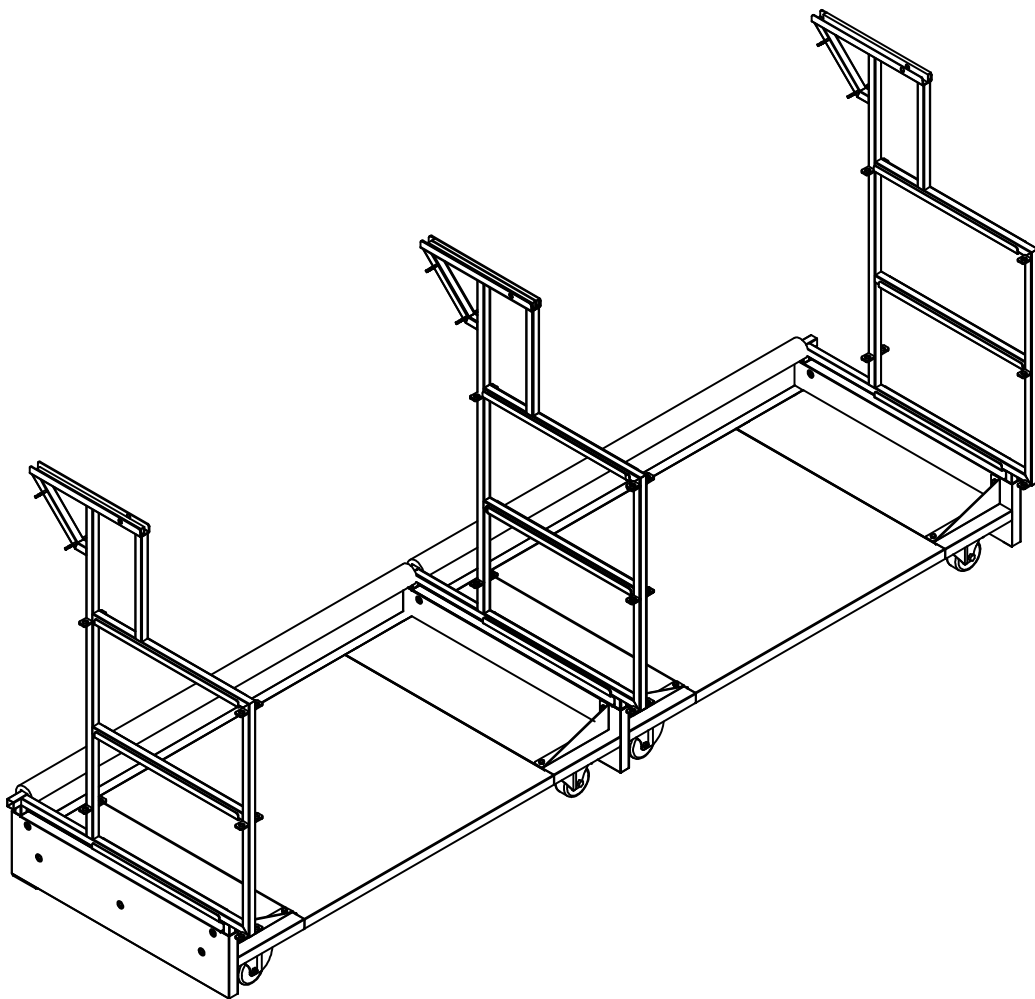

Preassembled FB Straight Base


QTY: 1

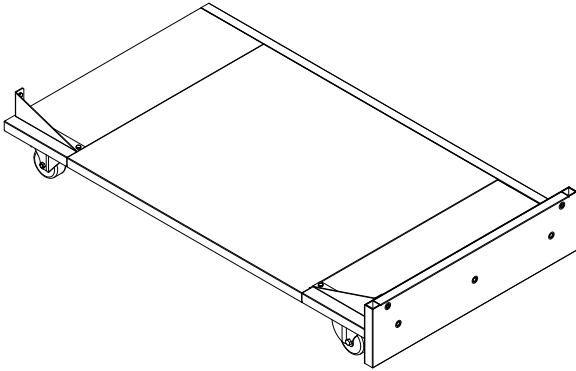

FB Leg Support


QTY: 1

*Part included with
End Cap Kit*

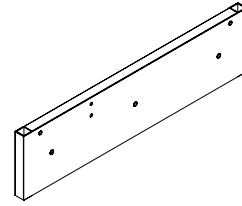

Anchor Bracket

QTY: 2

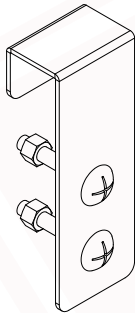

Gusset


Pre-installed



Side Frame

QTY: 2


*Part included with
Flash Bar Straight Segment*

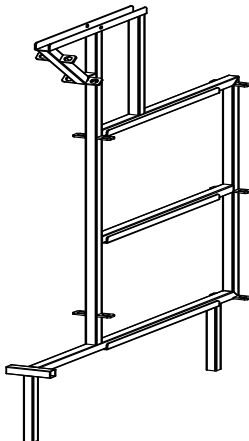


Footrail

QTY: 1


*Part included with
Flash Bar Straight Segment*

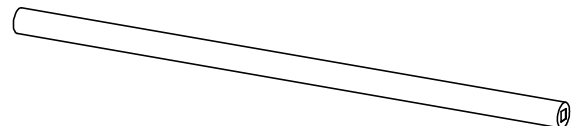


STEP 1: Move the preassembled straight segment into position next to the assembled straight segment or 90 corner and align it with the side support of the straight segment base.

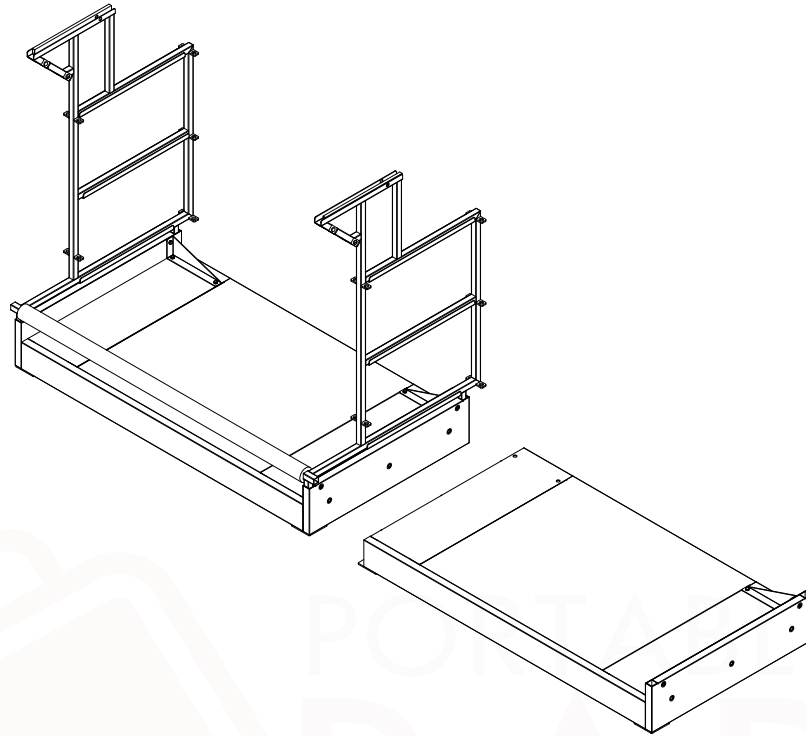


STEP 2: Lift stainless steel access panel on top of the base.

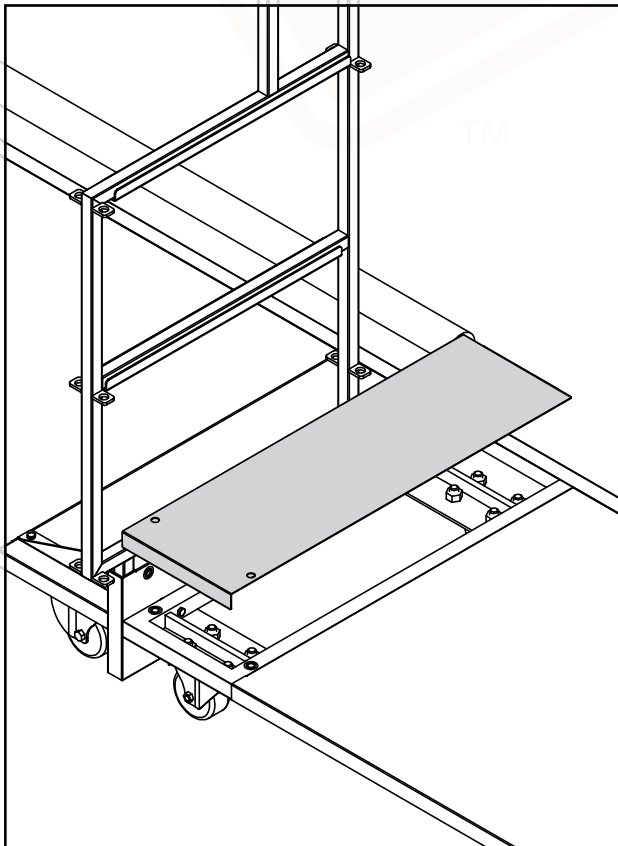

STEP 3: Attach side frame support to preassembled base using the provided 10mm hex head bolts.

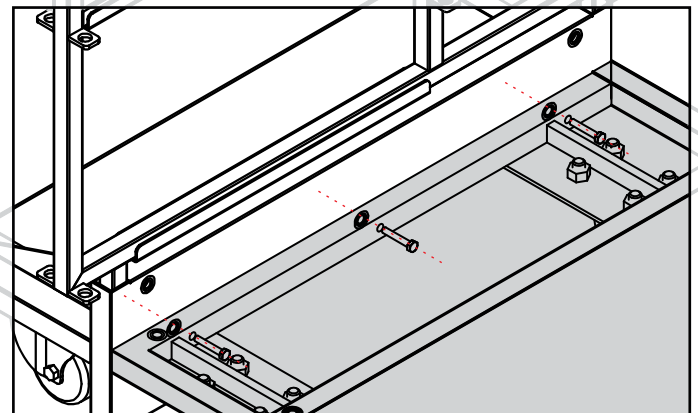


STEP 4: Install triangular gusset using provided 10mm hex head bolts.

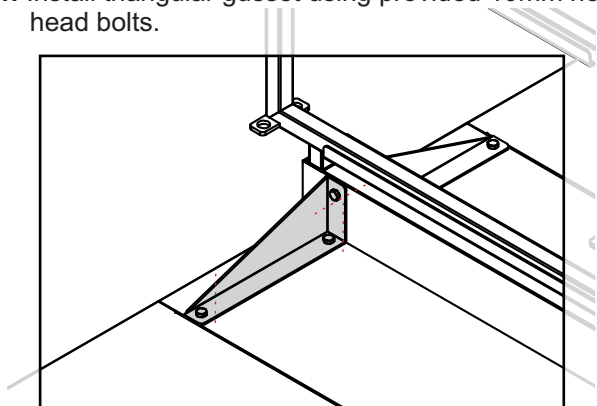


STEP 5: Remove feet from side frame and with two people connect side frame to footrail.

Note: There is no hardware so this must be done with two people for balance and tension to hold the footrail in place

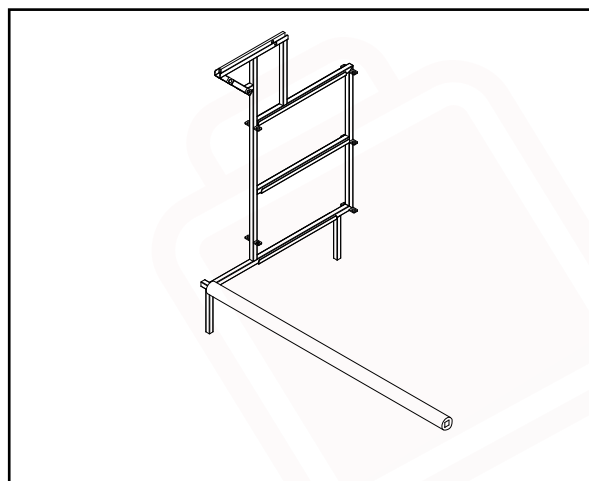


Complete installation by following the regular Flash Bar guide.

STEP 6: Lift the frames and footrail assembly in unison and insert the side frame posts to the corresponding frame support locations on the base.

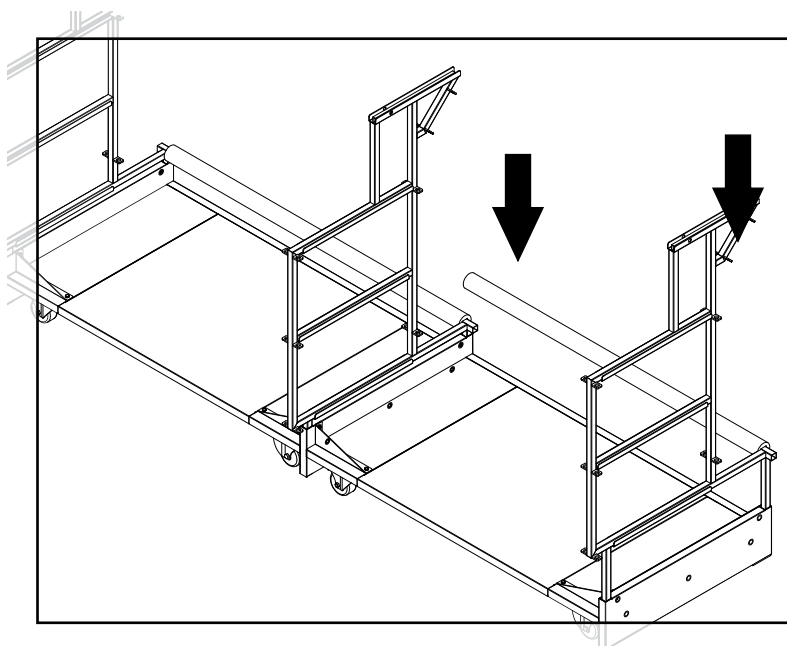

Use provided anchor bracket to secure your assembly,
as shown below.

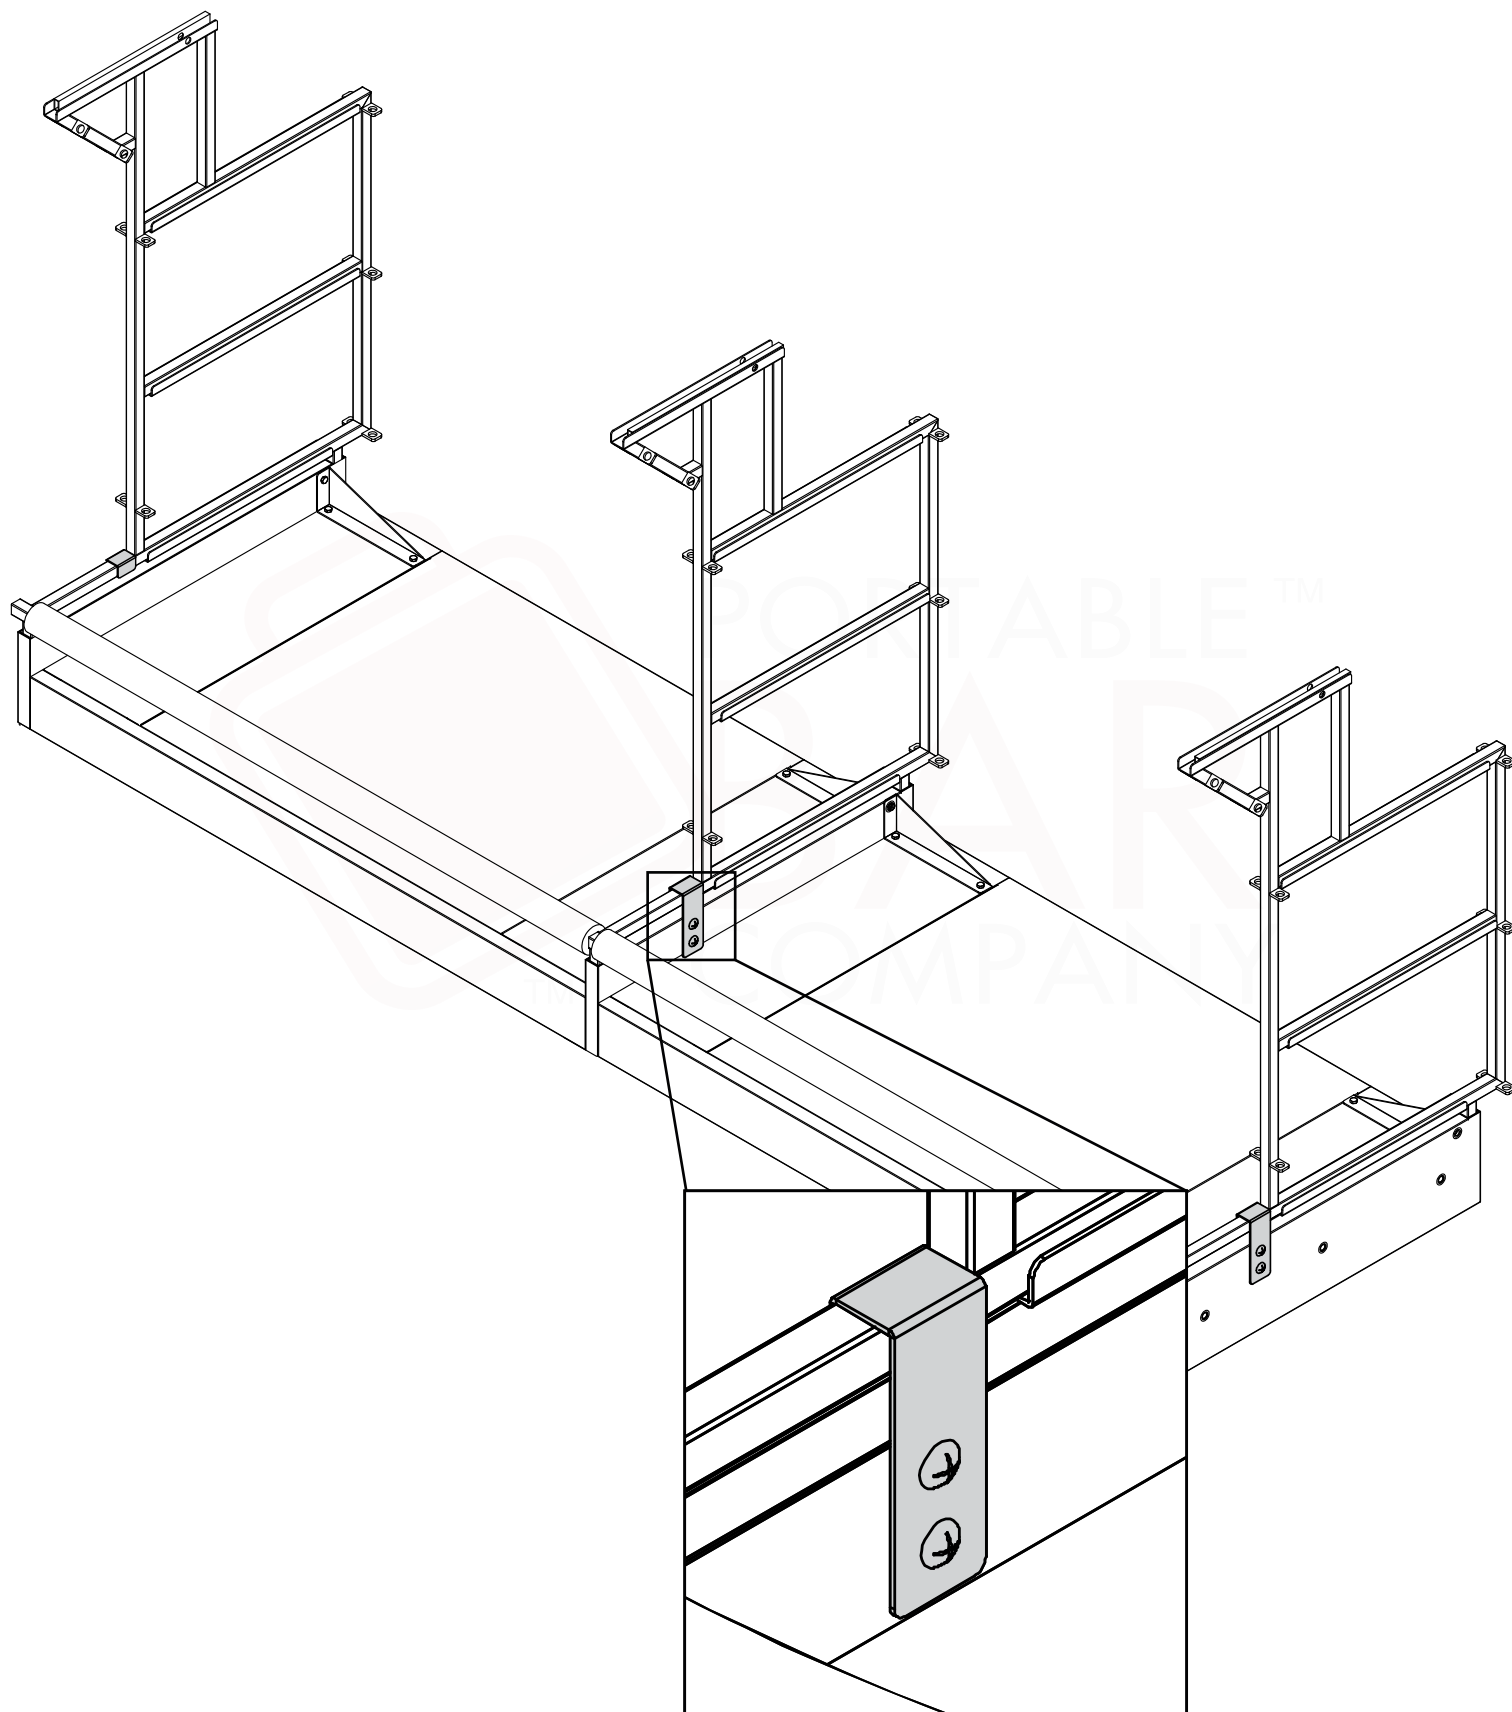



Contact us

Tel # 877-958-7901

Fax # 866-659-3353

E-mail: info@theportablebarcompany.com

Visit us at

www.theportablebarcompany.com

