





SALOON DOOR SETUP GUIDE




- **Read all the instructions before installing.**
- **Remove all packing materials before you start.**
- **This installation requires basic mechanical skills.**
- **Proper installation is the responsibility of the installer.**
- **Product failure due to improper installation is not covered under the warranty.**
- **Keep this instruction manual.**

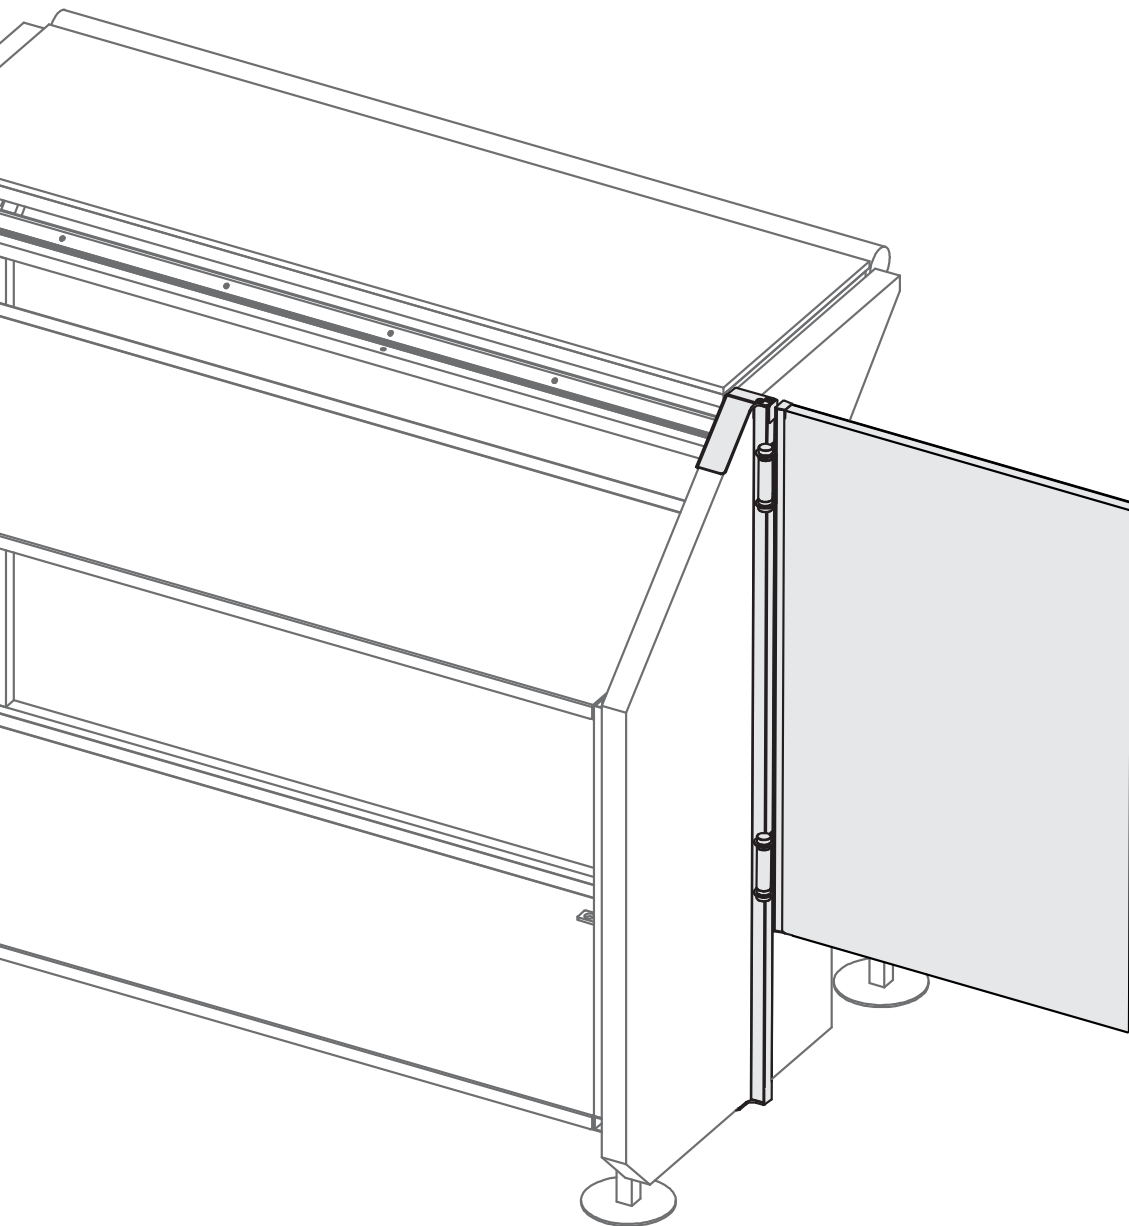


Door and Side Frame
QTY: 1ea

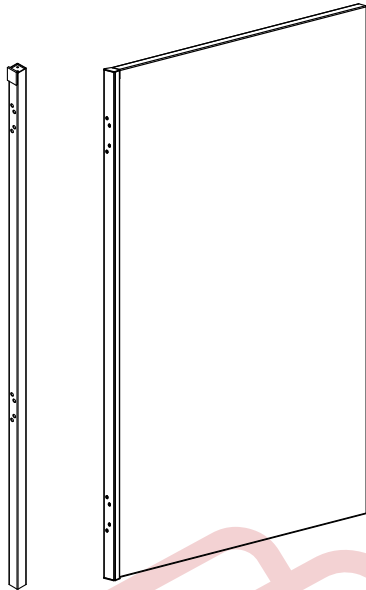


ACP Panel
QTY: 1

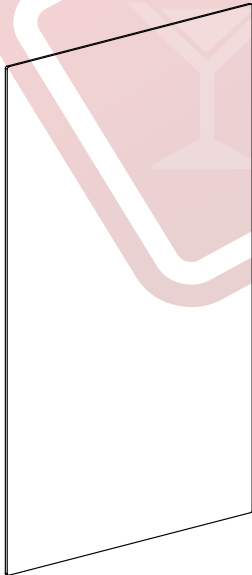


Double Swing Hinge
QTY: 2

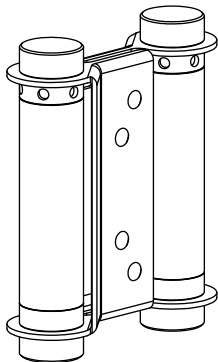

Top Bracket
QTY: 1

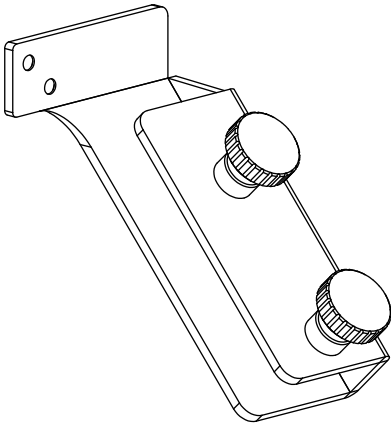


Bottom Bracket
QTY: 1

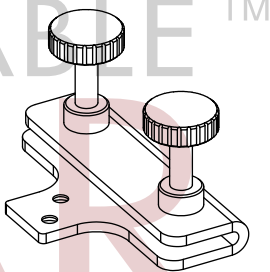

Allen Screws
QTY: 16



Hinge Adjustment Kit
QTY: 1 bar & 8 pins



Note: Parts are not to scale.

STEP 1: Install hinges by aligning the hinge screw holes with the holes on the side frame. Install provided allen head screws as shown below. Leave both hinges slightly loose, you'll fully tighten all hinge screws later in the setup process.

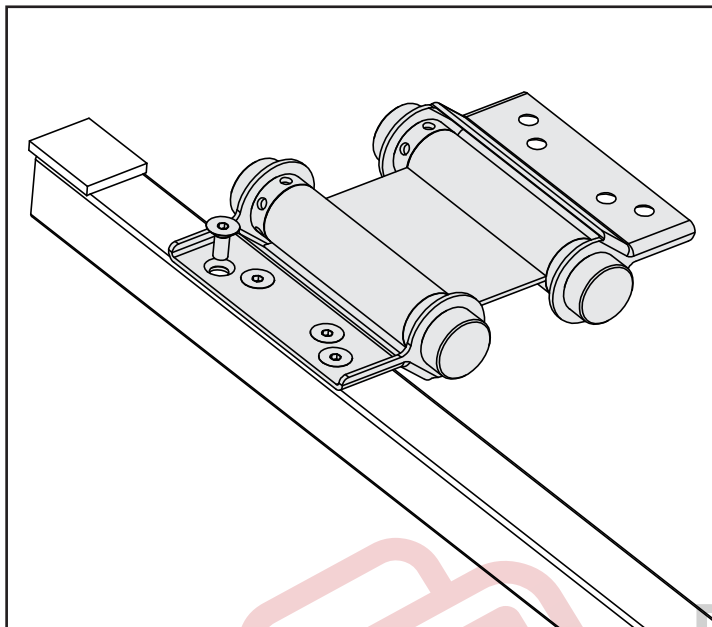


Figure 1

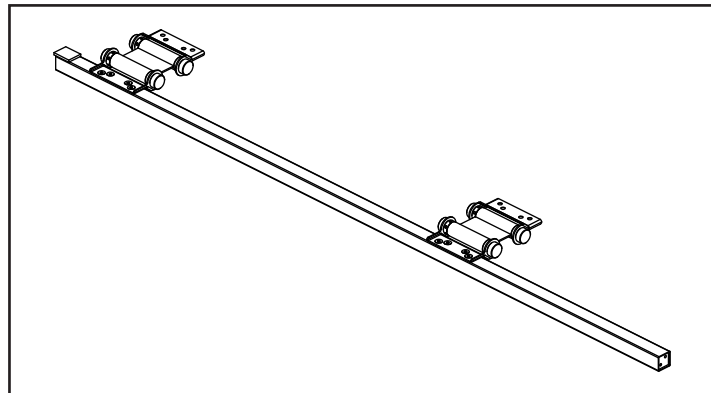


Figure 2

STEP 2: Set door next to the side frame so you may attach hinges to the door. Install provided allen head screws by aligning the hinge screw holes with the holes on the door. Leave both hinges slightly loose.

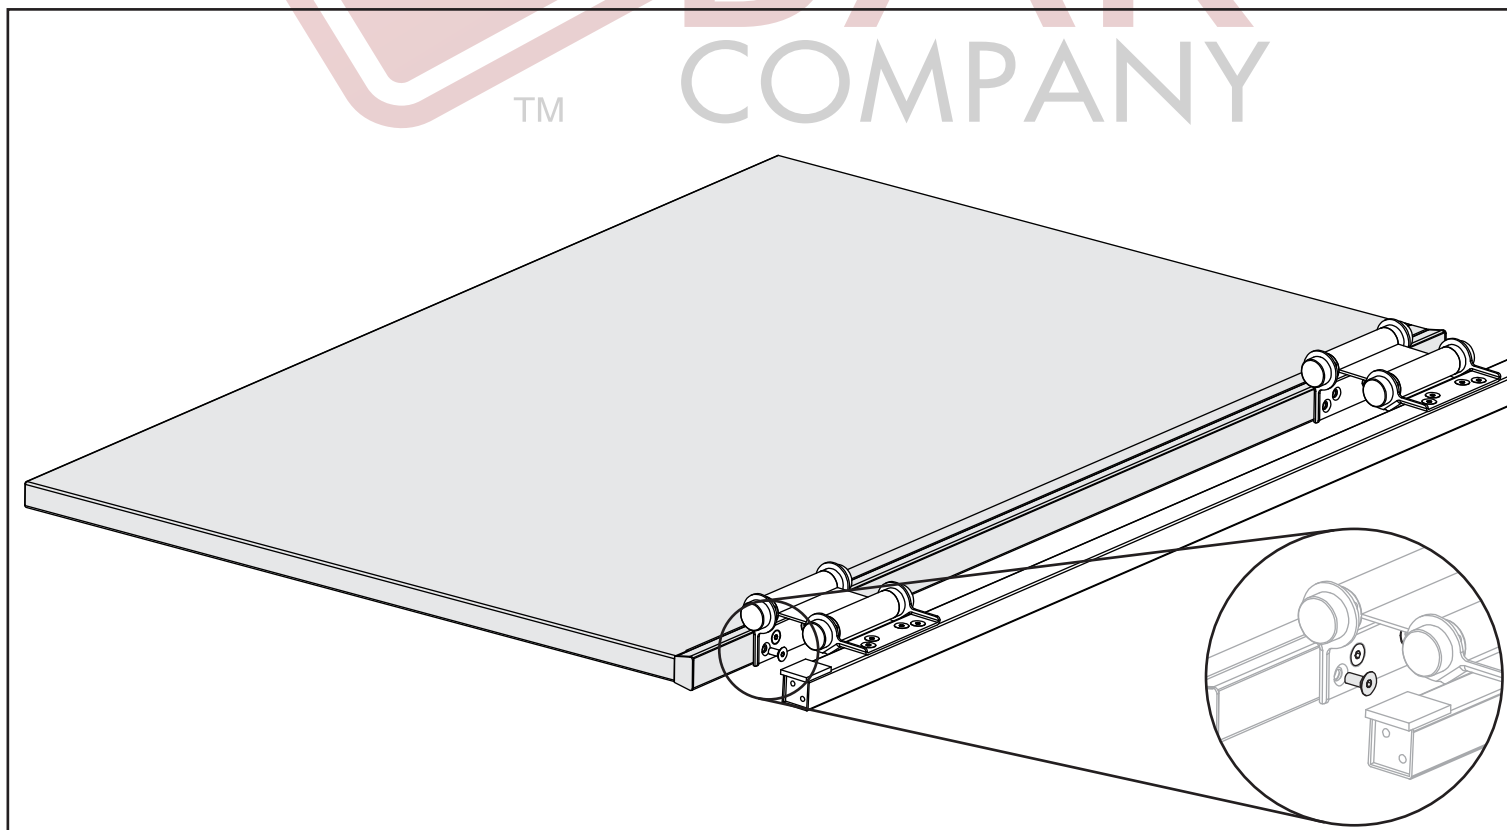


Figure 3

STEP 3: Install top and bottom brackets on a Flash Bar's End Cap by aligning them with the inner edge of the End Cap. Hand tighten all thumbscrews so the brackets do not move around but don't fully tighten any of them. Try to align both brackets together using their screw holes as reference.

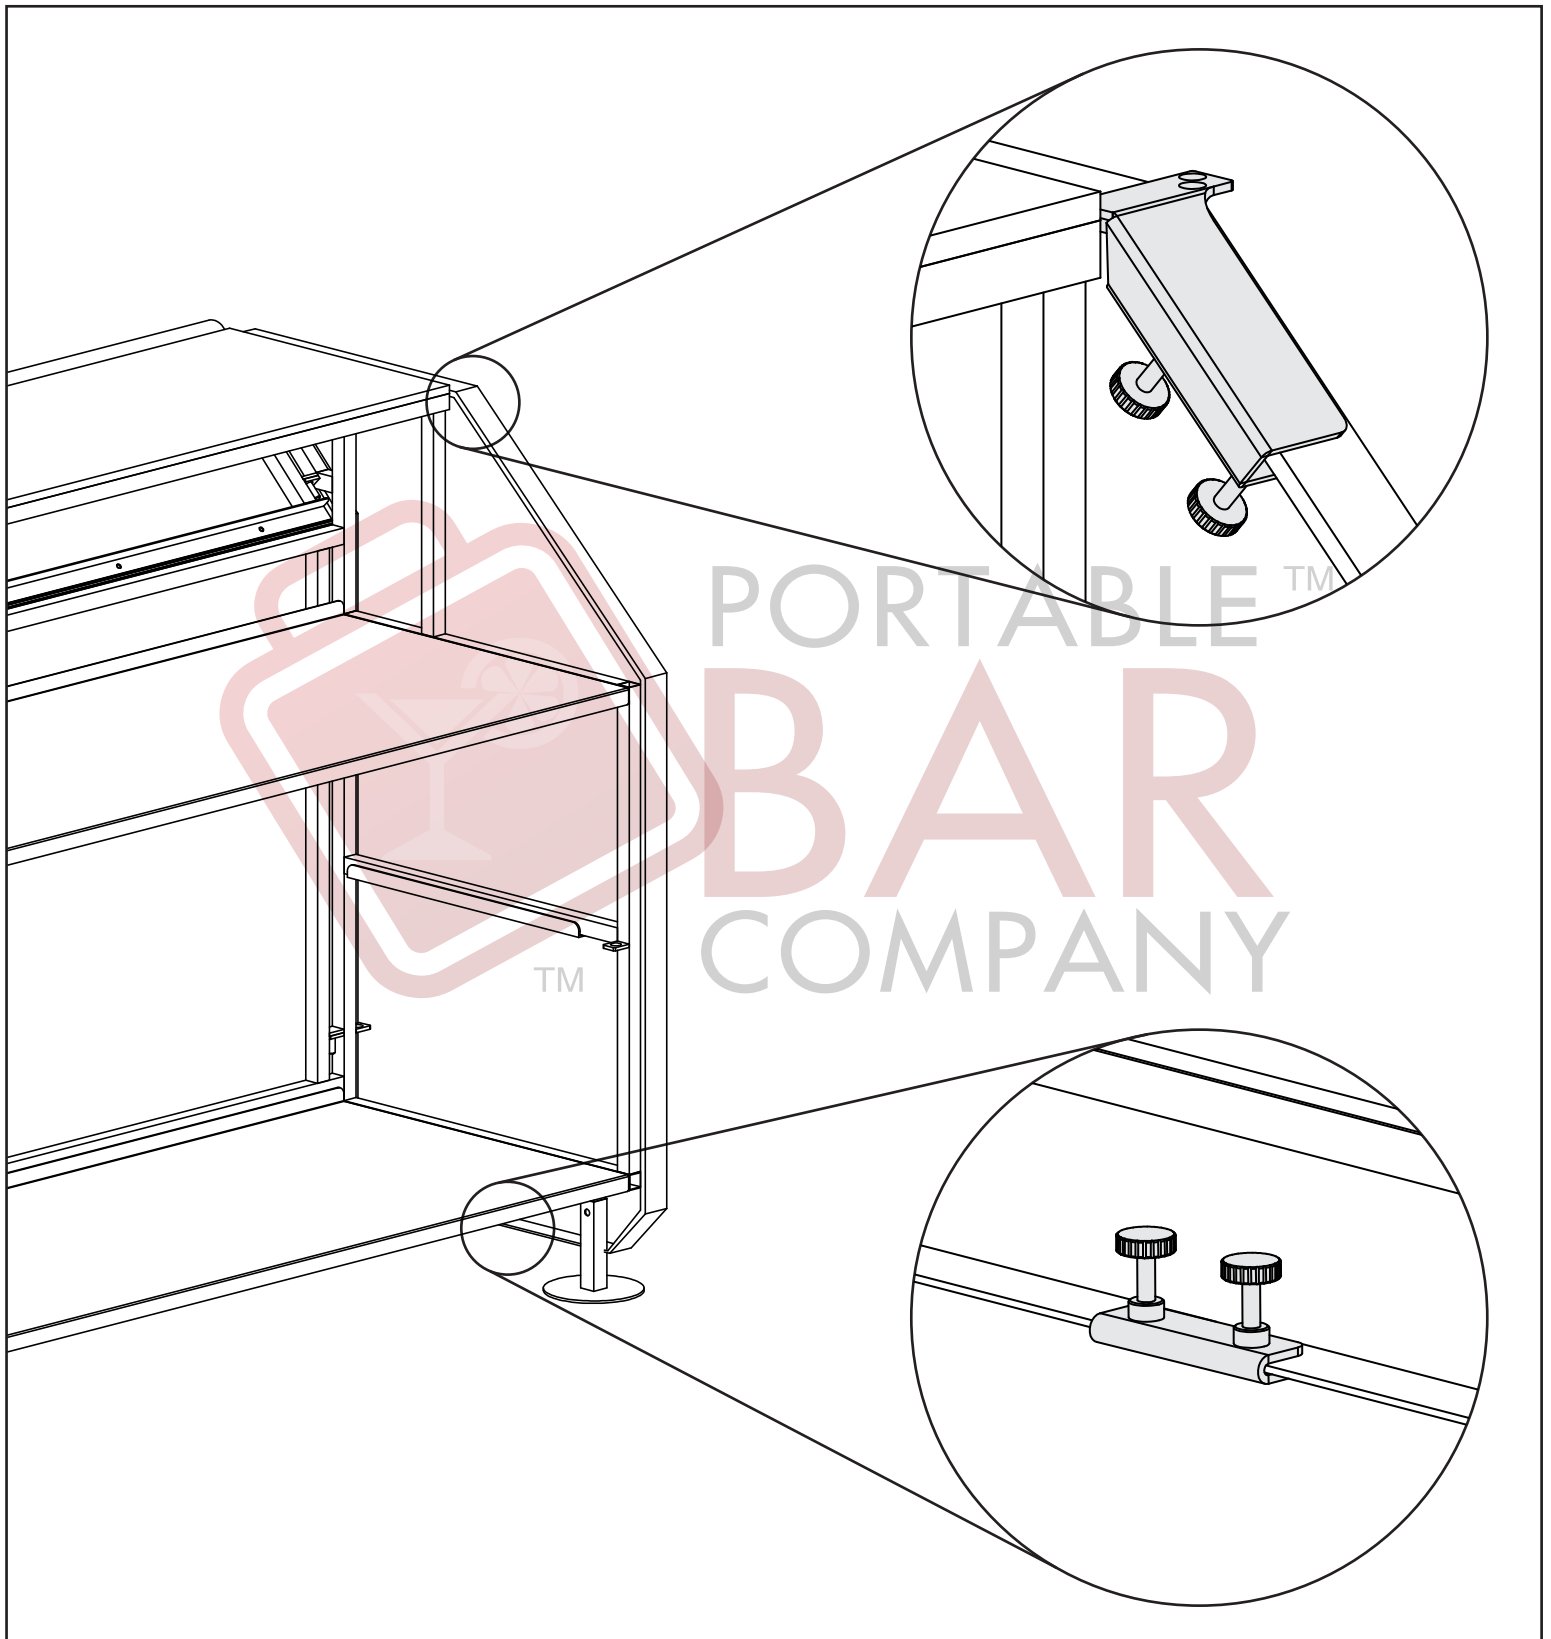


Figure 4

STEP 4: Align the door assembly with the recently installed top and bottom brackets.

Note: Two people are required to perform this step.

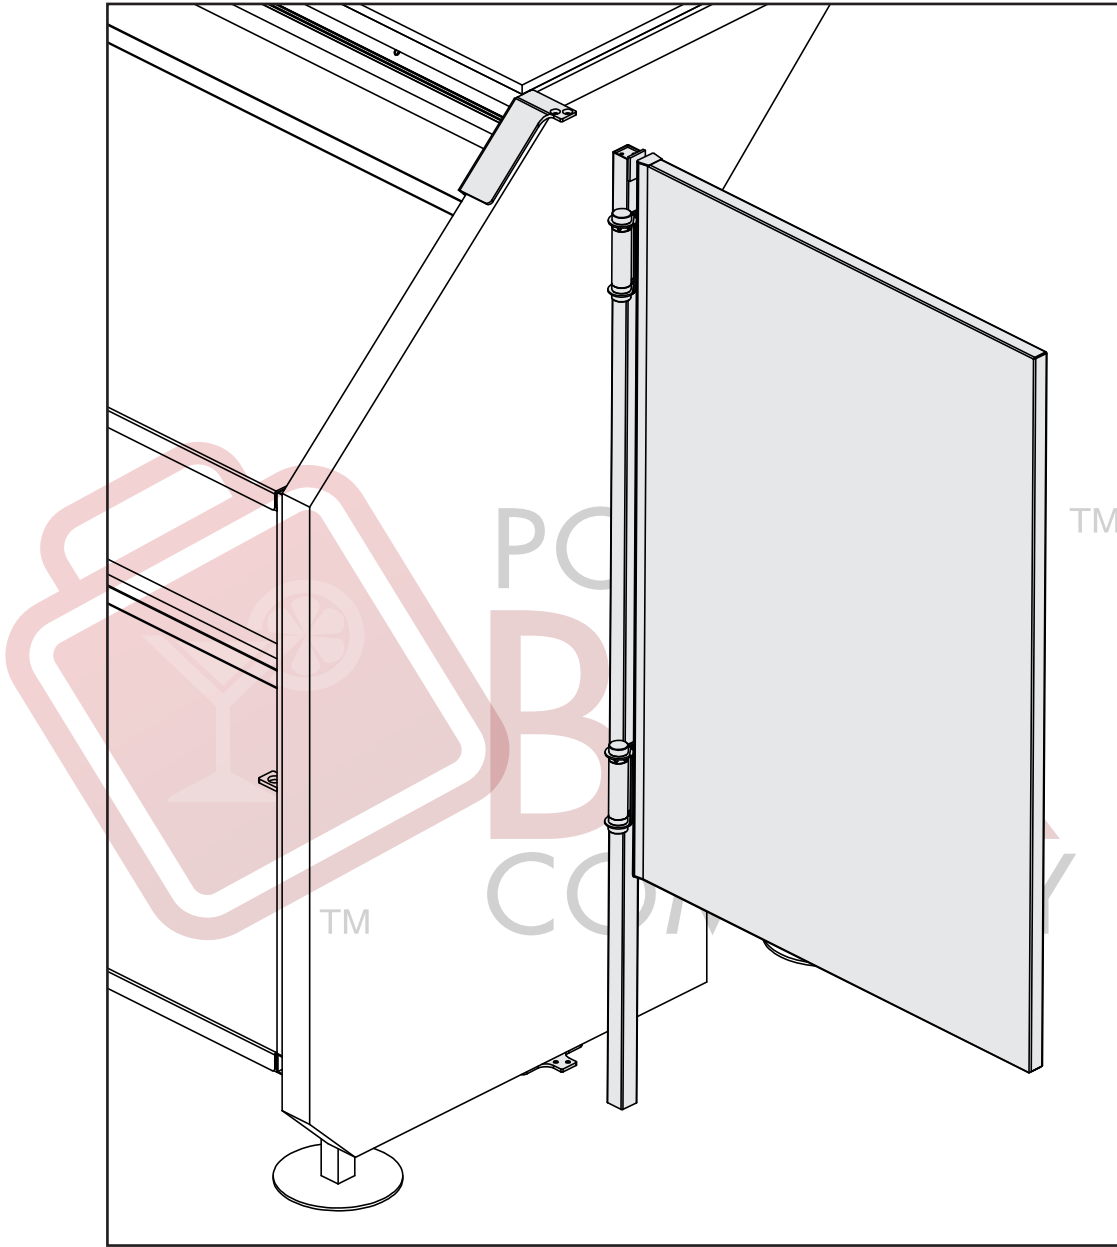


Figure 5

STEP 5: Hold door assembly steady while top and bottom allen screws are being installed.

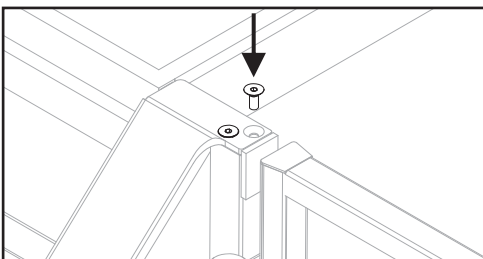


Figure 6

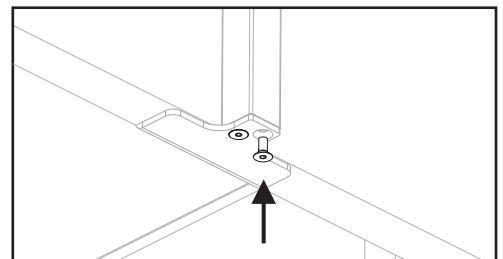


Figure 7

STEP 6: While holding the door straight; fully tighten all screws that have been installed until this point.

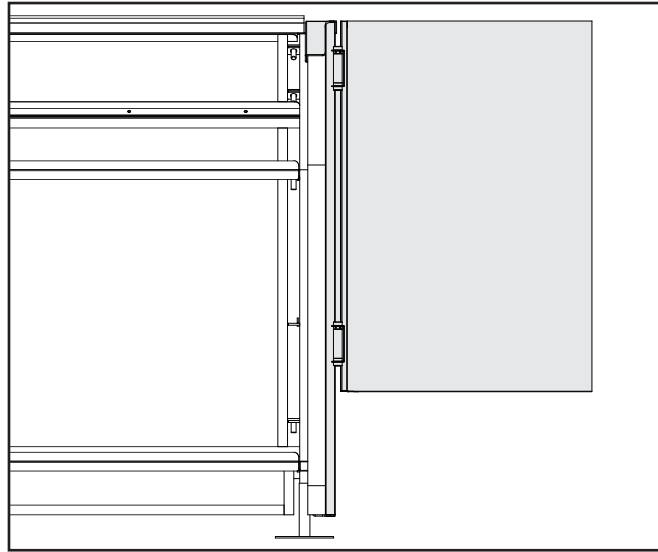


Figure 8

STEP 7: Adjust the hinge tension using provided adjustment kit. Insert rod in the closest hole to the bar and move it away from it. While holding that position, insert one of the provided pins in the closest hole to the bar.

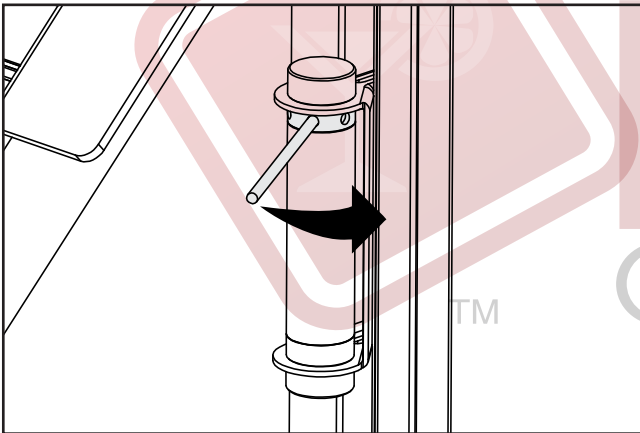


Figure 9

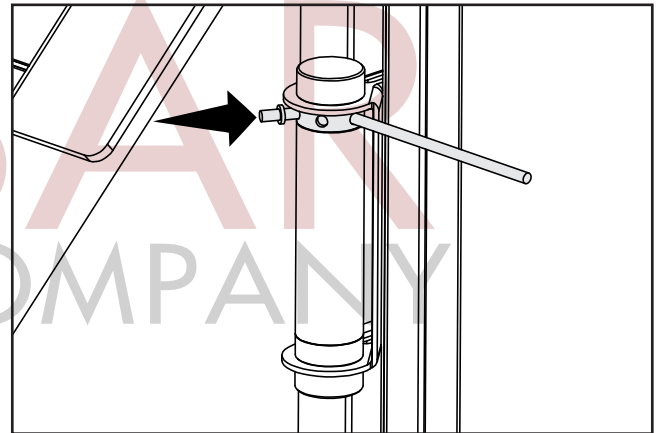


Figure 10

STEP 8: Repeat Step 7 for every spring in each hinge (two springs per hinge).

ACP Panel Swapping Instructions

STEP 1: Follow Steps 4 to 6 in reverse order to remove saloon door assembly from your Flash Bar.

STEP 2: Lay down door on a flat surface. Locate the screws in the bottom part of the door. Remove screws in order to loosen bottom bracket as shown in the diagram below:

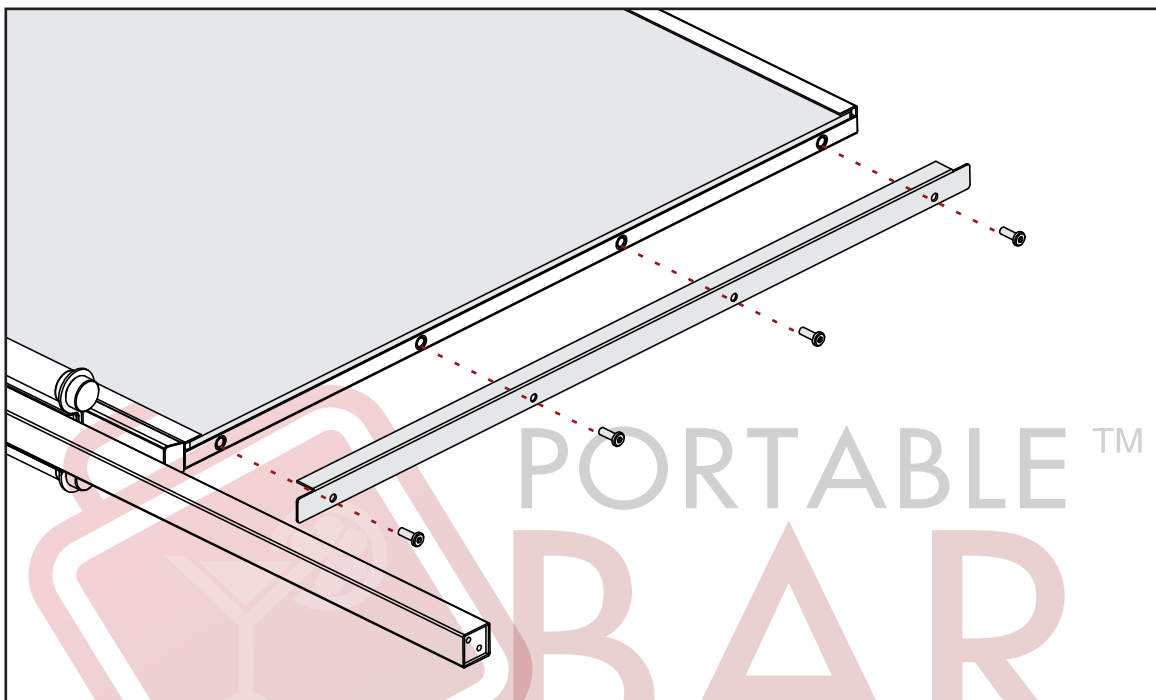


Figure 11

STEP 3: Slide out ACP panel. To install a new ACP panel follow Steps 1 to 3 in reverse order.

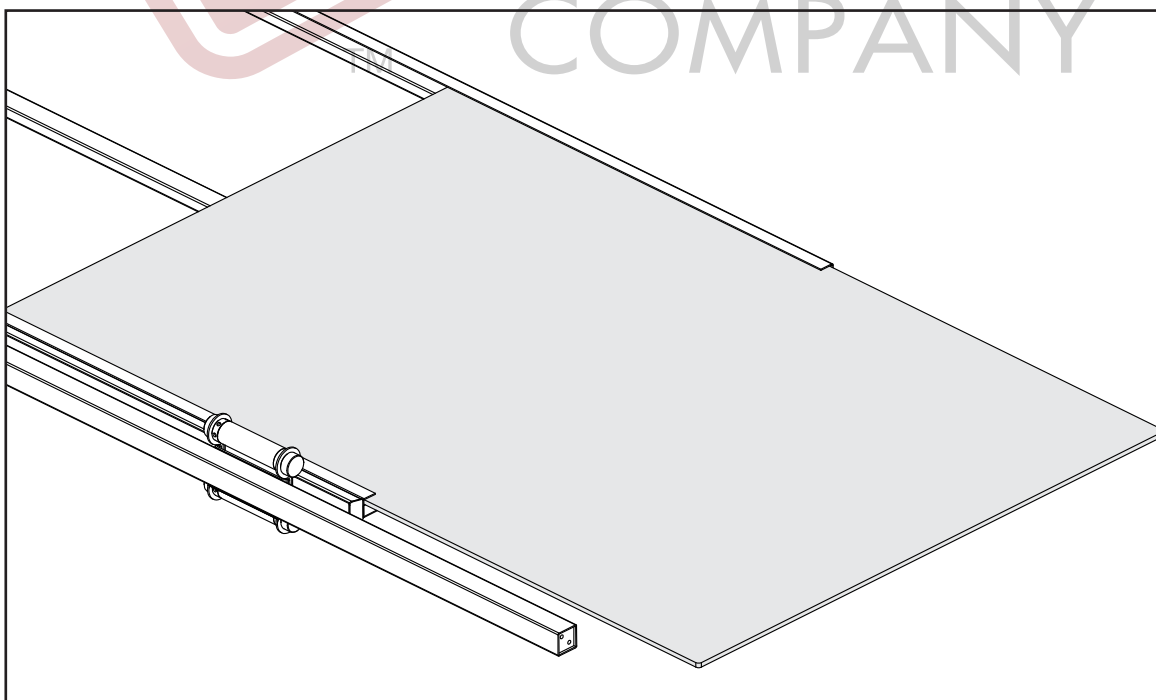


Figure 12

Note: Each ACP panel has a white and a silver side. You may choose which side to show according to your preference.



Contact us

Tel # 877-958-7901

Fax # 866-659-3353

E-mail: info@theportablebarcompany.com

Visit us at

www.theportablebarcompany.com

