




STAINLESS STEEL FOLD+ROLL BACK BAR SETUP GUIDE

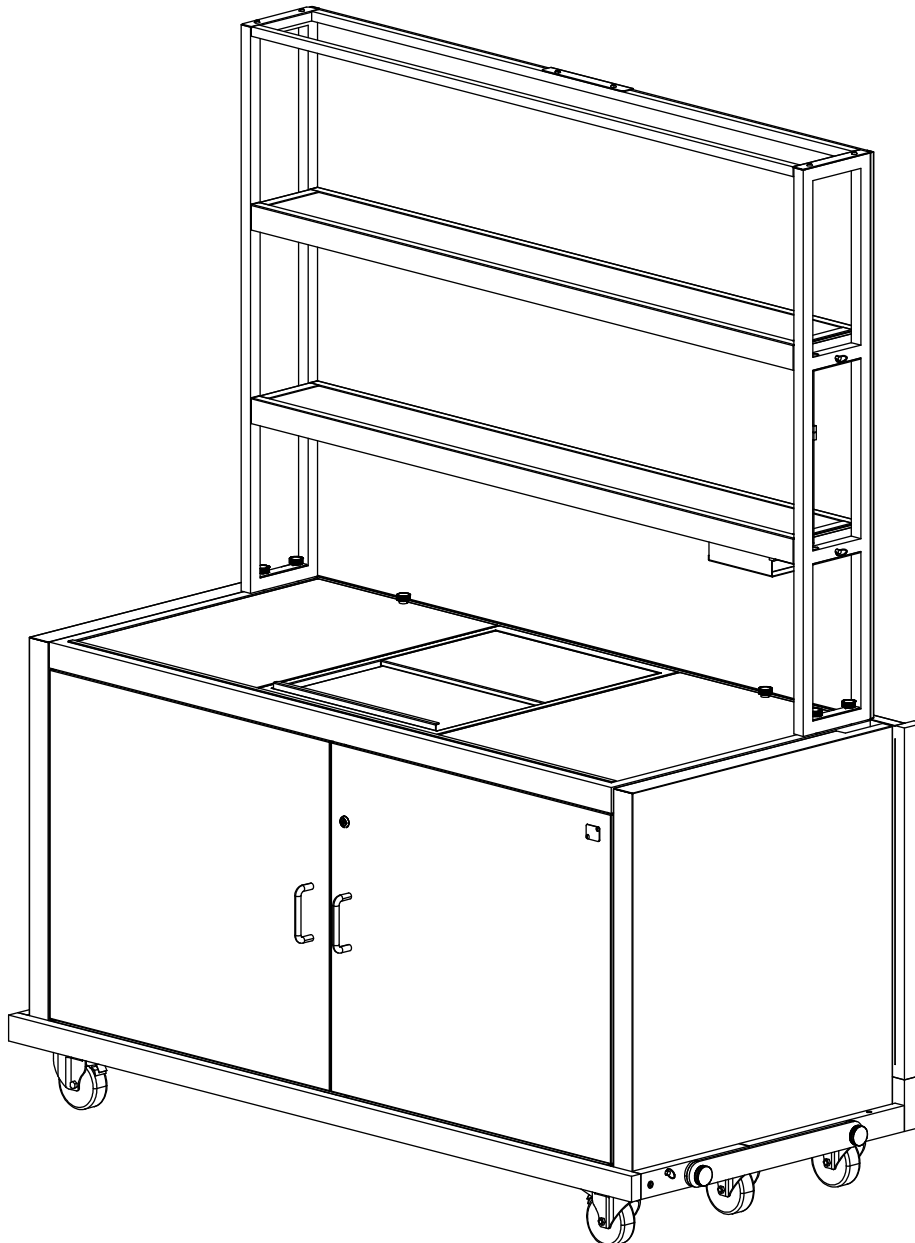


- Read all the instructions before installing.
- Remove all packing materials before you start.
- Remove all protection films from acrylic panels.
- This installation requires basic mechanical skills.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the warranty.
- Keep this instruction manual.


Note: This setup requires 2 or more persons.

Main Cabinet

QTY: 1

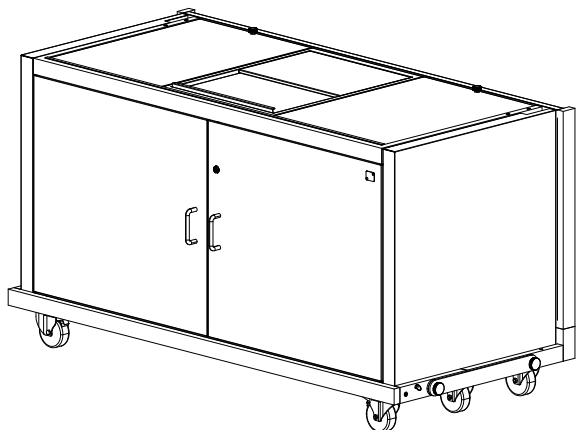**Upper Frame**

QTY: 1

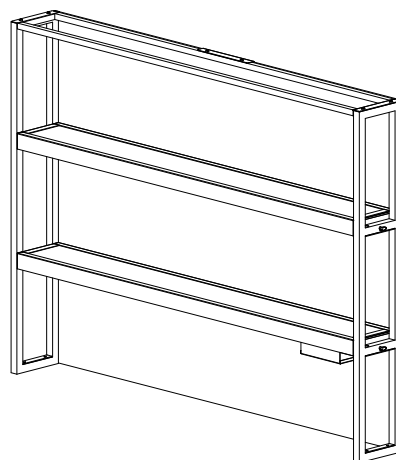**Cover**

QTY: 3




See page 11.

Lock Pin

QTY: 8

**Thumbscrews**

QTY: 4

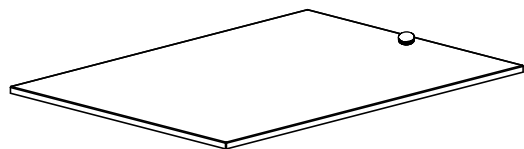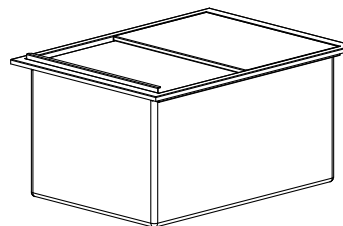
**Your choice of:****Flat Insert** (Pre-Installed on Main Cabinet)**Ice bin** (Pre-Installed on Main Cabinet)

OR


Note: Parts are not to scale.

Note: LED Kit is sold separately.


LED Controller (With Velcro tape)
QTY: 1

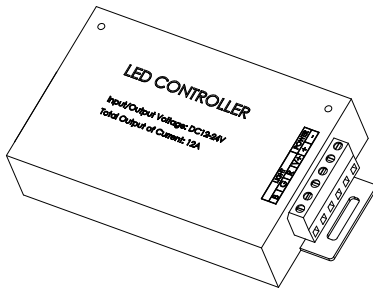


Power Adapter
QTY: 1

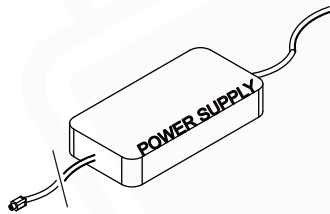

LED Strip
QTY: 2

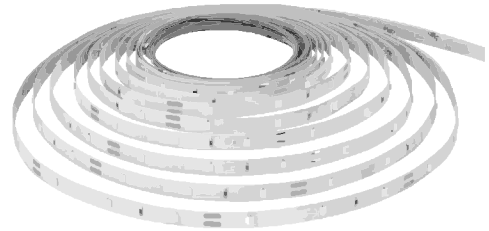

Battery
QTY: 1

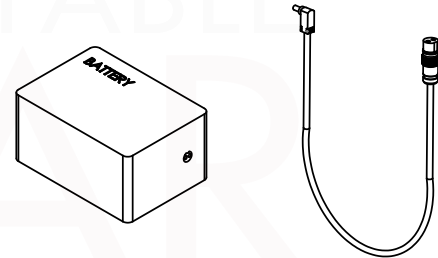

STAINLESS STEEL FOLD + ROLL BACK BAR ASSEMBLY SETUP STEPS

5

STEP 1: Using two people, lift upper frame and place onto main cabinet.

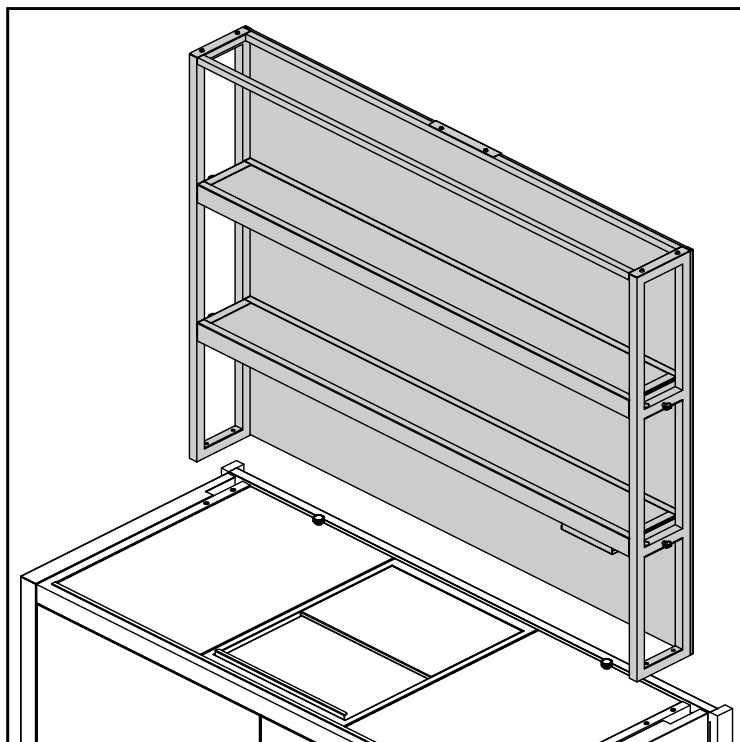


Figure 1

STEP 2: Align the back part of the frame with the back edge of the working surface, as shown below:

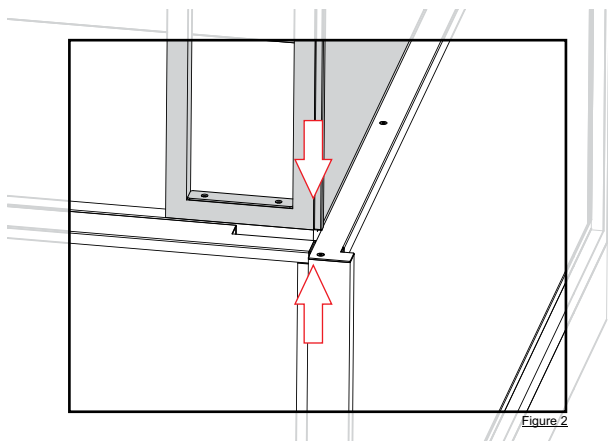


Figure 2

STEP 3: Install thumbscrews on both sides of the frame.

Note: Do not overtighten thumbscrews.


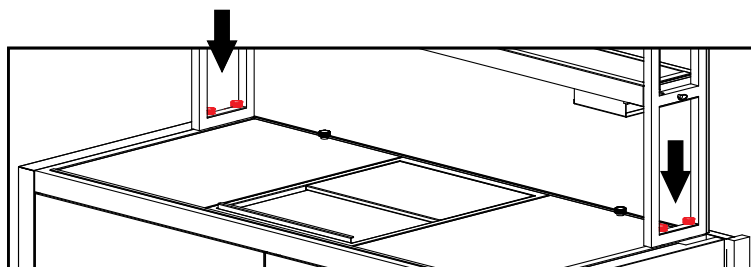


Figure 3

Figure 4. Full Assembly

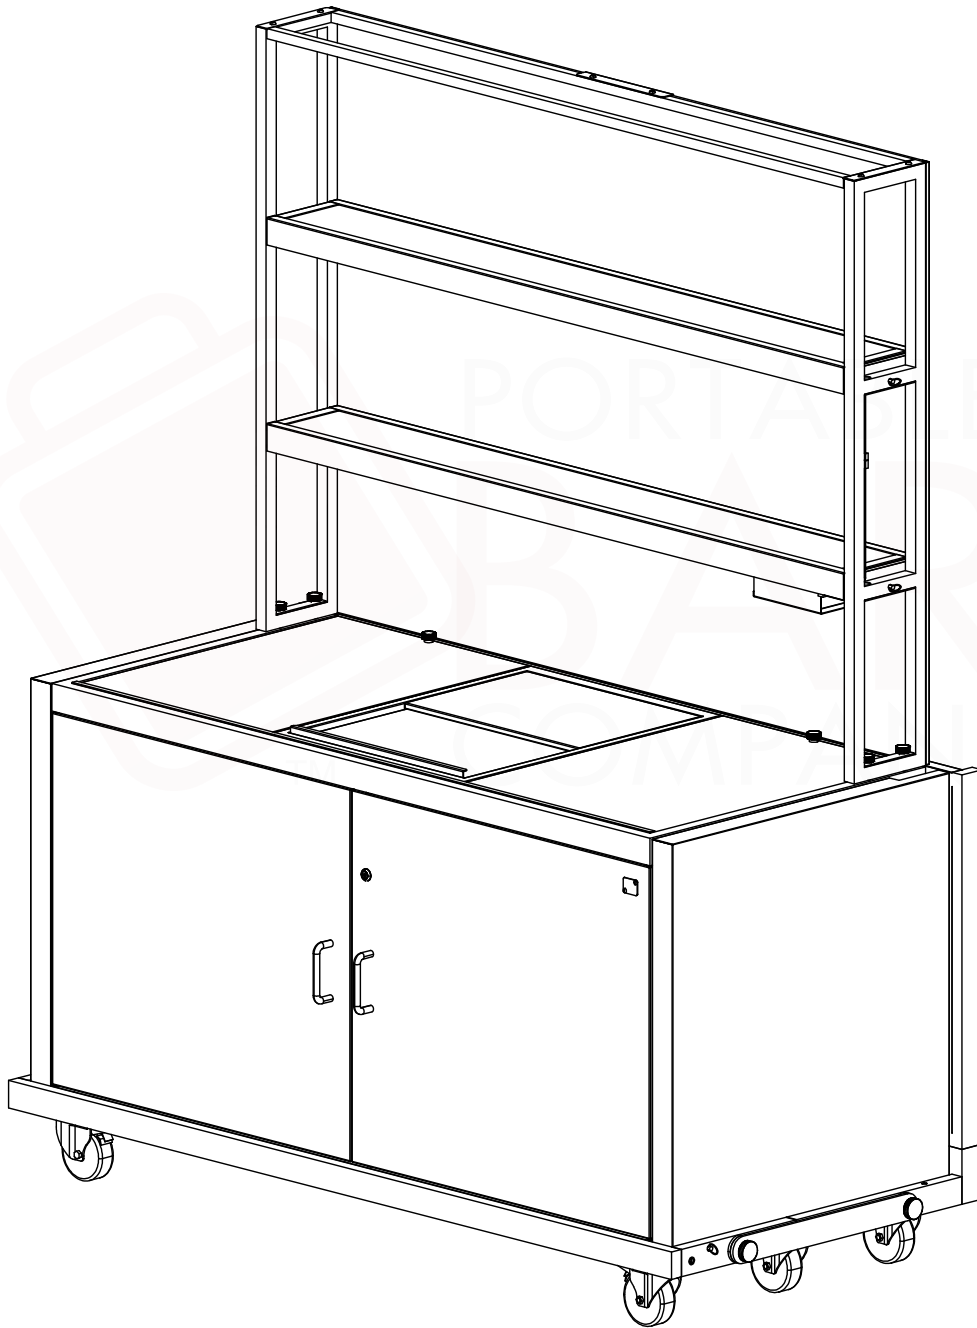

Folding the Fold+Roll Back Bar

Note: Disconnect controllers and batteries before breaking down the bar.

STEP 1: Uninstall thumbscrews on both sides of the upper frame.

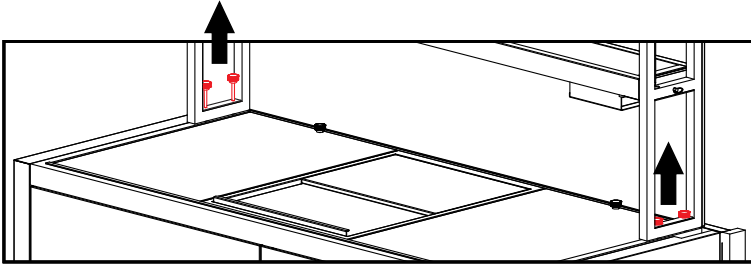


Figure 5

STEP 2: Take the Upper Frame assembly out and place it temporarily on a flat and secure surface using two people.

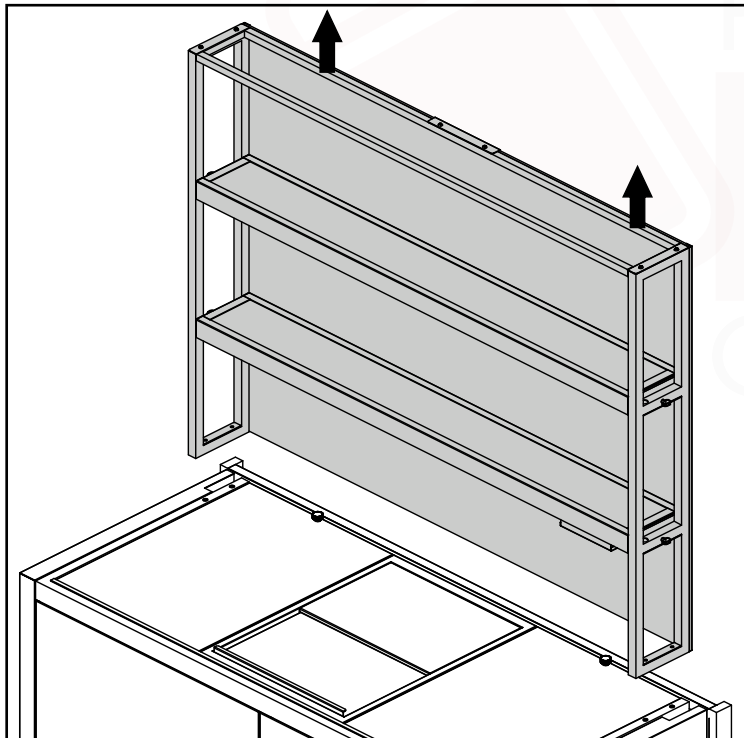


Figure 6

STEP 3: Fully open both doors.

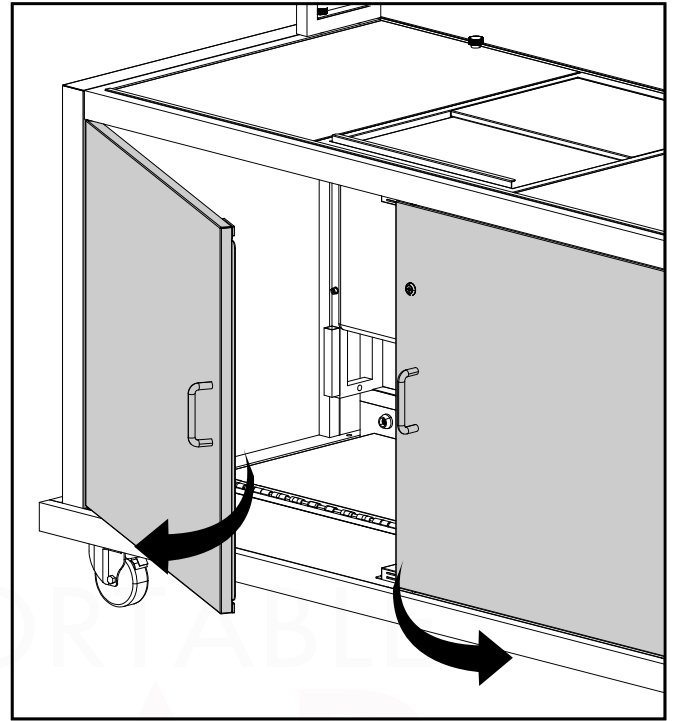


Figure 7

STEP 4: Pull down the spring latch to release the door. Slightly tilt and pull out the door. Do this step with both doors.

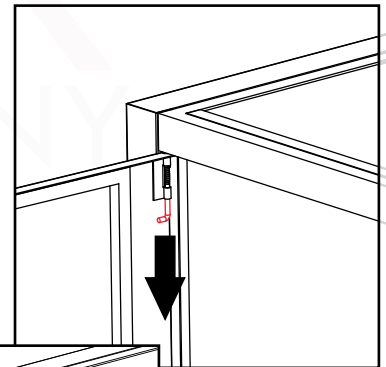


Figure 8

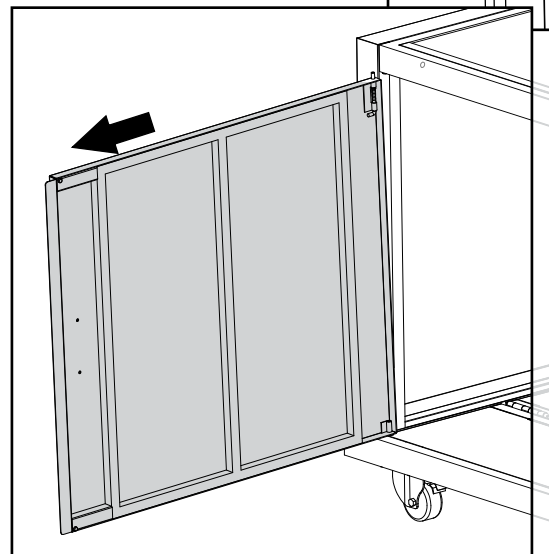


Figure 9

STAINLESS STEEL FOLD + ROLL BACK BAR FOLDING STEPS

STEP 5: Take out Ice Bin to then pull the spring latches on the sides of the bar to release the working surface. Hold the working surface while moving it to avoid damage.

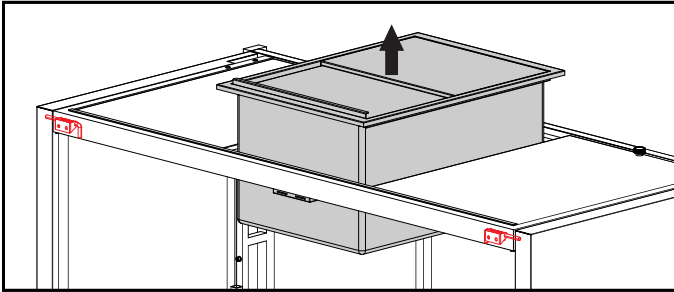


Figure 10

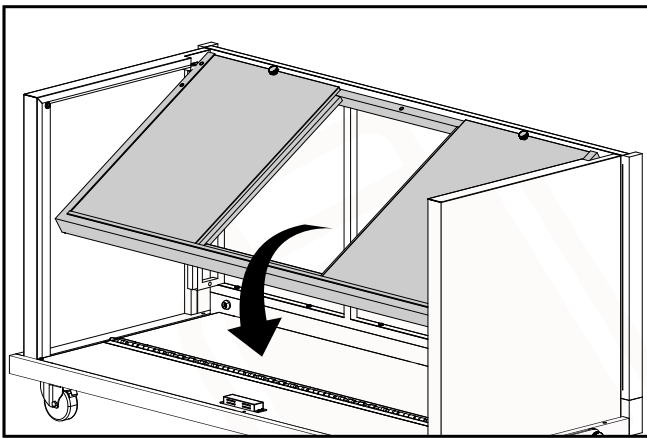


Figure 11

STEP 6: Remove the 4 pins located on side frames, as shown below.

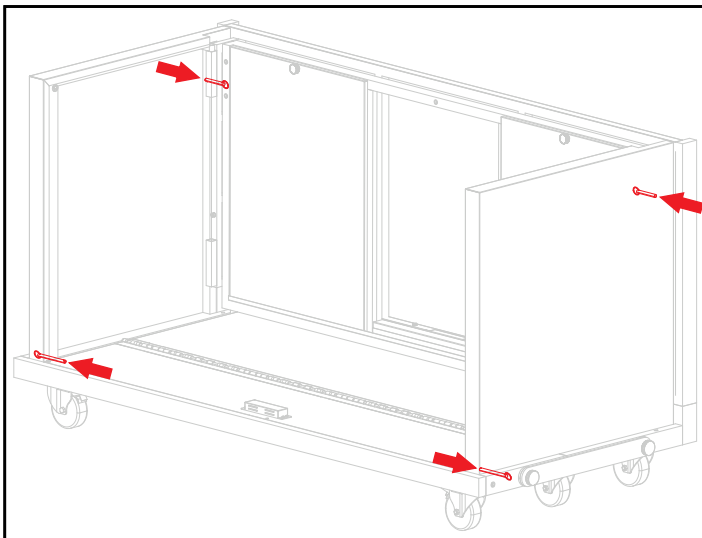


Figure 12

STEP 7: Swing side frames while slightly lifting them.

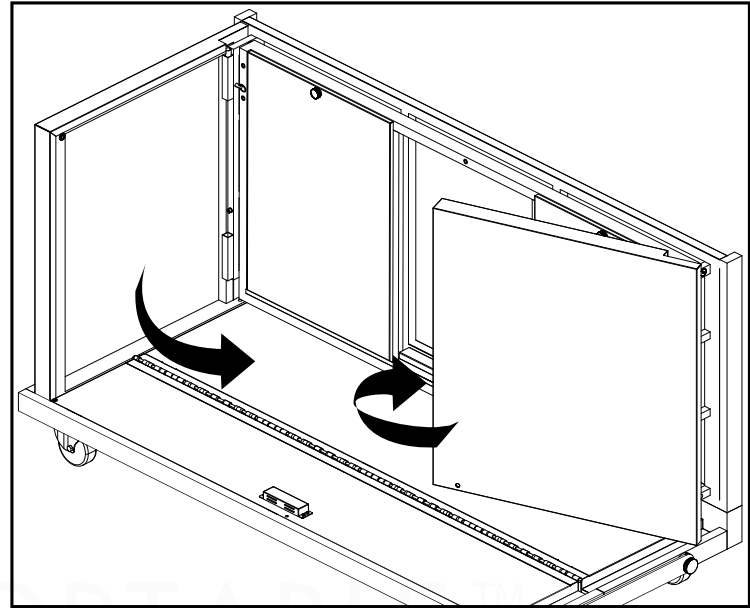


Figure 13

Note: Replace lock pins after swinging side frames.

STEP 8: Unscrew the far back thumbscrew. While you do so, hold the support bar, once the thumbscrew is fully out, the support bar will fall if not supported.

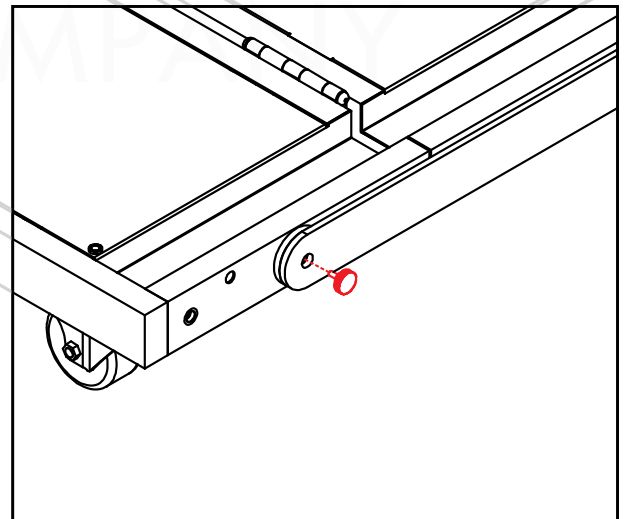


Figure 14

STAINLESS STEEL FOLD + ROLL BACK BAR FOLDING STEPS

9

STEP 9: Move up the base of the frame, hold it in place while screwing the thumbscrews back onto the base. As shown below;

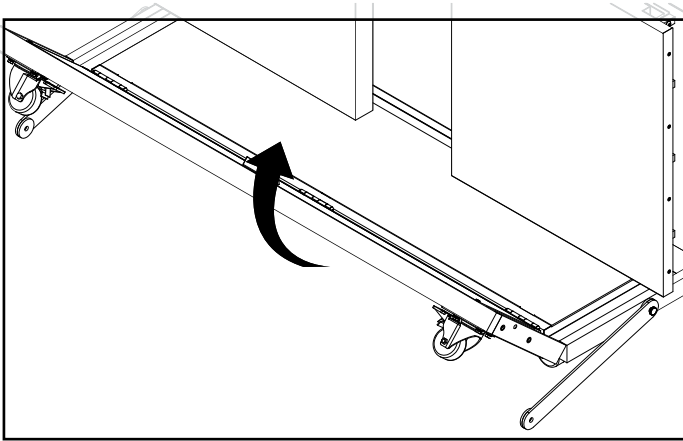


Figure 15

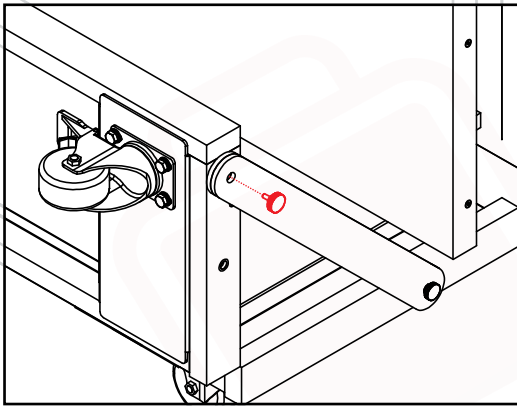


Figure 16

STEP 10: Place upper assembly on the bar's base, as shown;

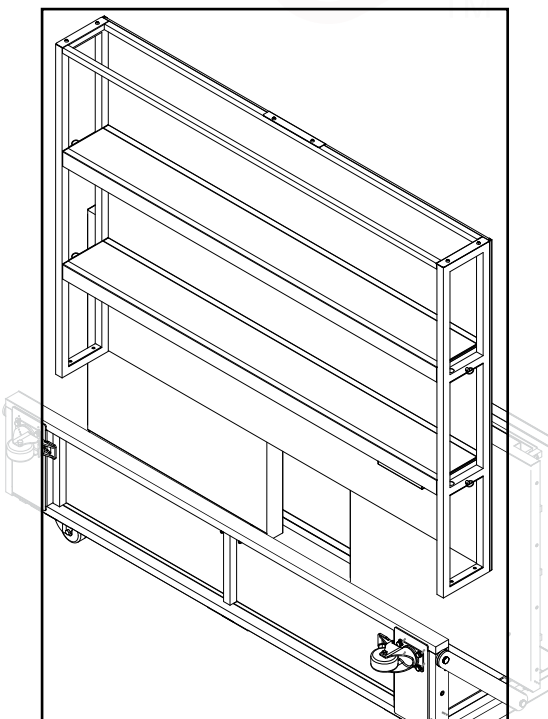


Figure 17

STEP 11: Place doors between upper frame and folded base.


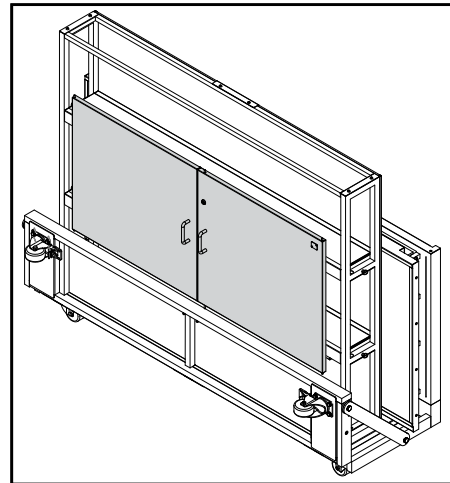


Figure 18

Figure 19. Full Folded Assembly

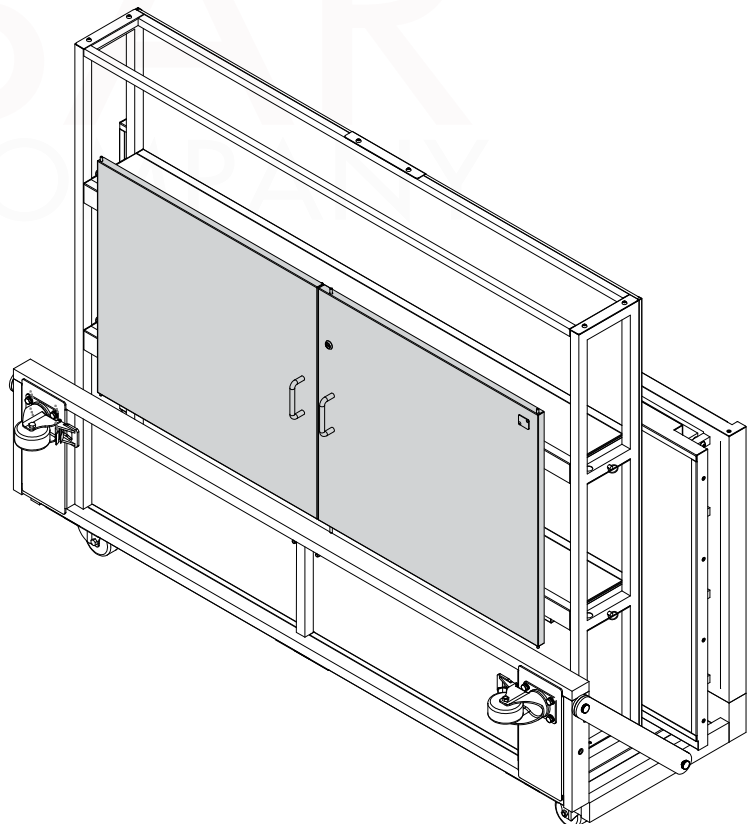

STEP 1: Place battery underneath the bottom shelf on the upper frame, inside casing as shown below:

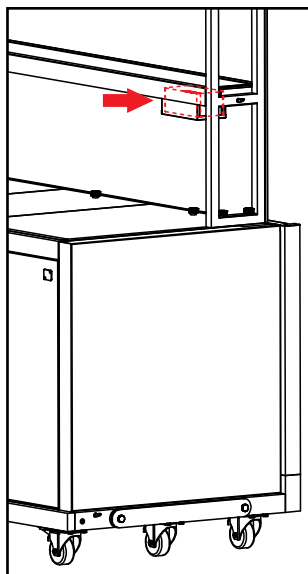


Figure 19

STEP 2: Using the included velcro tape, place the LED Controller as shown below;


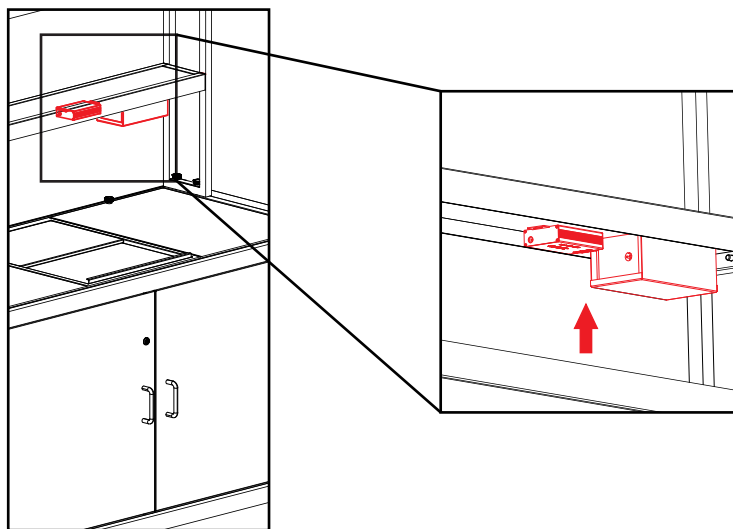


Figure 20


STEP 3: Connect the battery to the controller using the power out battery port to the DC IN controller.

Covers (3)

Upper and Lower covers for Upper Frame and Cabinet:

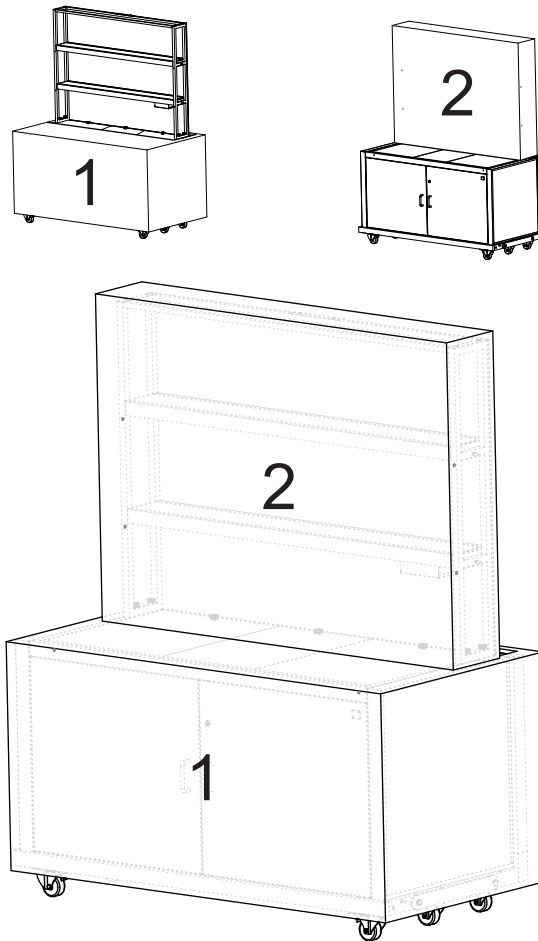

Cover for Folded position

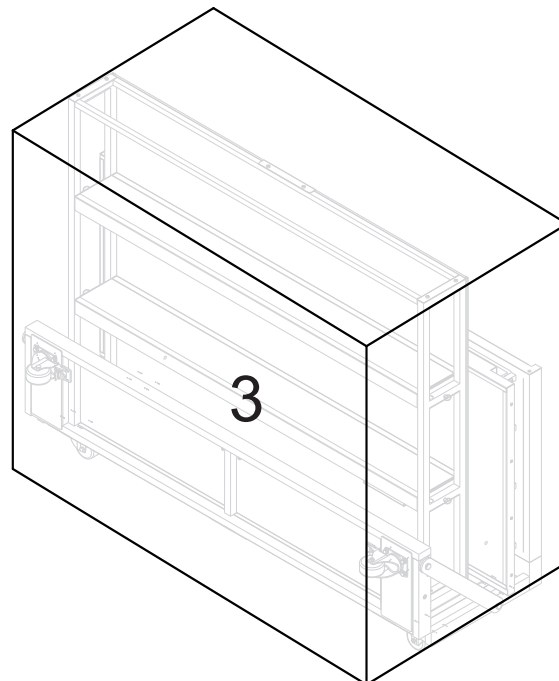



Contact us

Tel # 877-958-7901

Fax # 866-659-3353

E-mail: info@theportablebarcompany.com

Visit us at

www.theportablebarcompany.com

